








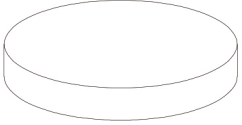



Y101H02 Installation Instructions

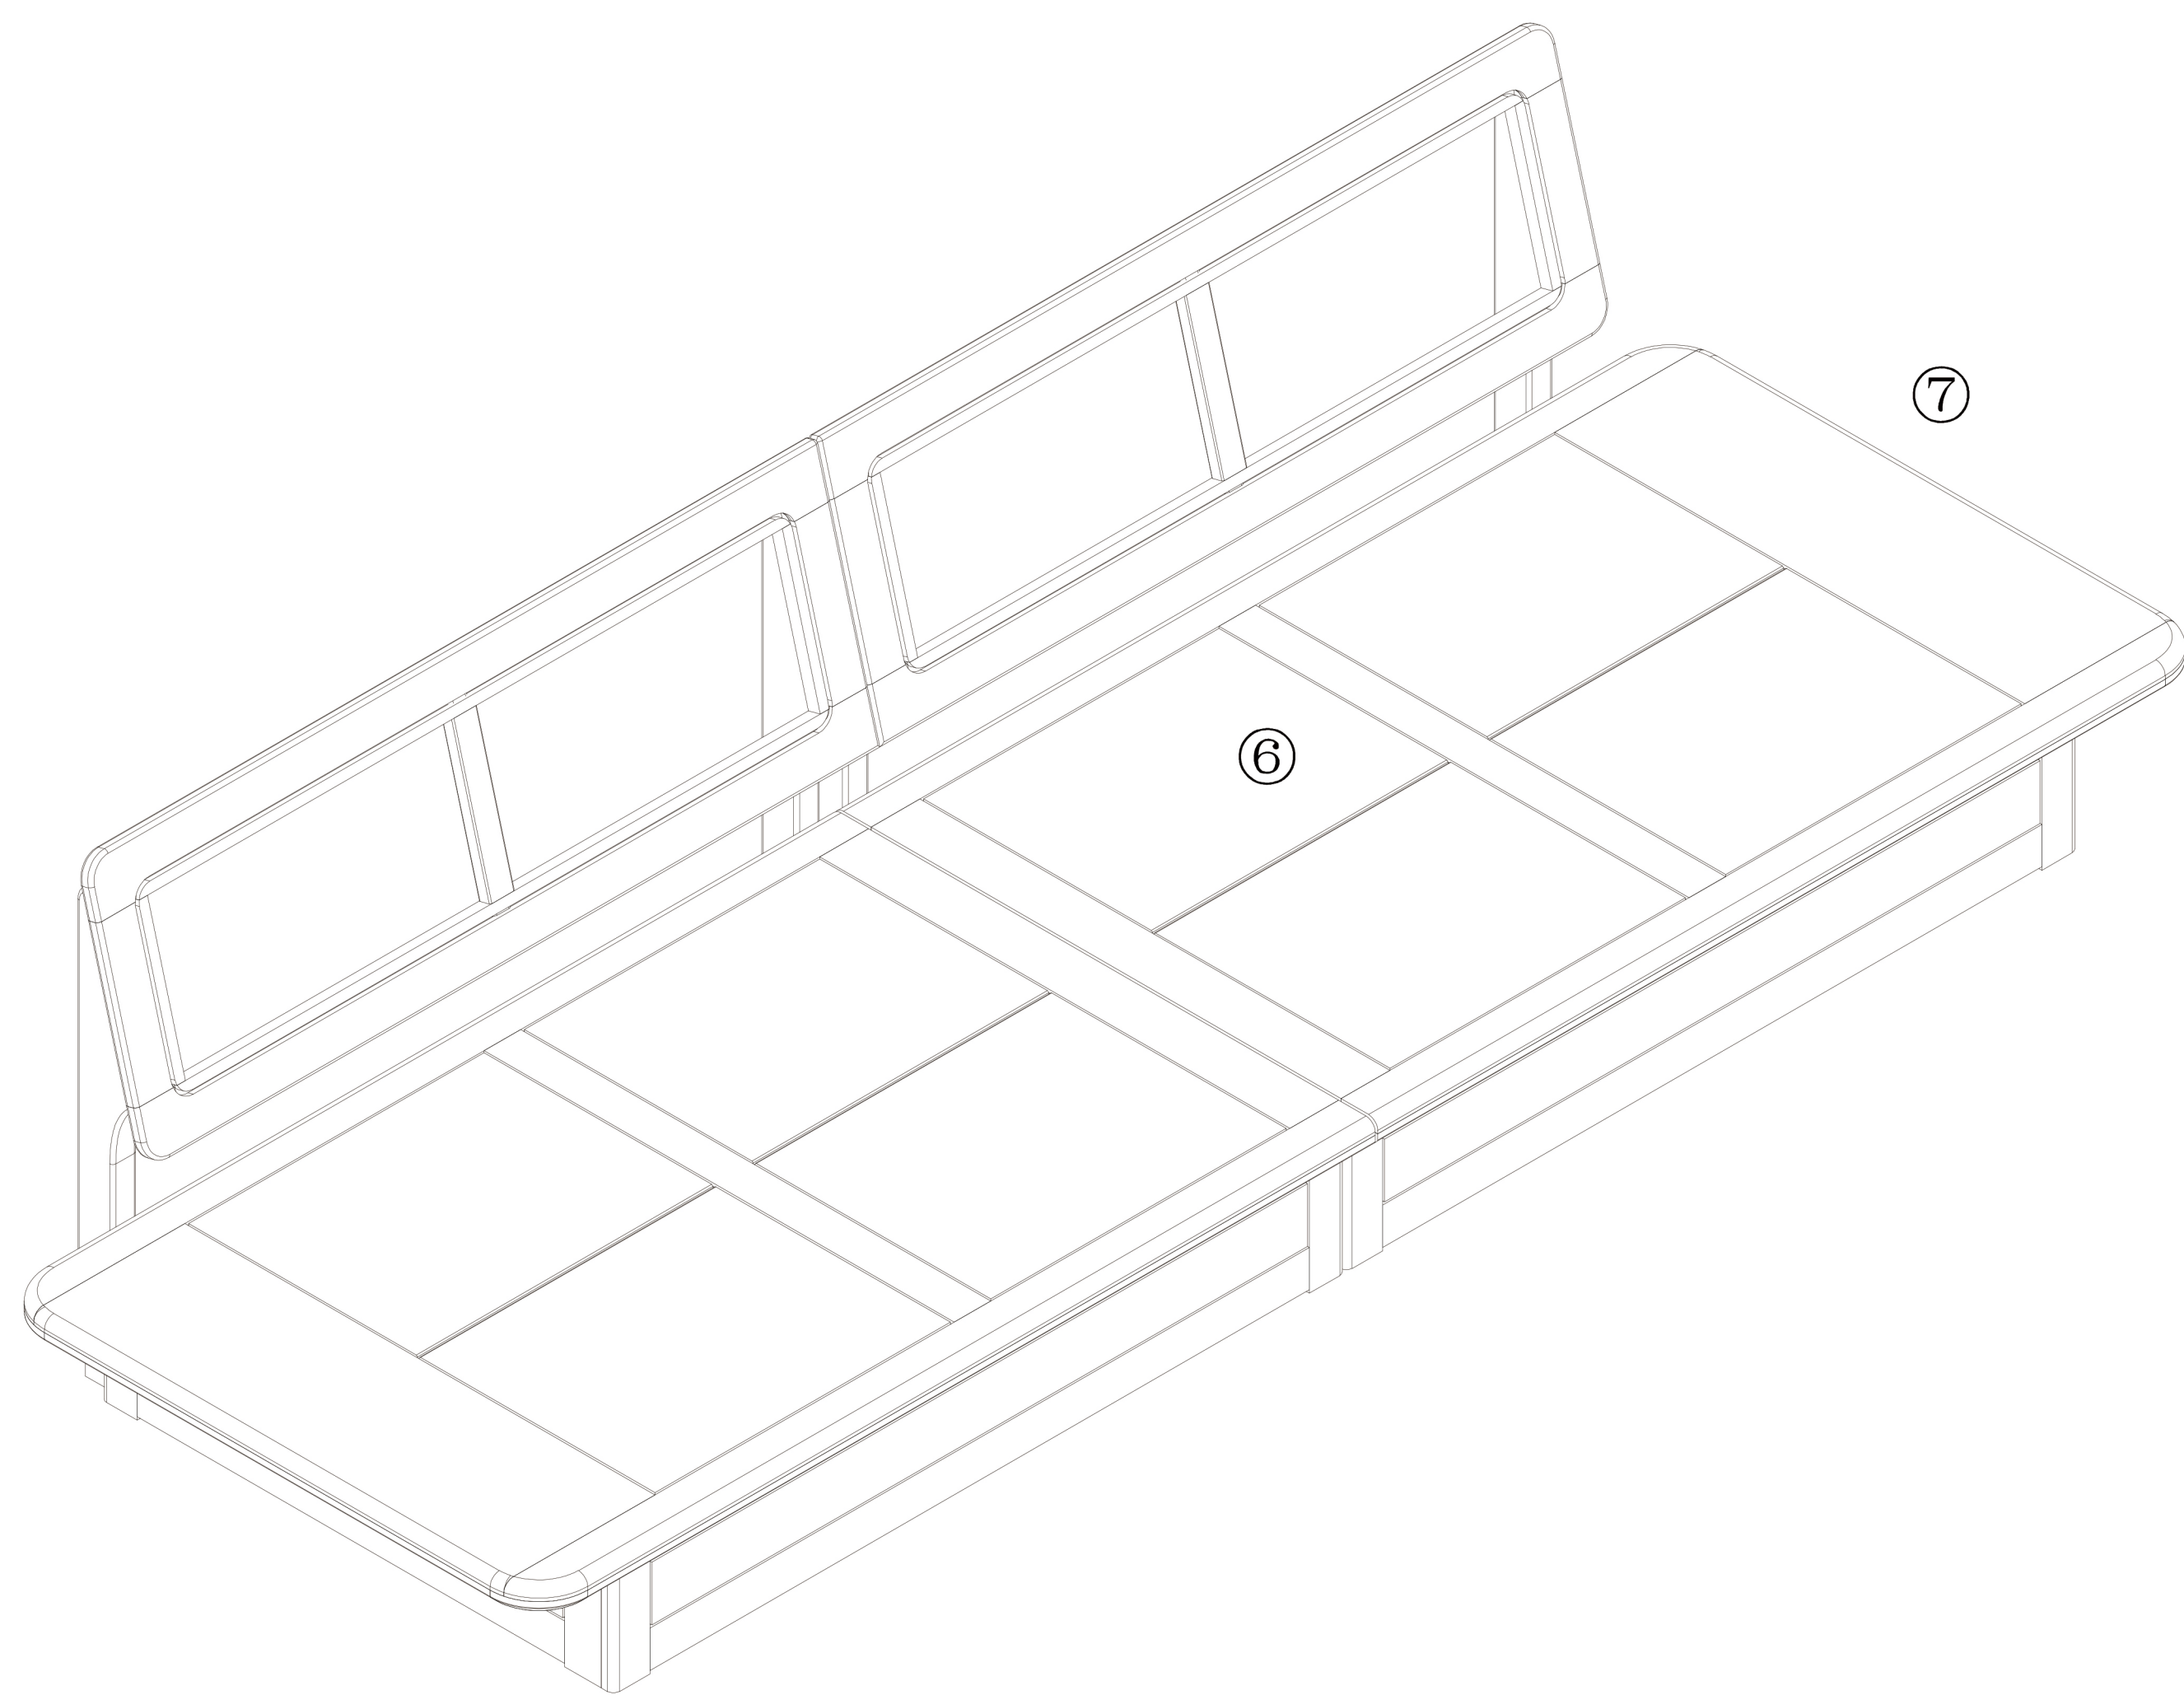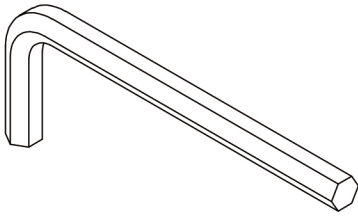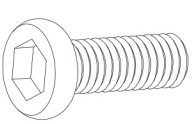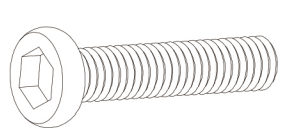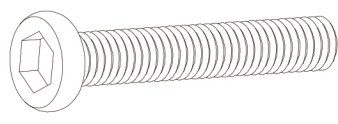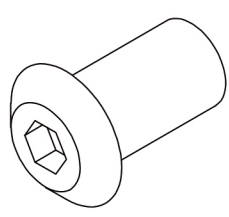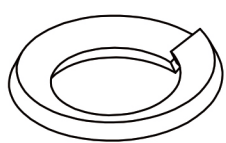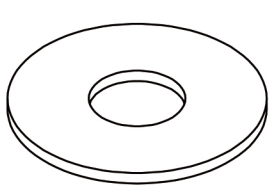

The number of hardware for left and right sofas is placed in one hardware package each
Hardware refills are listed below:


<div><div>A</div></div>	<div><div>B</div></div>	<div><div>C</div></div>	<div><div>D</div></div>	<div><div>E</div></div>	<div><div>F</div></div>
Allen M5=1	Screw M8*20=1	Screw M8*35=12	Screw M8*60=4	Cleat Nut M8*20=1	M8 Springboard=17
<div><div>G</div></div>	<div><div>H</div></div>	<div><div>I</div></div>	<div><div>J</div></div>	<div><div>K</div></div>	
M8 Gasket=17	Self-tapping wire M4*20=8	Round Silent Felt Pads =3			

Part Schematic:

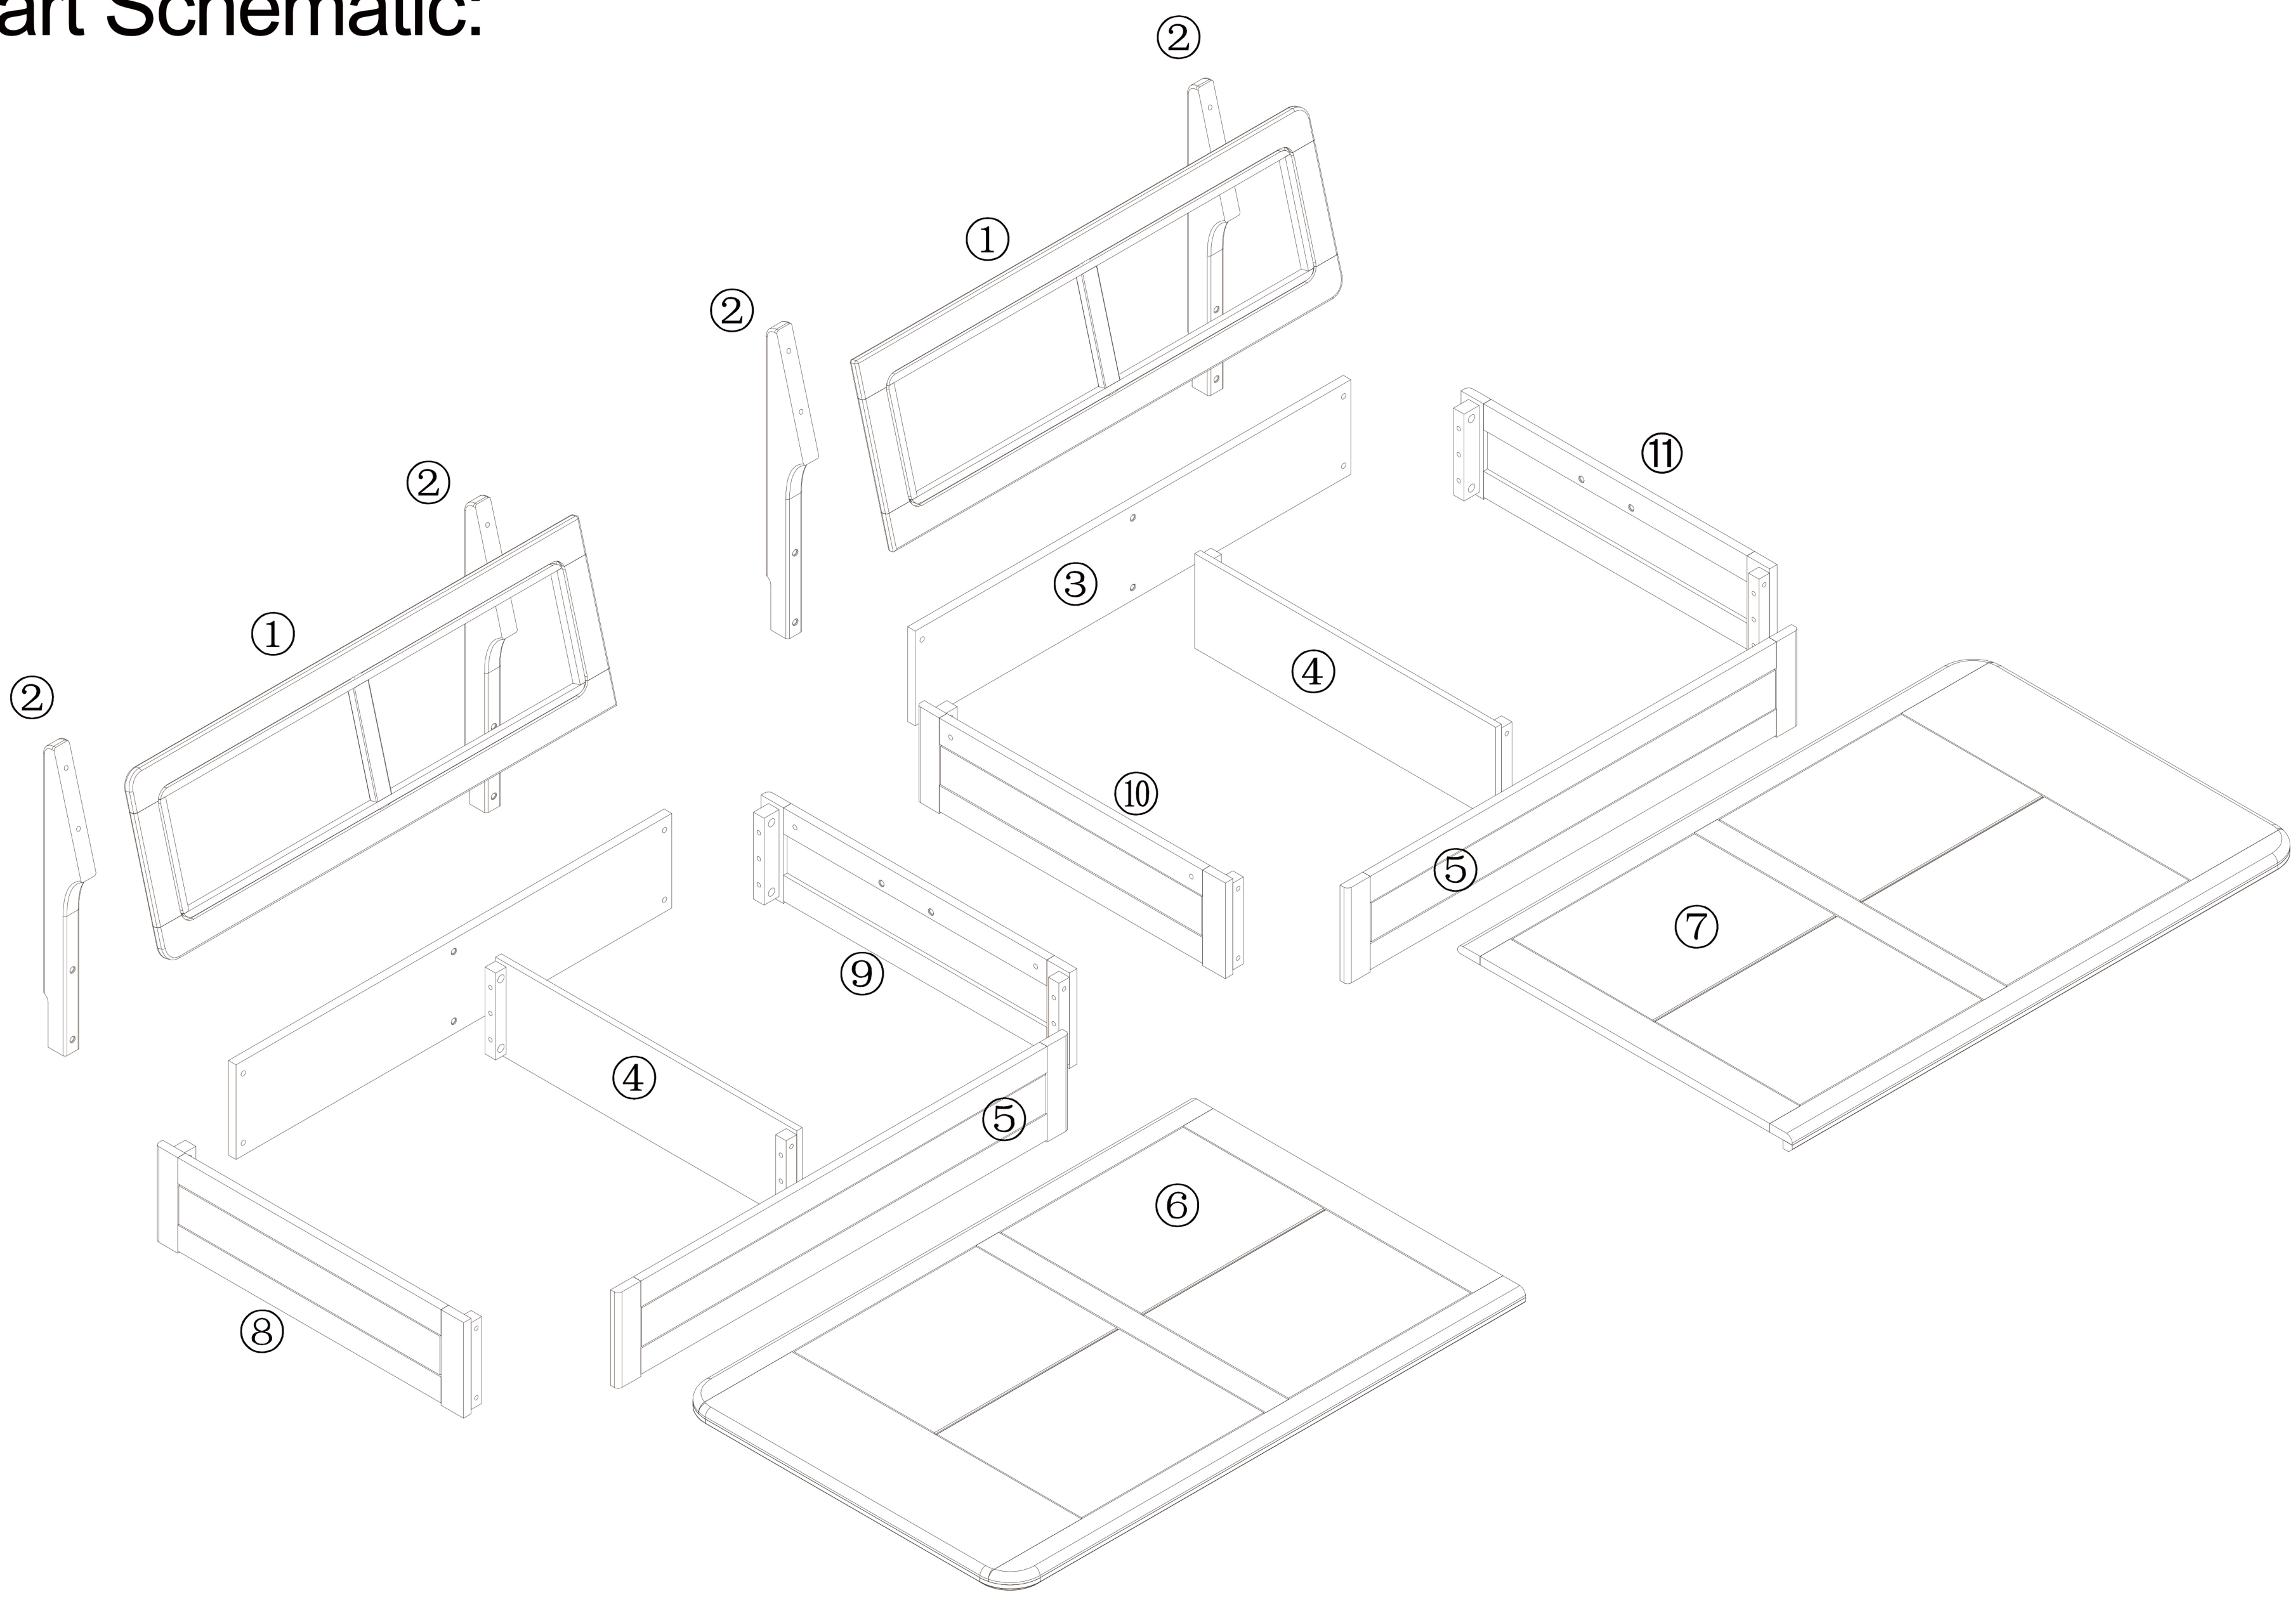


Assembly sequence


Step 1: Link parts ⑨,④ , and ⑧ to part ⑤ in turn with screws

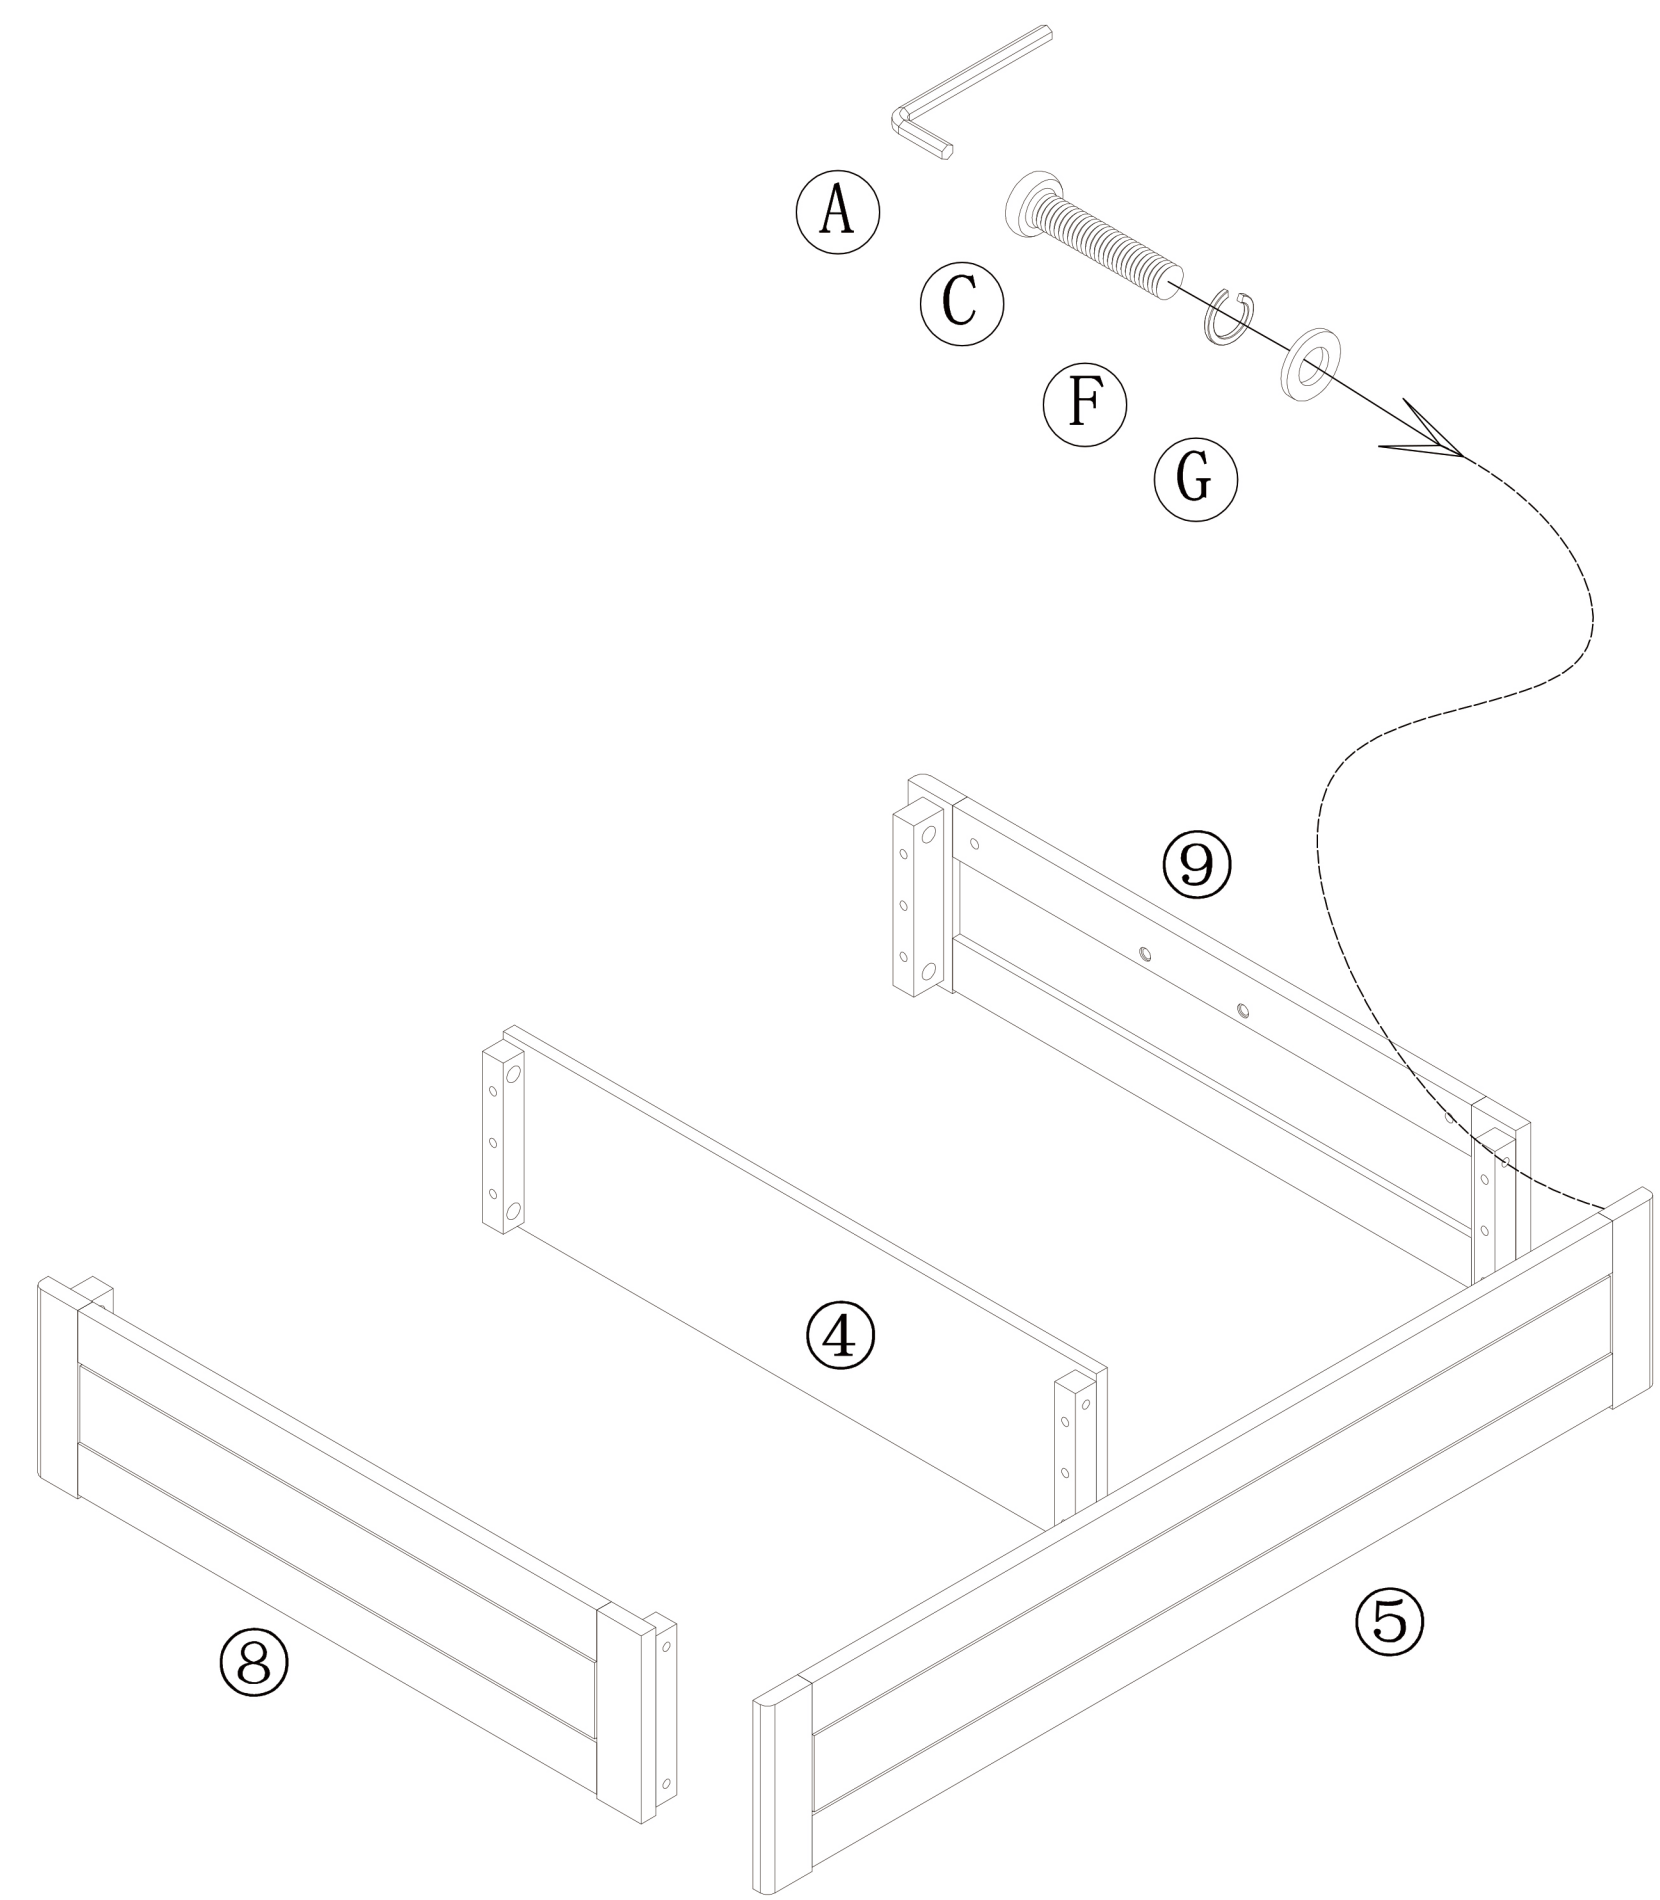


Step 2, link the part 2 to the part 1 with screws according to the illustration, and after the linking is completed, stick the felt(I) evenly to the back of the shelving board to reduce the risk of damaging the wall paint by friction or movement between the sofa and the wall.

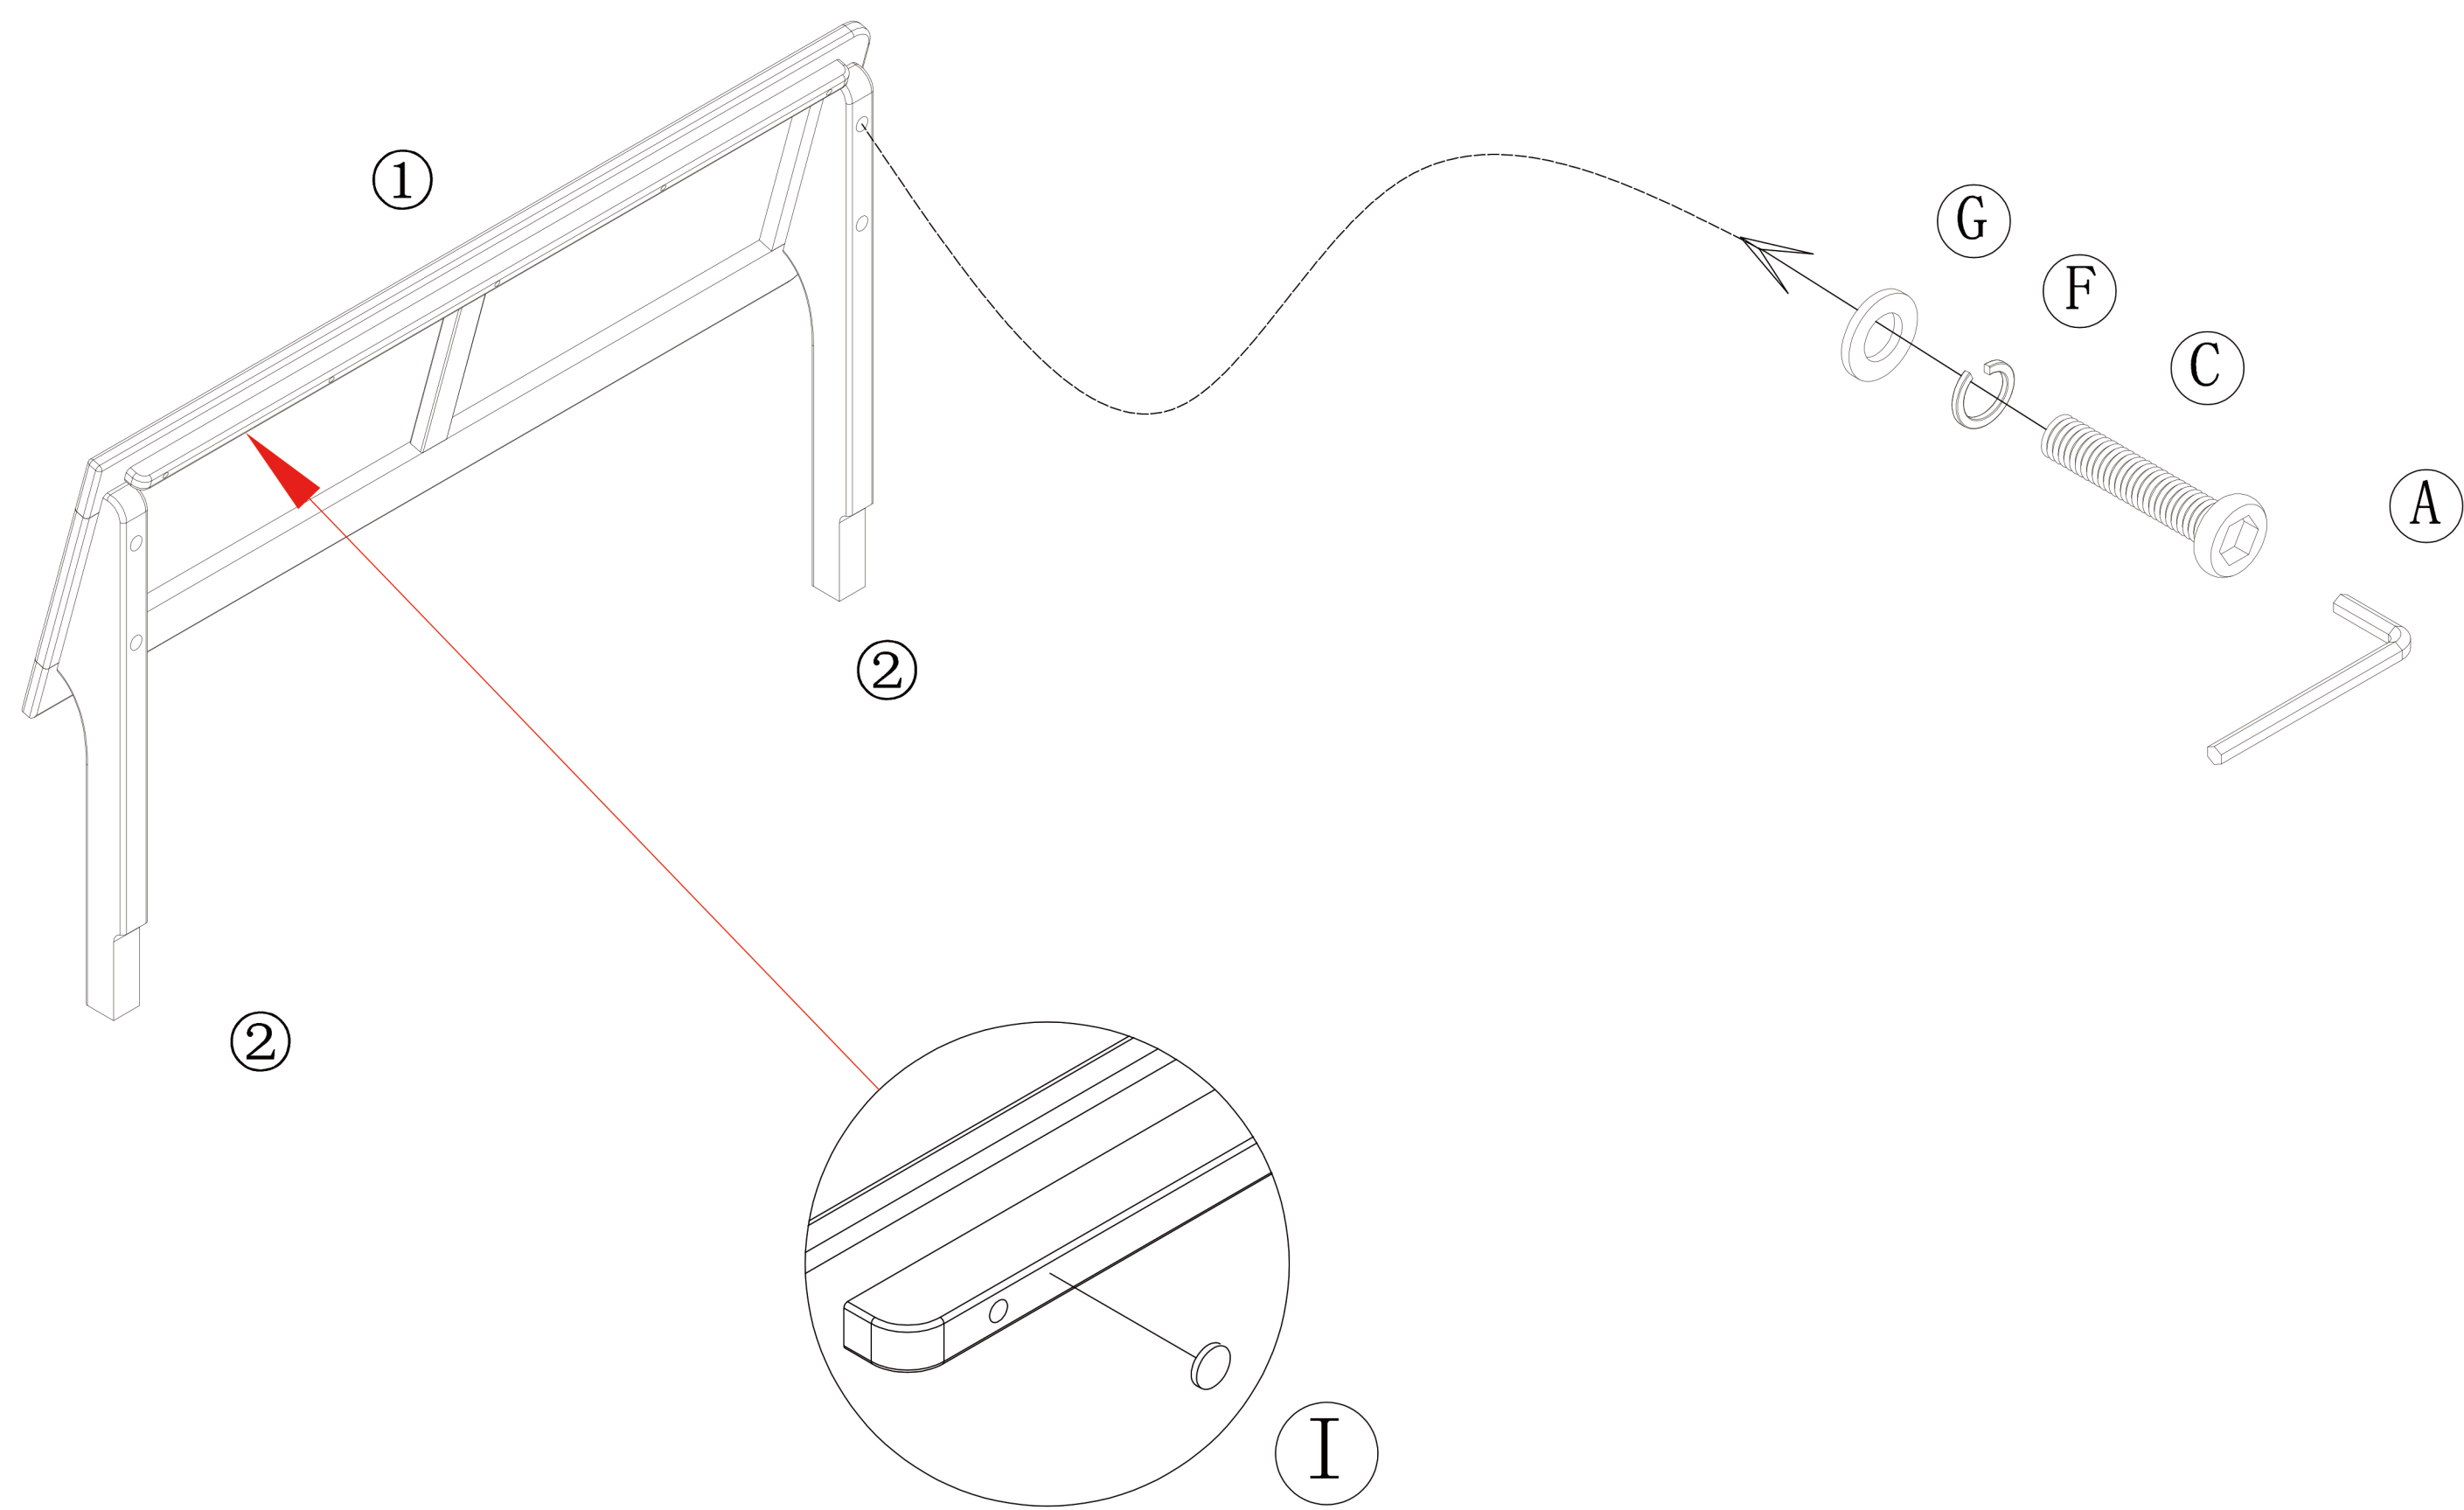

Step 3: Link parts ⑧, ④, and ⑨ to parts ③ and ② with screws according to the illustration, and lock the two side screws through the back plate to the rear legs.

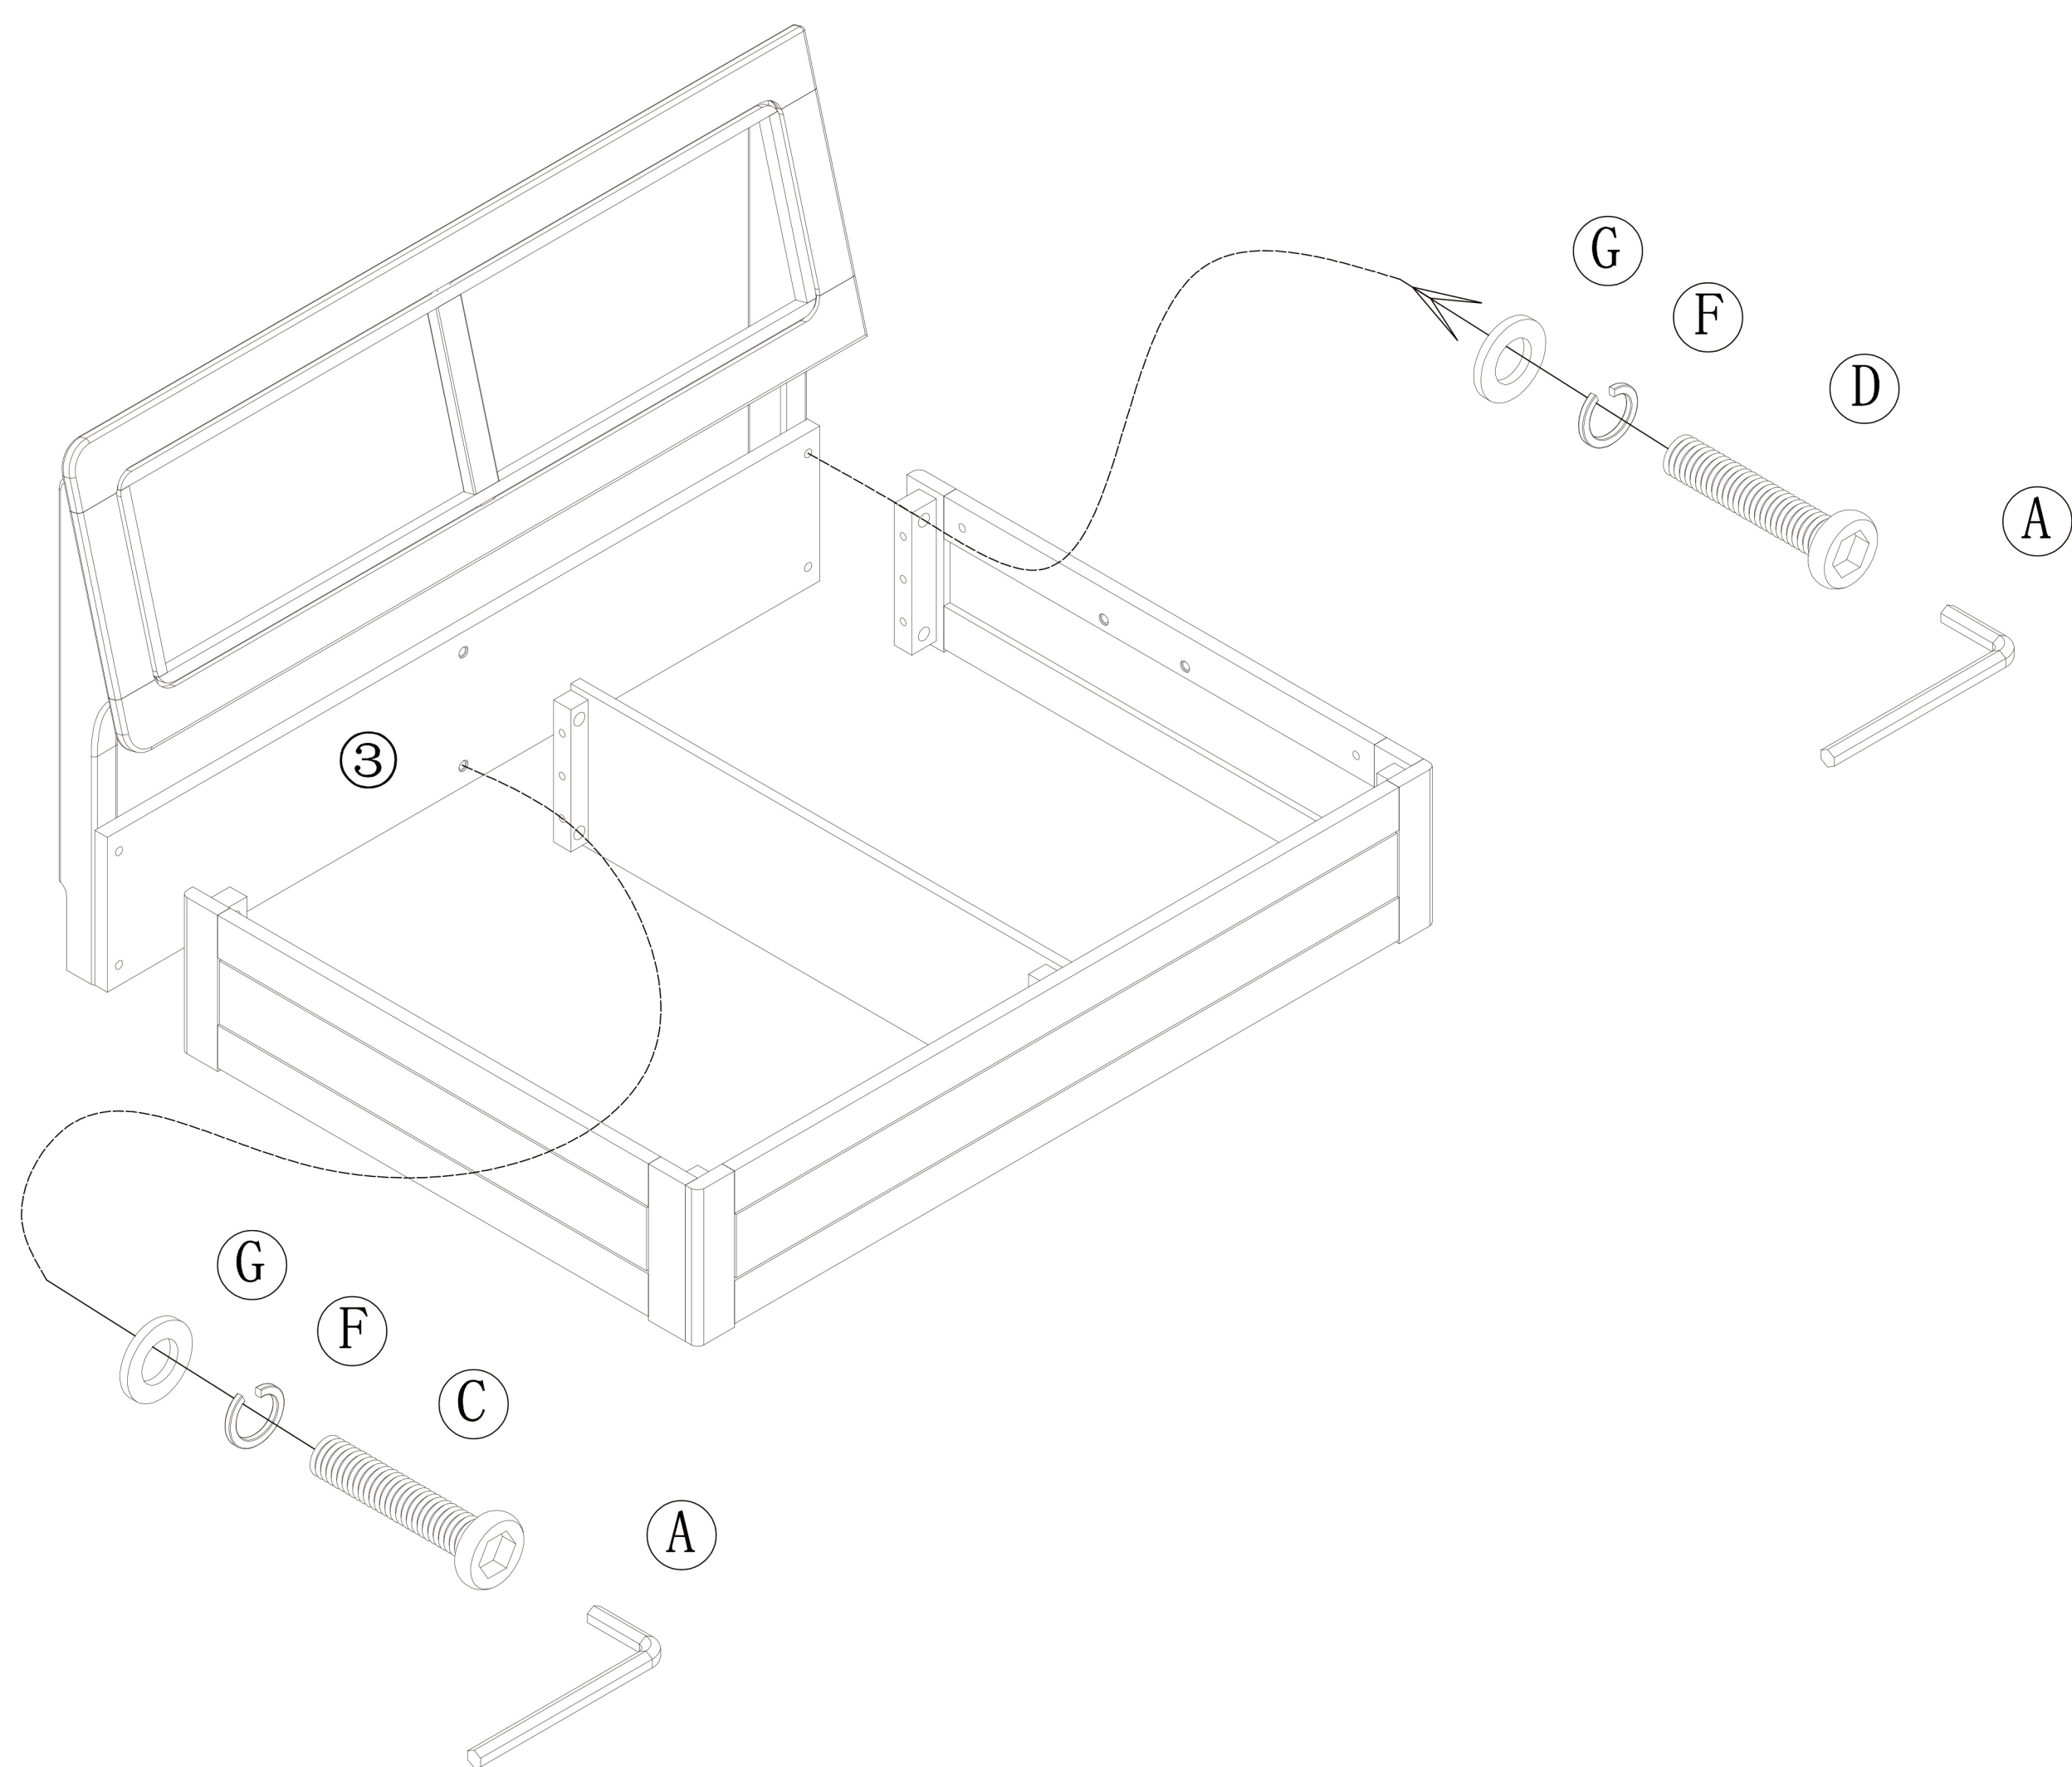

Step 4: Install the right sofa in the same way, and link the left and right sofas together with screws once assembly is complete.

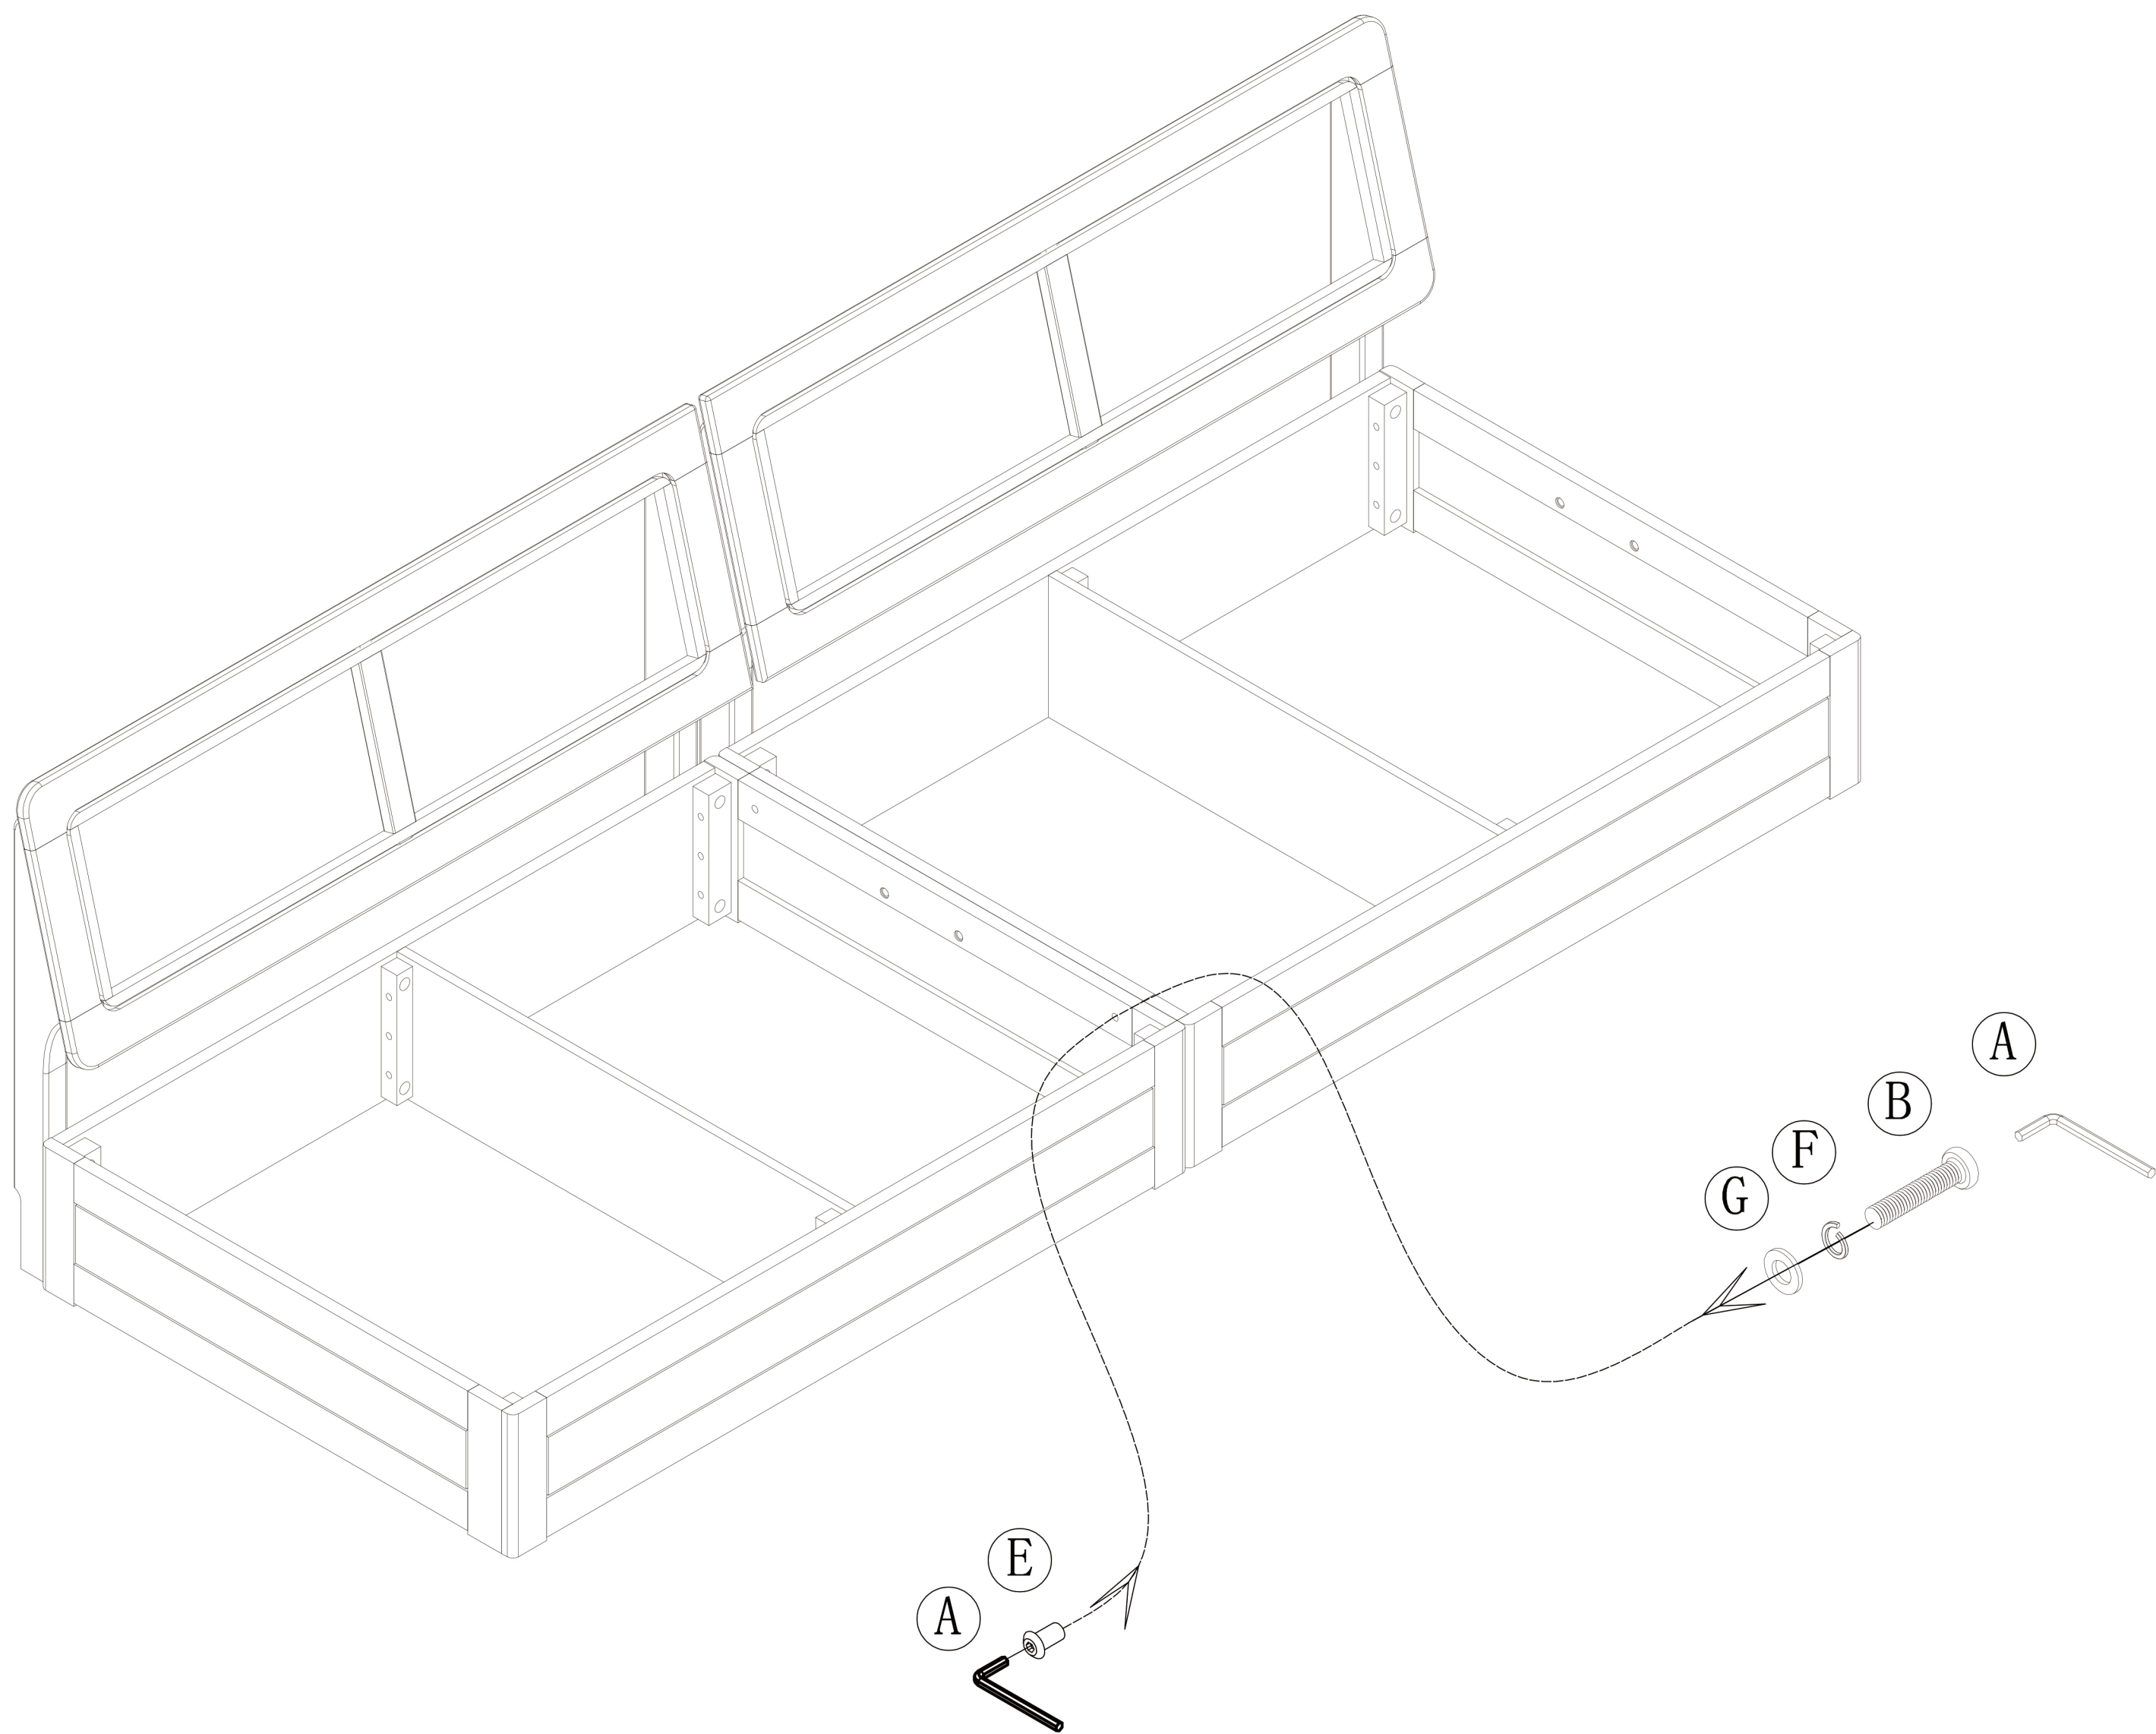

Step 5: Assemble the seat plate and lifter links according to the guide holes under the seat plate as shown.

