


## HEADBOARD SET ASSEMBLY INSTRUCTION (TOTAL 1 BOX)

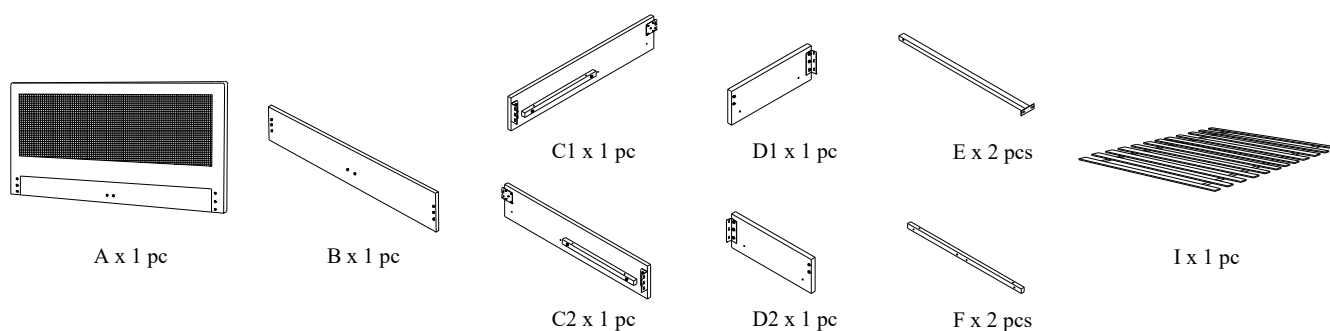


Please read over the instructions, it will be a time-saver in the long run.


Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

Please leave bolts loosened until all bolts are placed before tightening completely.


Part#	Picture	Description	QTY	Location	Part#	Picture	Description	QTY	Location
H		Center leg	1	Embossed film wrap	U		Spring Washer Ø8	12	Hardware Pack
K		Legs	4	Embossed film wrap				8	Already in Place
M		Bolt Ø6x30mm	12	Already in Place	V		Flat Washer Ø8x25mm	12	Hardware Pack
N		Bolt Ø8x30mm	8	Already in Place				8	Already in Place
O		Bolt Ø8x60mm	8	Hardware Pack	W		Spring Washer Ø6	12	Already in Place
P		Bolt Ø8x70mm	2	Hardware Pack	X		Flat Washer Ø6x25mm	12	Already in Place
Q		"L" Wrenches Ø4	1	Hardware Pack	ZA		Spanner Ø14	1	Hardware Pack
R		"L" Wrenches Ø5	1	Hardware Pack	ZC		Screws 4x30mm	24	Hardware Pack
S		Nut Ø8	2	Hardware Pack					

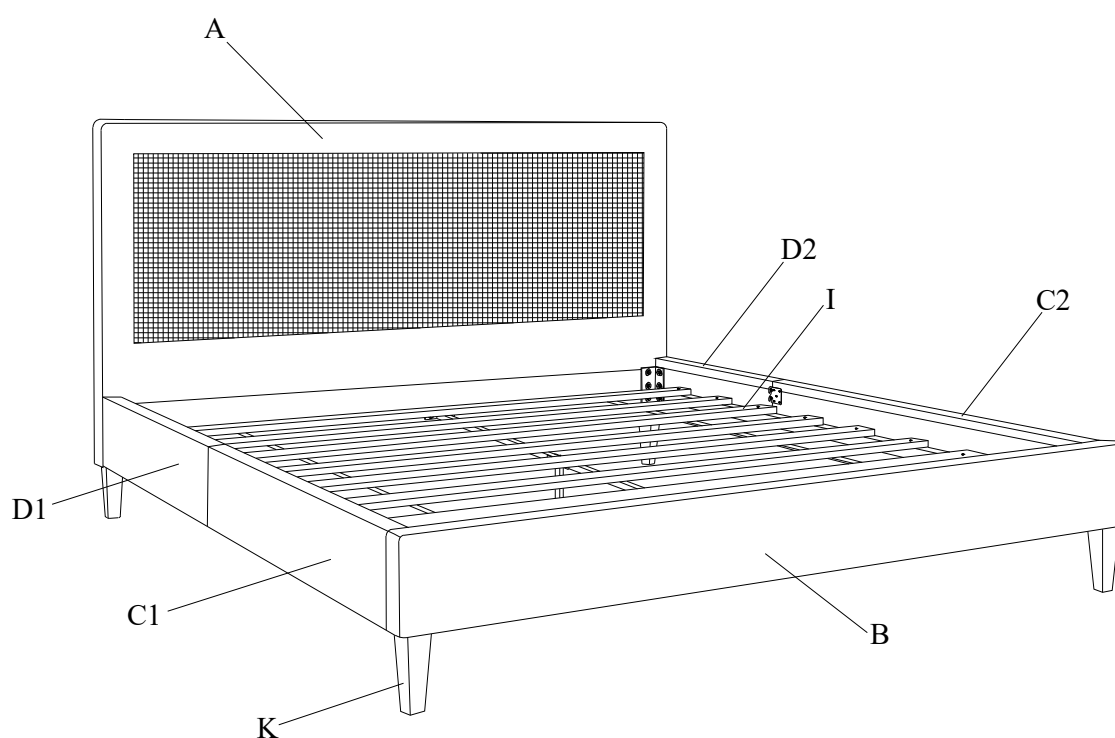


1

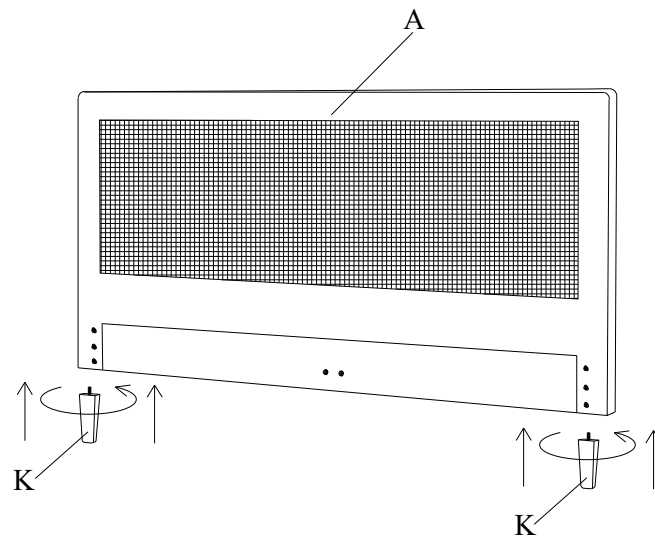



2

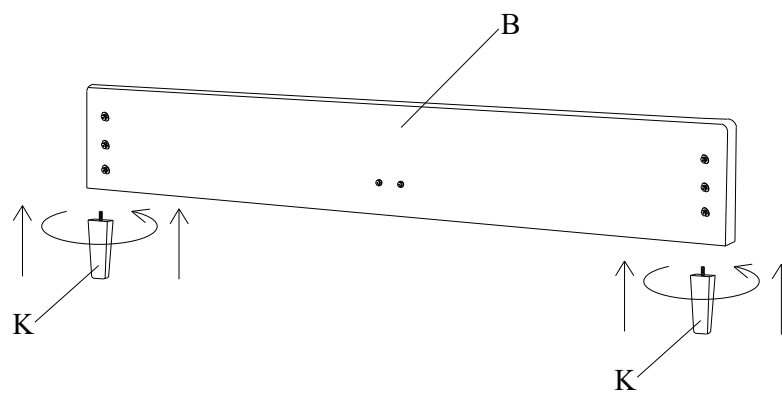




3

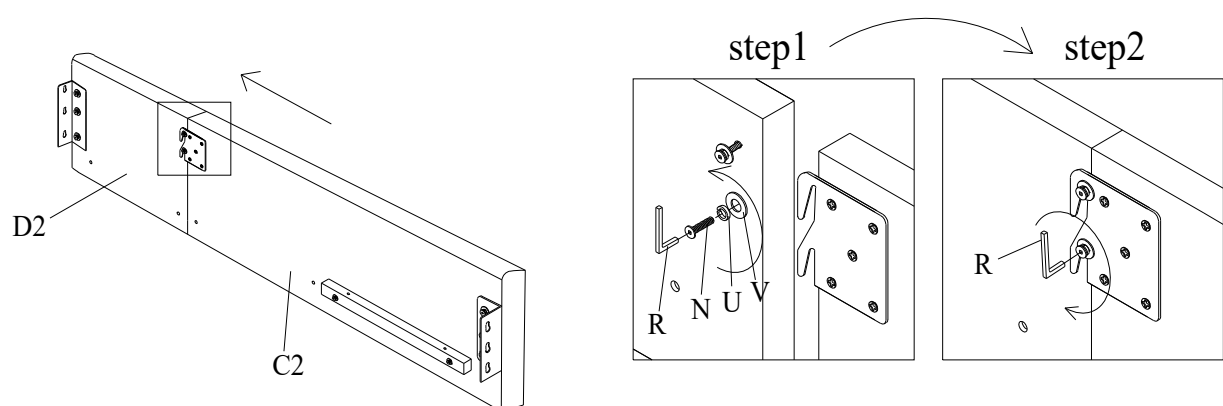


4

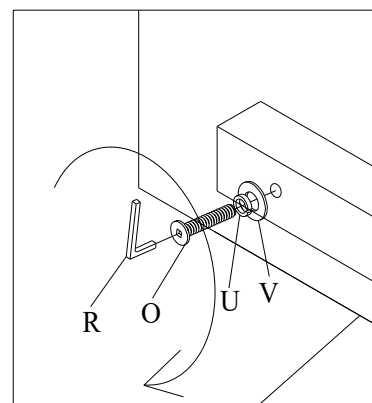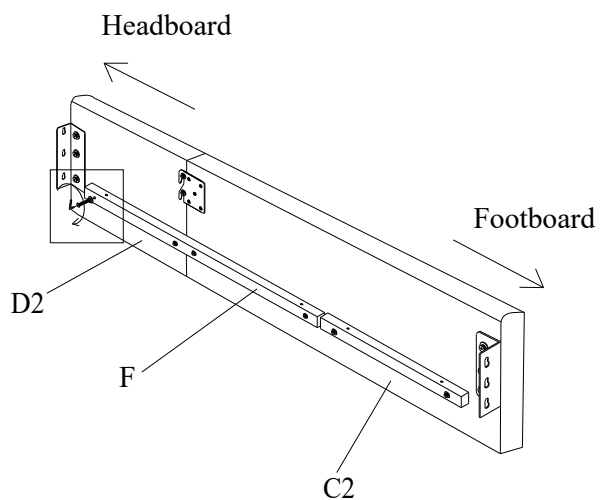



5

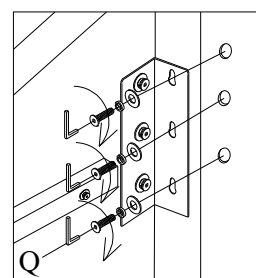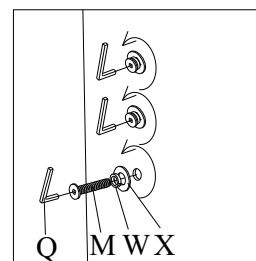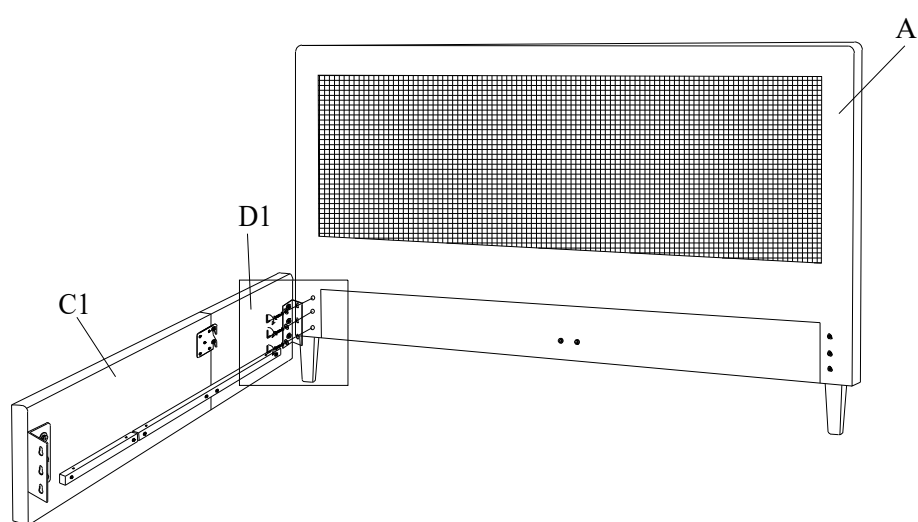


6

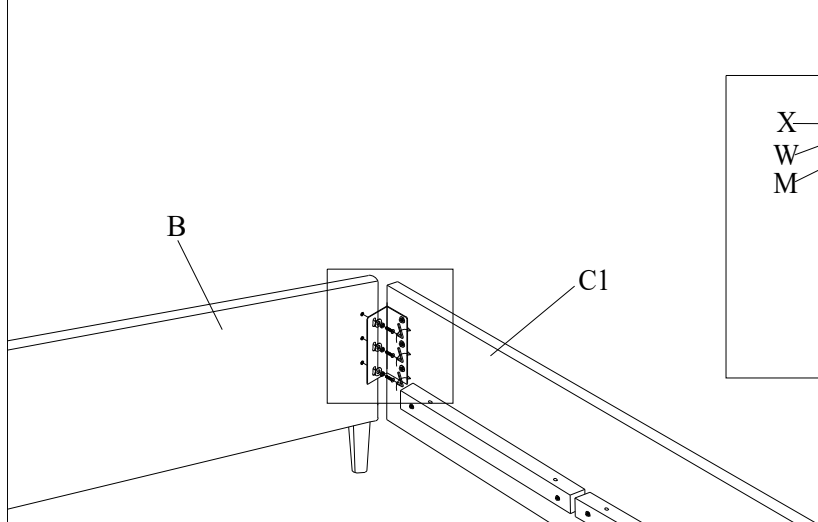


step1 → step2

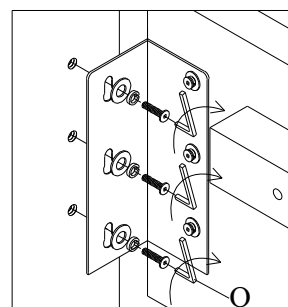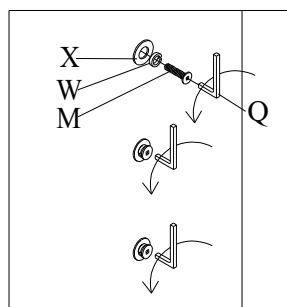

7

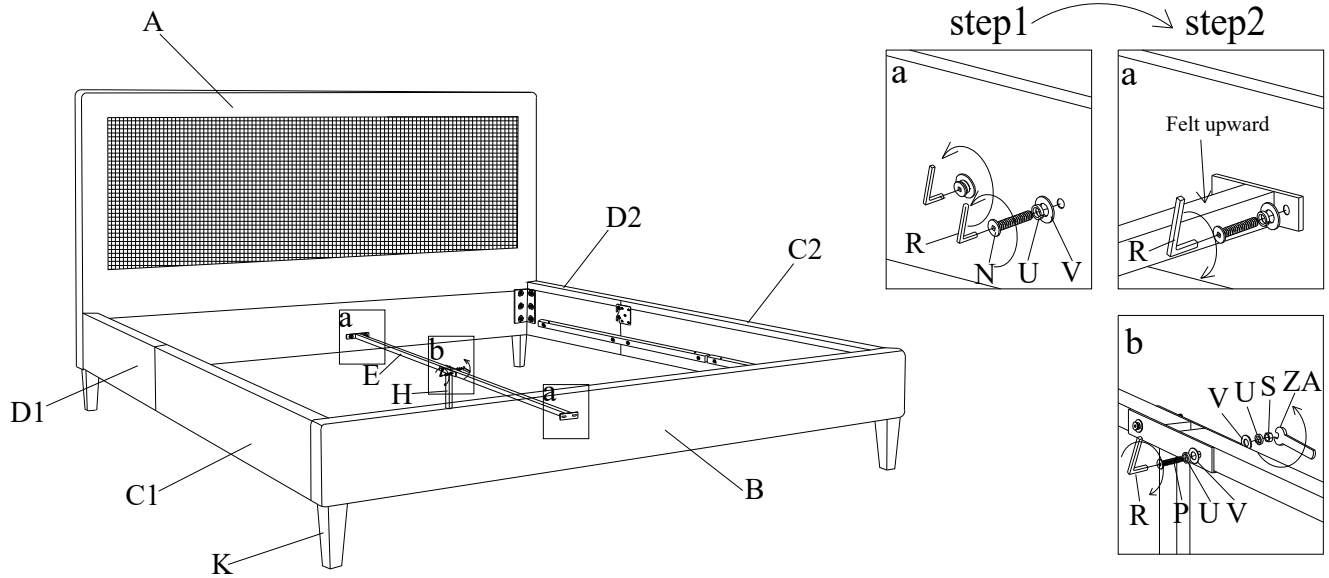

8

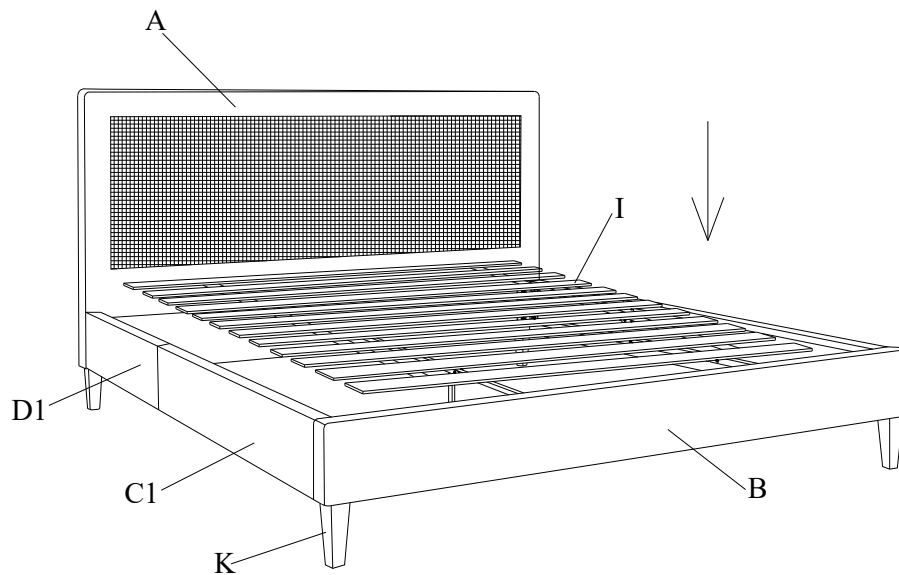

9

