




## HEADBOARD SET ASSEMBLY INSTRUCTION (TOTAL 1 BOX)

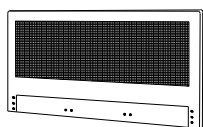


A x 1 pc

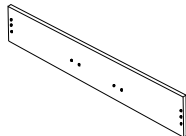

B x 1 pc

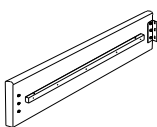


C1 x 1 pc

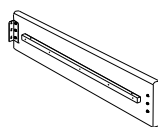

C2 x 1 pc



E x 4 pcs




I x 1 pc




Please read over the instructions, it will be a time-saver in the long run.

Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.


Please leave bolts loosened until all bolts are placed before tightening completely.

Part#	Picture	Description	QTY	Location	Part#	Picture	Description	QTY	Location
H		Center leg	2	Embossed film wrap	U		Spring Washer Ø8	8	Hardware Pack
K		Legs	4	Embossed film wrap				8	Already in Place
J		CP2-4	2	Embossed film wrap	V		Flat Washer Ø8x25mm	8	Hardware Pack
M		Bolt Ø6x30mm	18	Already in Place				8	Already in Place
N		Bolt Ø8x30mm	8	Already in Place	W		Spring Washer Ø6	18	Already in Place
P		Bolt Ø8x70mm	4	Hardware Pack	X		Flat Washer Ø6x25mm	18	Already in Place
Q		"L" Wrenches Ø4	1	Hardware Pack	ZA		Spanner Ø14	1	Hardware Pack
R		"L" Wrenches Ø5	1	Hardware Pack	ZC		Screws 4x30mm	24	Hardware Pack
S		Nut Ø8	4	Hardware Pack					

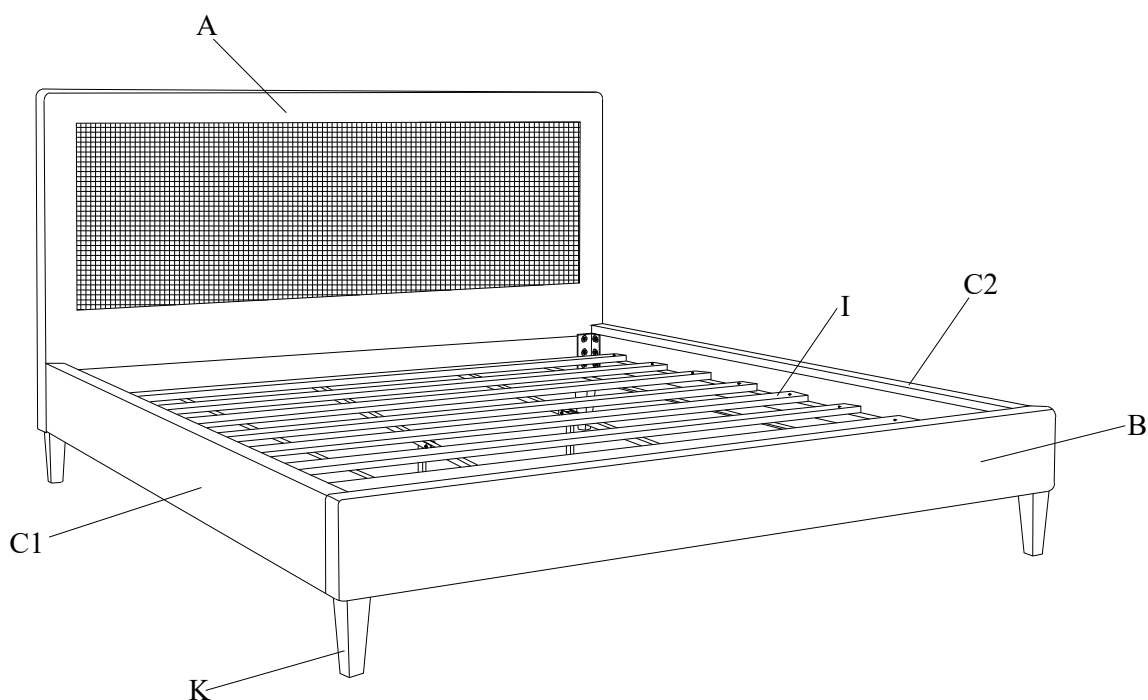


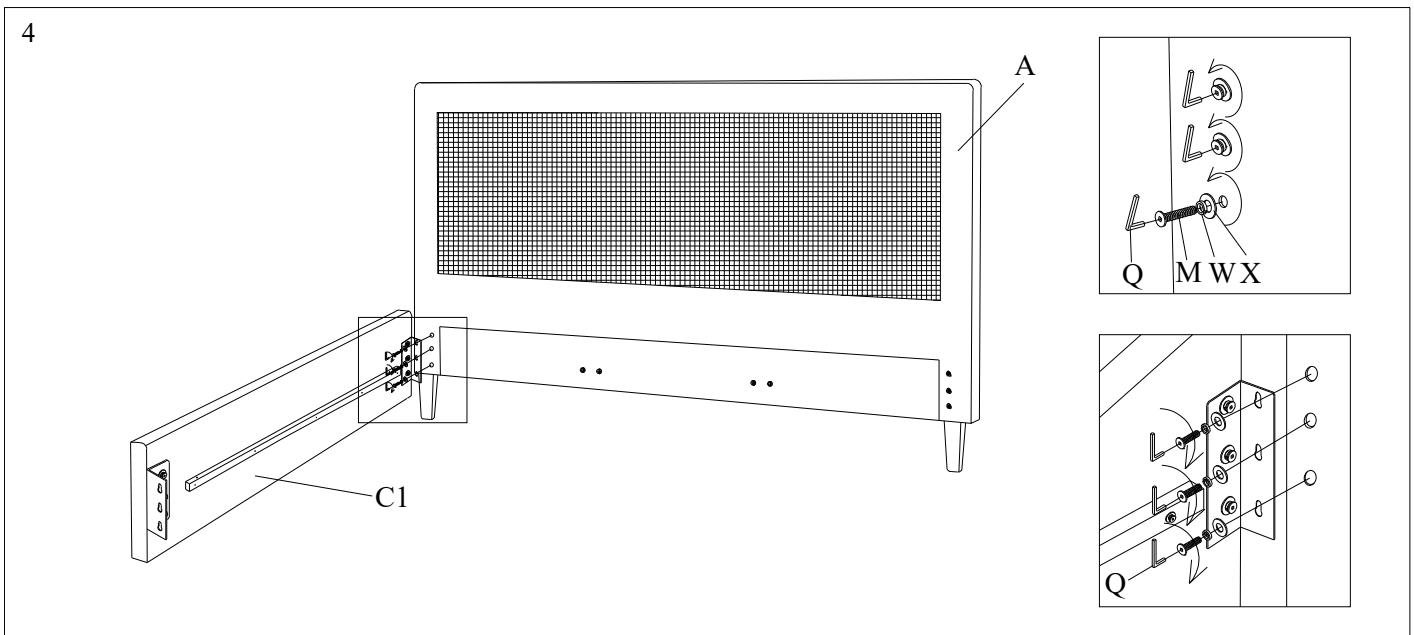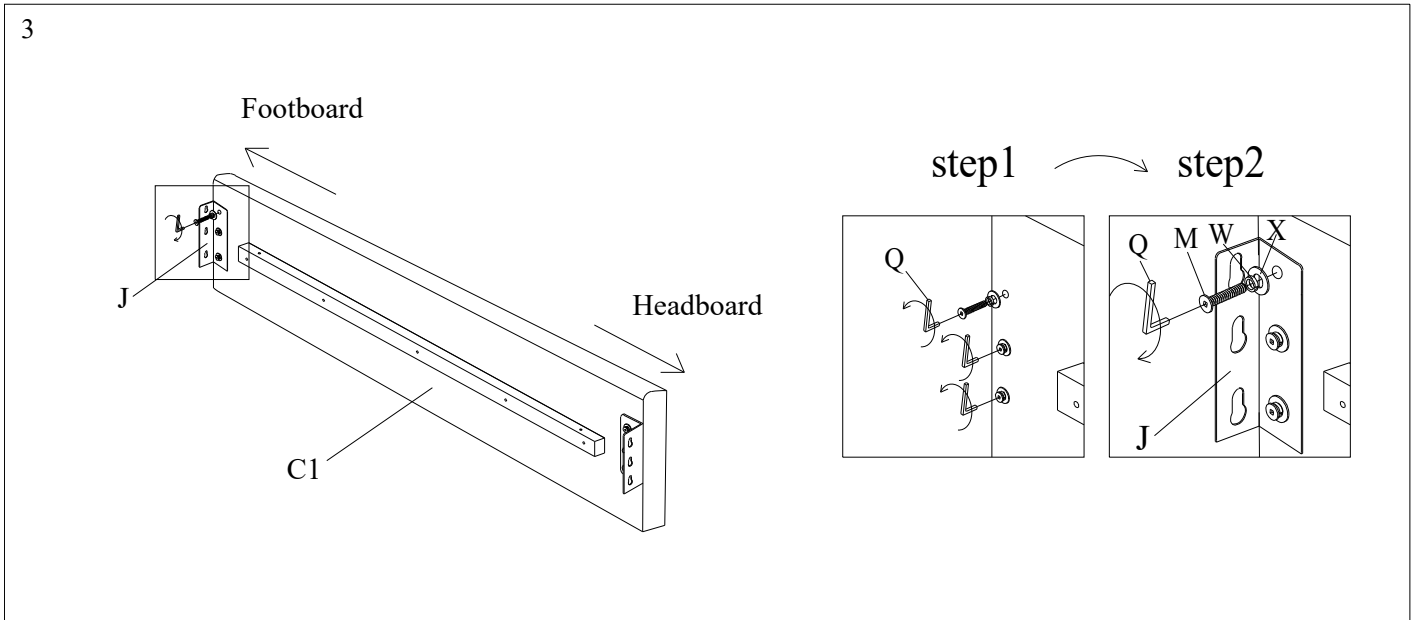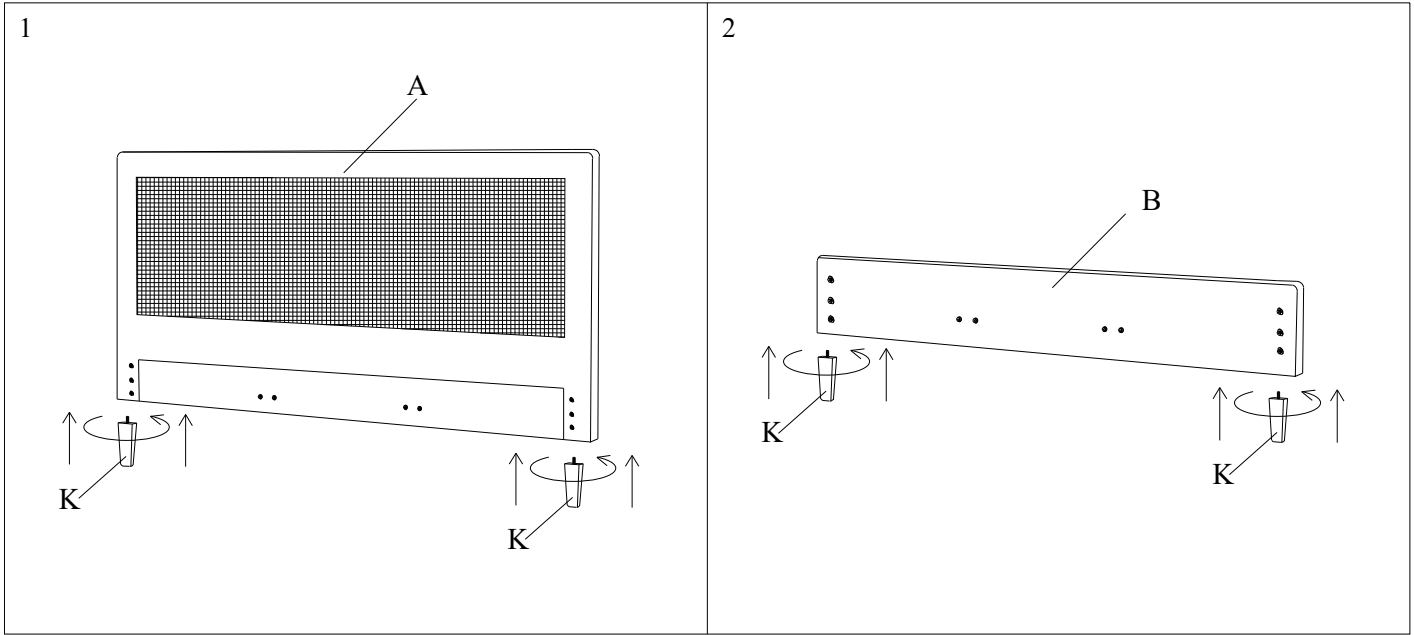

5

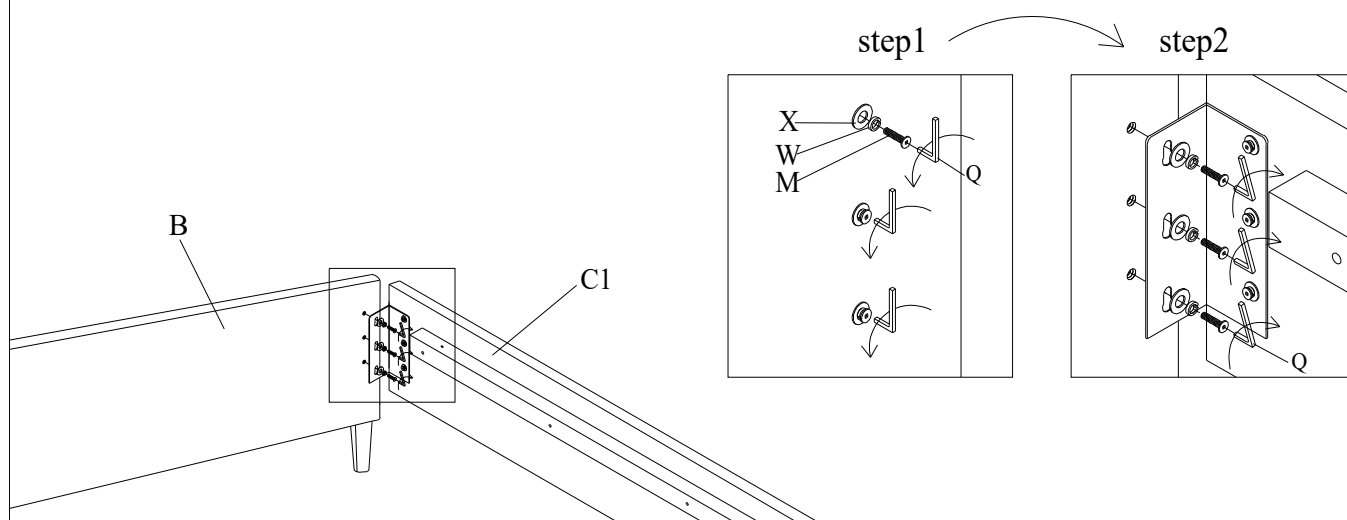

6

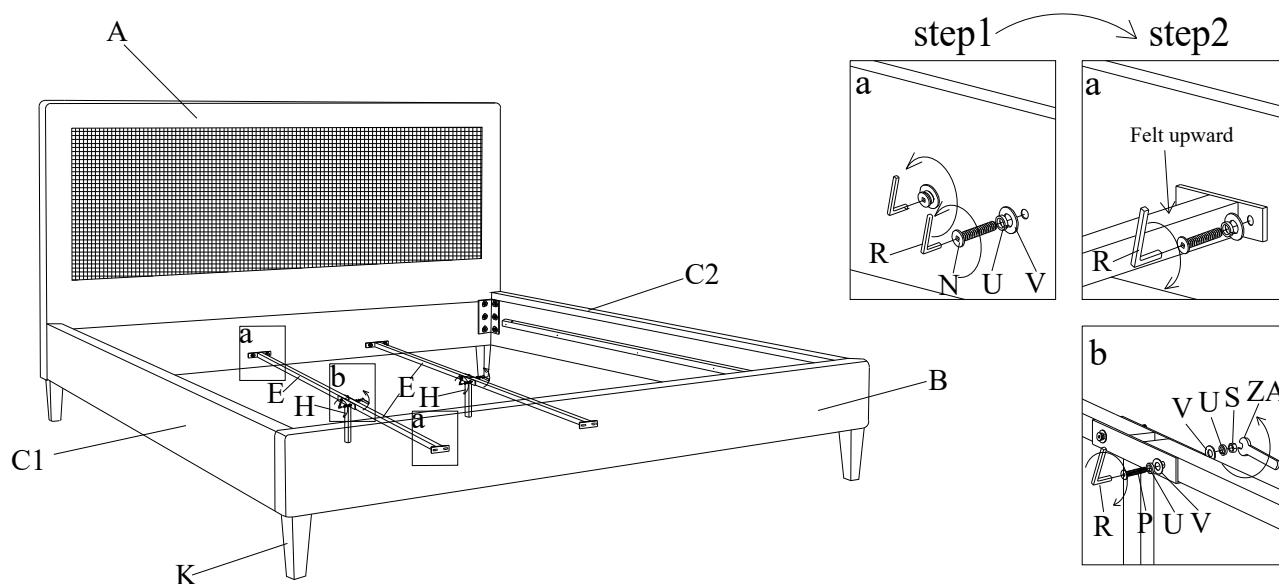

7

