




HEADBOARD SET ASSEMBLY INSTRUCTION (TOTAL 1 BOX)

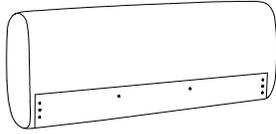


A x 1 pc

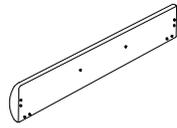

B x 1 pc



C x 2 pcs



D x 2 pcs



E x 1 pc



F x 2 pcs




G x 2 pcs





Please read over the instructions, it will be a time-saver in the long run.




Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

Please leave bolts loosened until all bolts are placed before tightening completely.




Part#	Picture	Description	QTY	Location	Part#	Picture	Description	QTY	Location
H		Center leg	6	Wrapped in a non-woven bag	Q		Spring Washer Ø8	14	Hardware Pack
I		Triangle connection piece	2	Wrapped in a non-woven bag				16	Already in Place
J		Cp3-1	4	Wrapped in a non-woven bag	R		Flat Washer Ø8x25mm	16	Already in Place
K		Bolt Ø6x30mm	6	Already in Place	S		Flat Washer Ø8x22mm	6	Hardware Pack
L		Bolt Ø8x30mm	16	Already in Place	T		Flat Washer Ø8x18mm	8	Hardware Pack
			4	Hardware Pack	U		Spring Washer Ø6	6	Already in Place
M		Bolt Ø8x60mm	8	Hardware Pack	V		Flat Washer Ø6x25mm	6	Already in Place
N		"L" Wrenches Ø4	1	Hardware Pack	W		Spanner Ø14	1	Hardware Pack
O		"L" Wrenches Ø5	1	Hardware Pack	X		Screws 4x30mm	48	Hardware Pack
P		Nut Ø8	2	Hardware Pack					

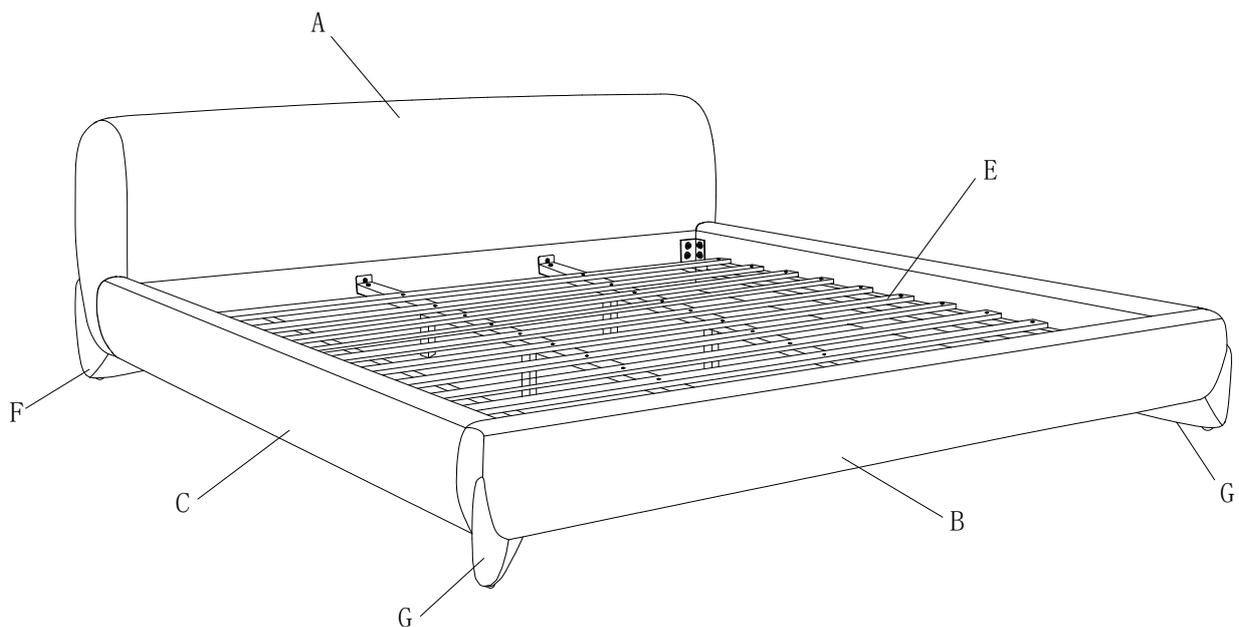

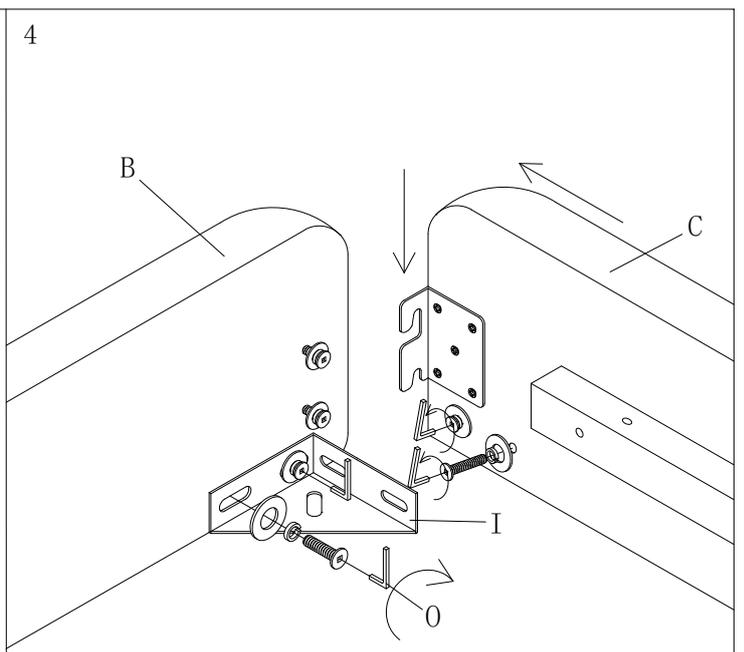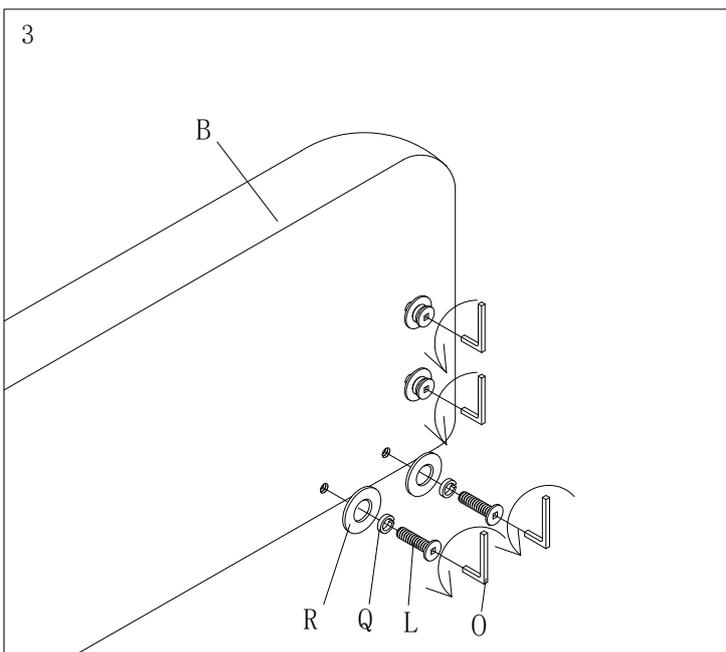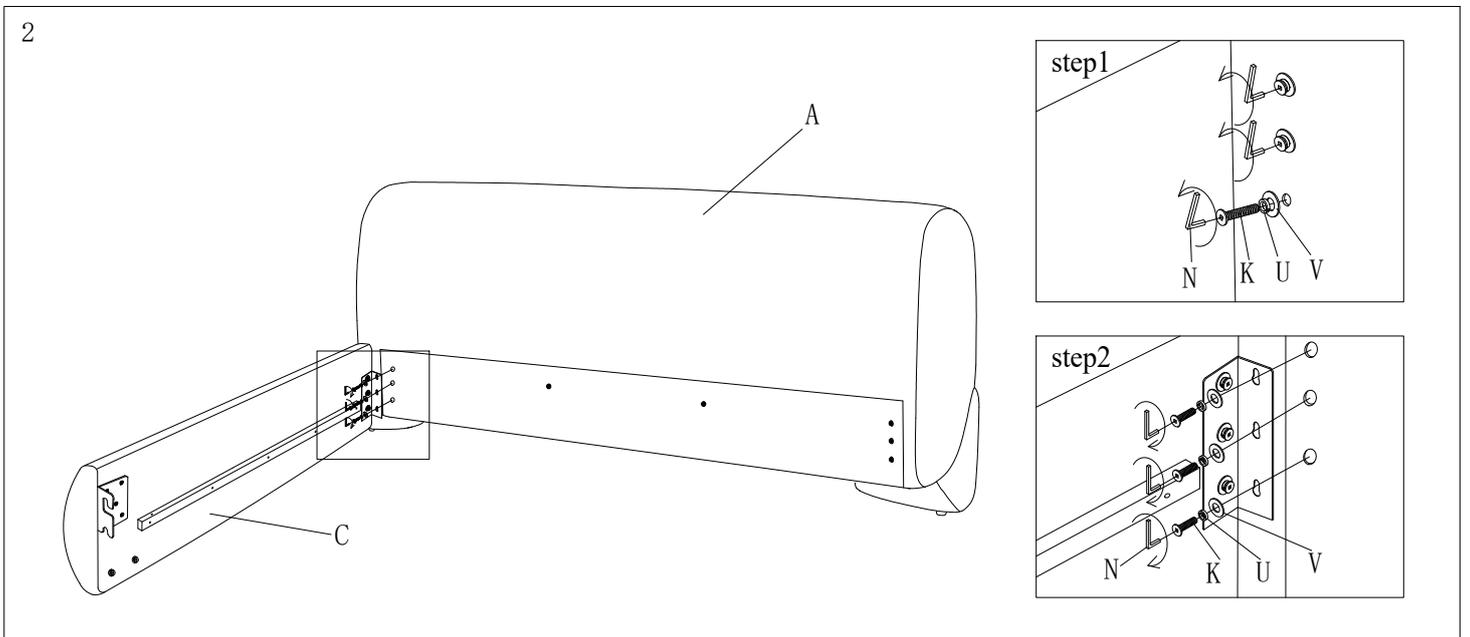
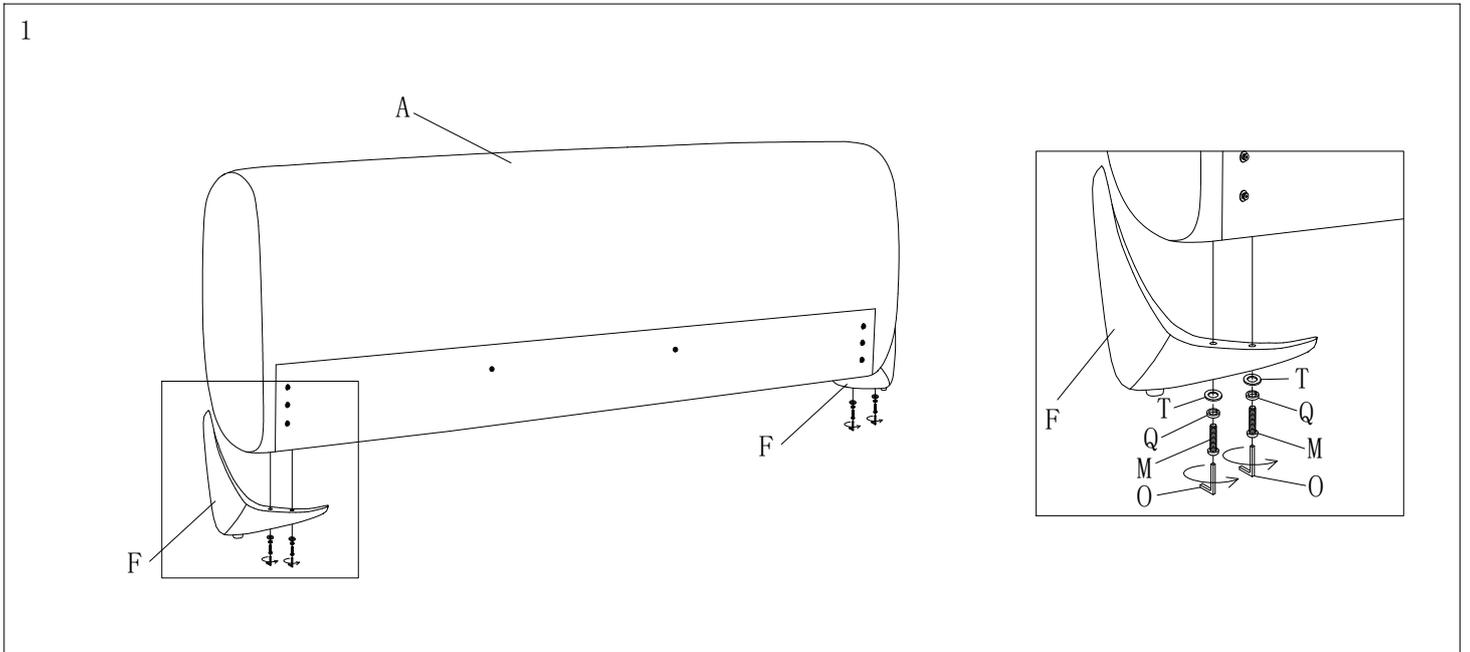


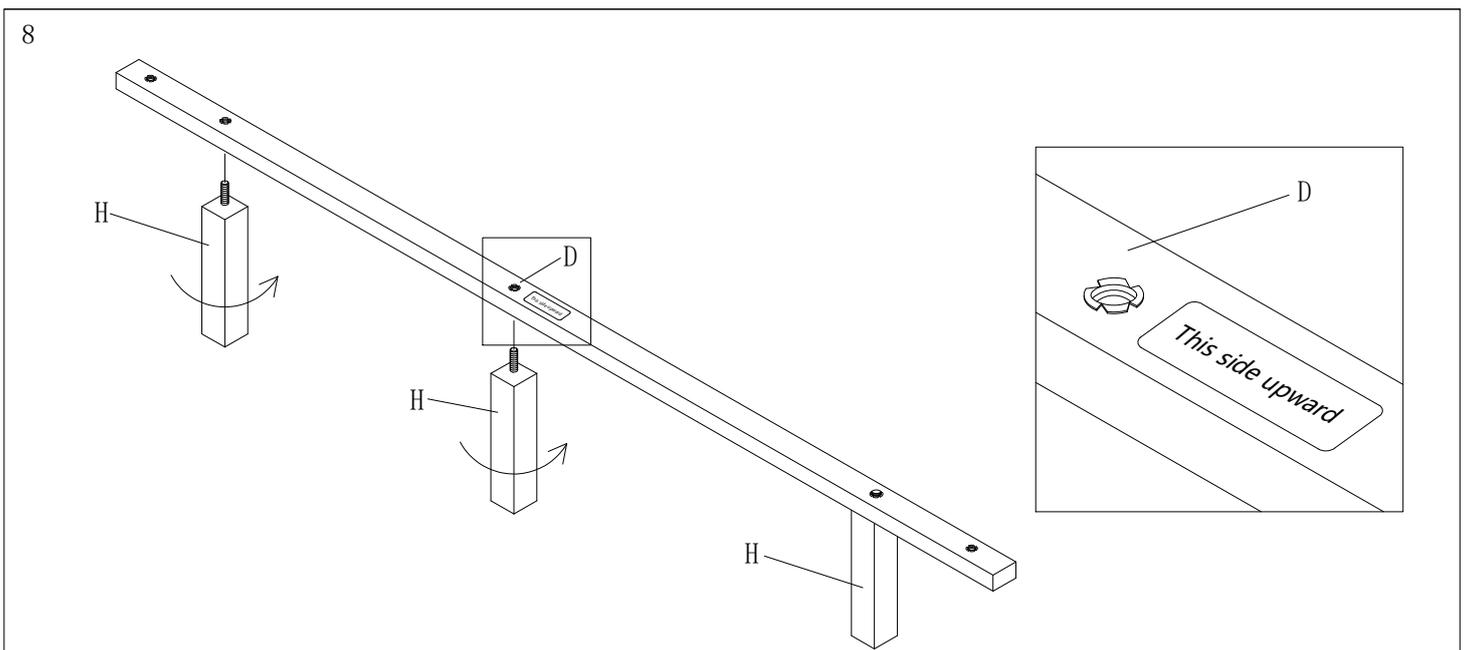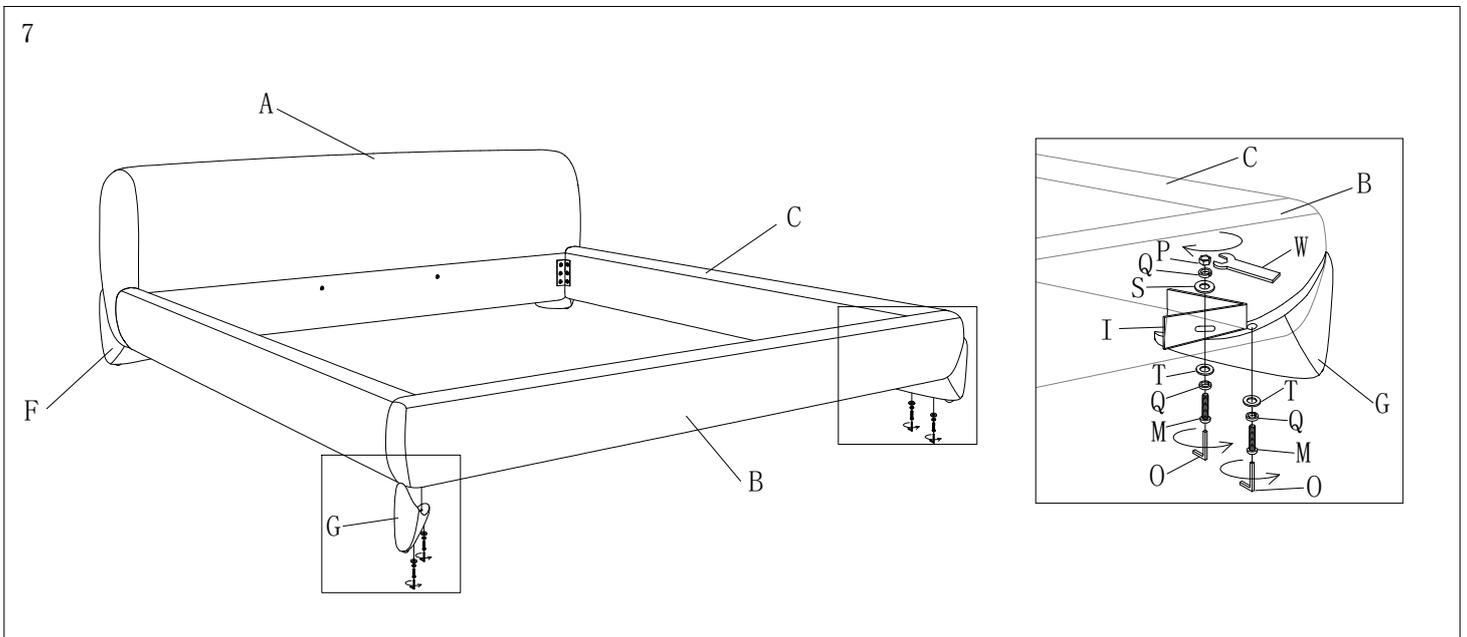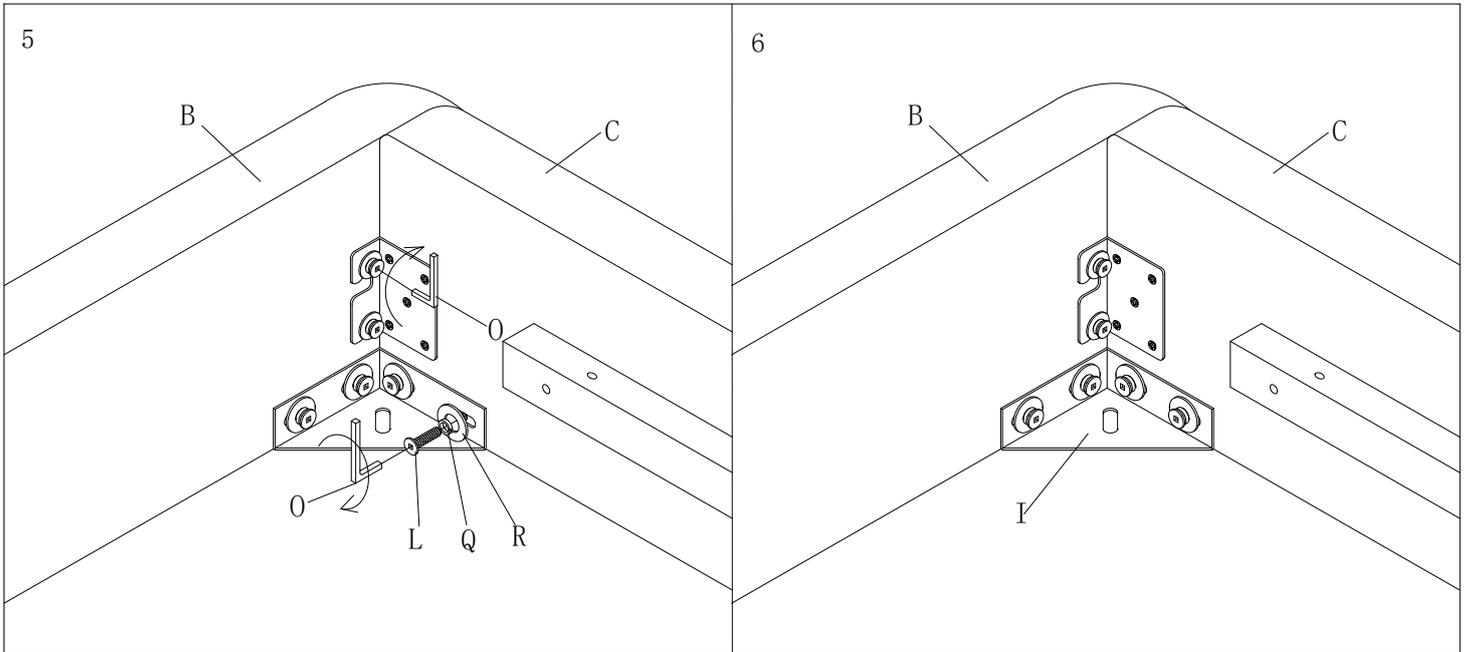



9

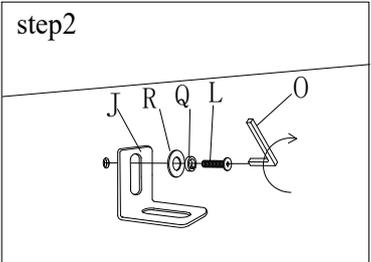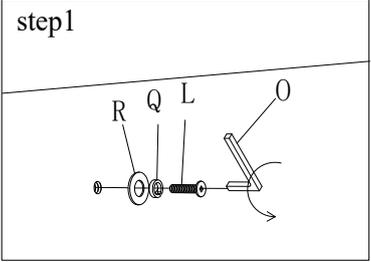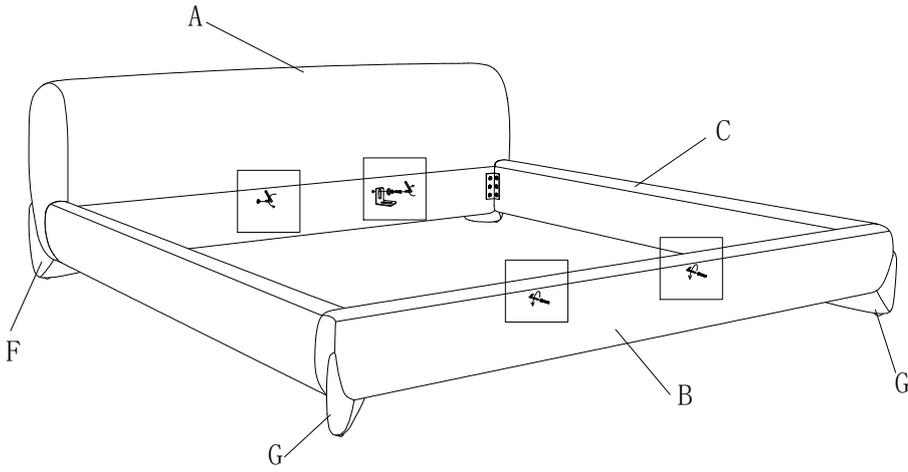

10

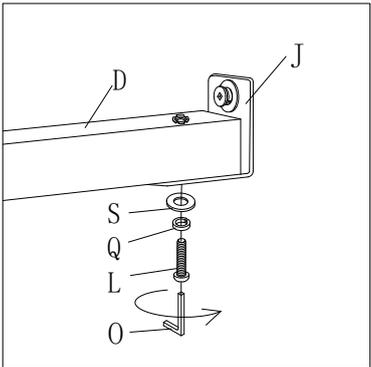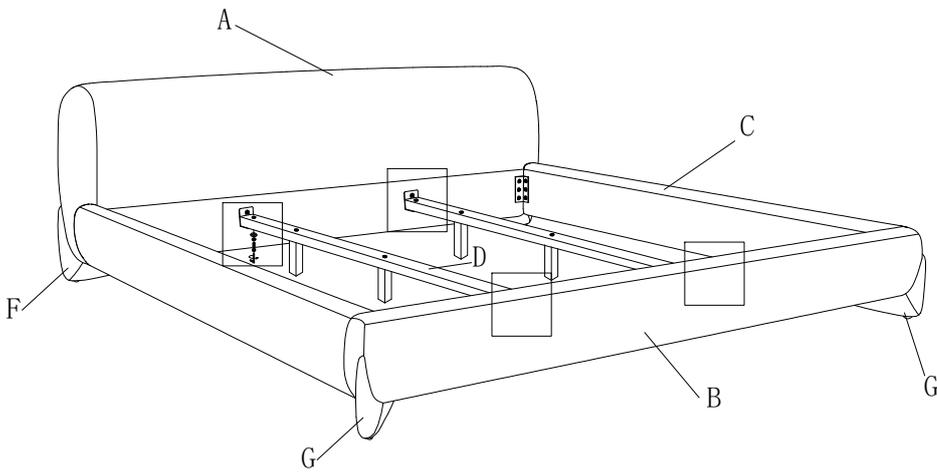

11

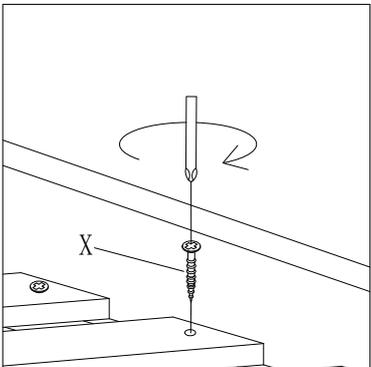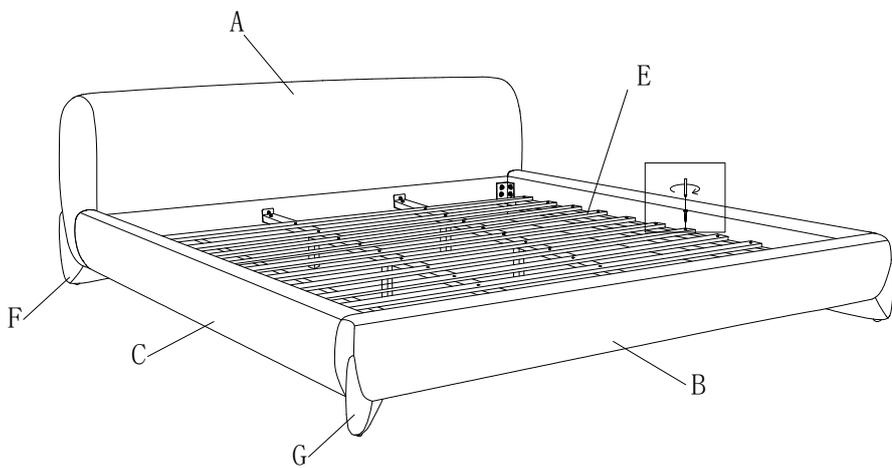

Screwdriver required, not included