





HEADBOARD SET ASSEMBLY INSTRUCTION (TOTAL 1 BOX)

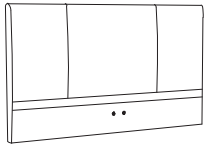


A x 1 pc




B x 2 pcs




C x 2 pcs




D x 2 pcs




E x 1 pc



F x 2 pcs



G x 4 pcs




H x 1 pc

Please read over the instructions, it will be a time-saver in the long run.


Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

Please leave bolts loosened until all bolts are placed before tightening completely.

Part#	Picture	Description	QTY	Location	Part#	Picture	Description	QTY	Location
I		Center leg	1	Embossed film wrap	O		Bolt Ø8x60mm	16	Hardware Pack
J		Triangle connection piece	2	Embossed film wrap	P		Bolt Ø8x70mm	2	Hardware Pack
K		Legs	4	Embossed film wrap	Q		Spring Washer Ø8	28	Hardware Pack
L		Screws 4x30mm	24	Hardware Pack				24	Already in Place
M		Bolt Ø8x30mm	24	Already in Place	R		Flat Washer Ø8x25mm	28	Hardware Pack
N		Bolt Ø8x40mm	6	Hardware Pack				24	Already in Place
					S		Nut Ø8	4	Hardware Pack
					T		"L" Wrenches Ø5	1	Hardware Pack
					U		Spanner Ø14	1	Hardware Pack

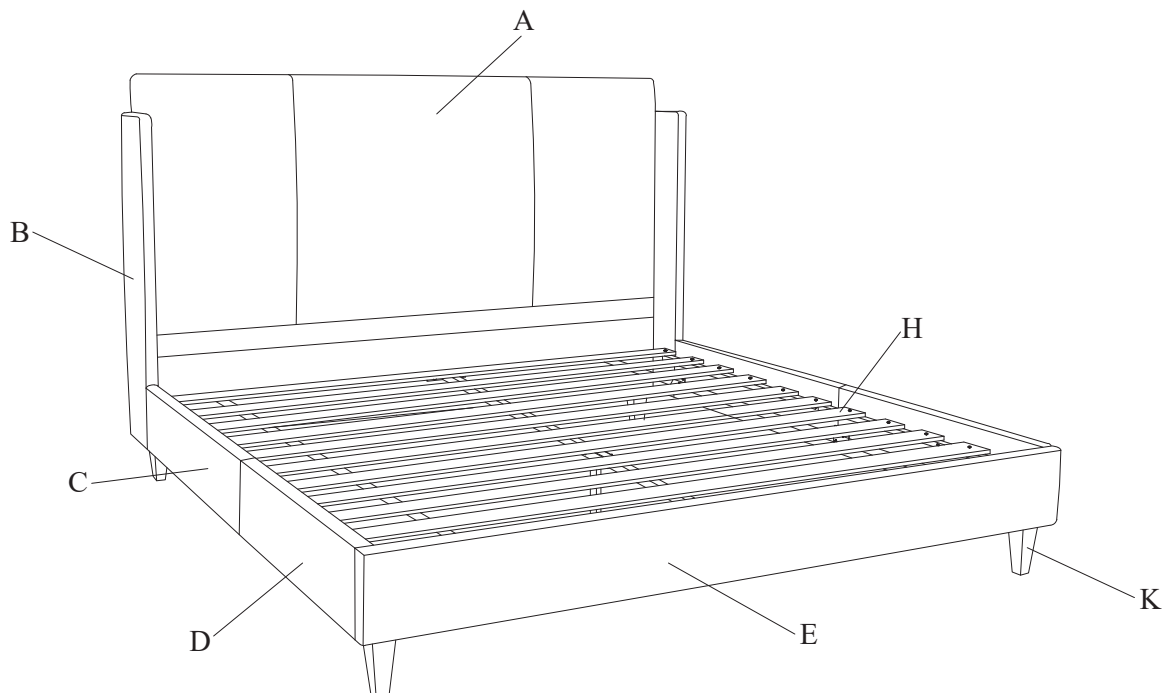


1

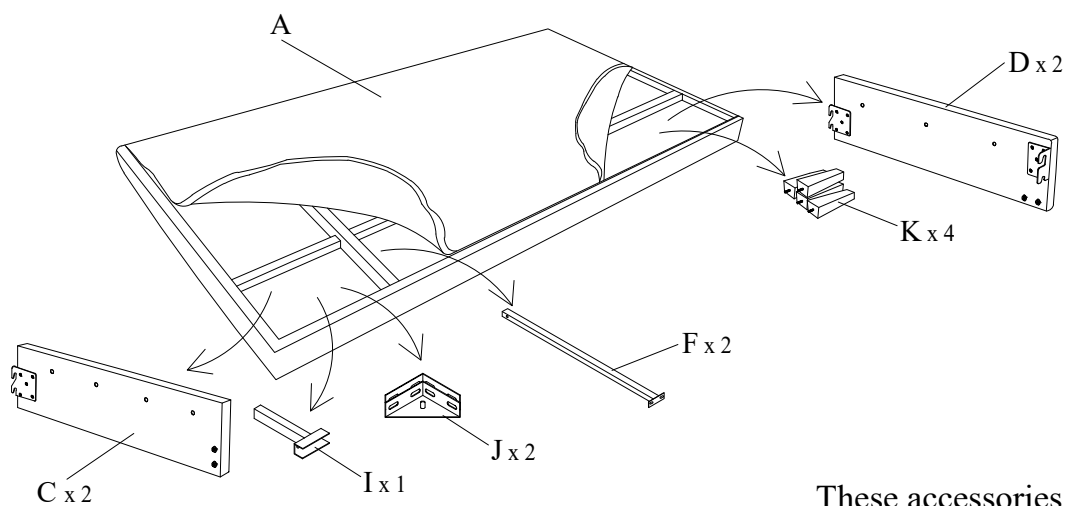


These accessories are inside the back of the headboard


2

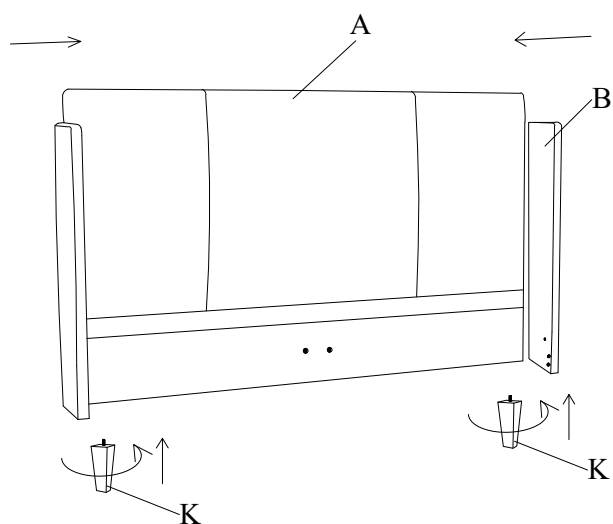

3


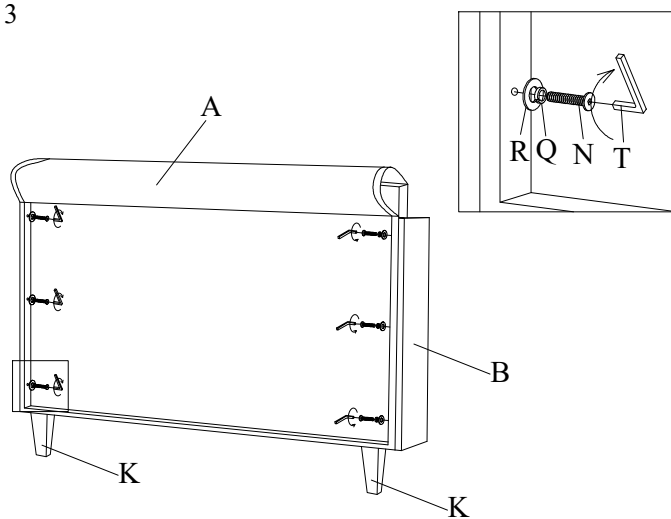


4

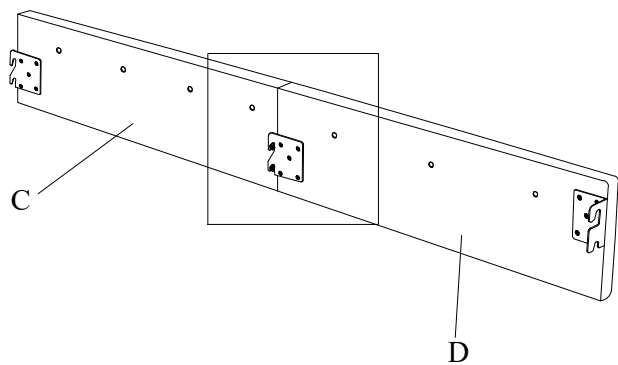


step1

step2

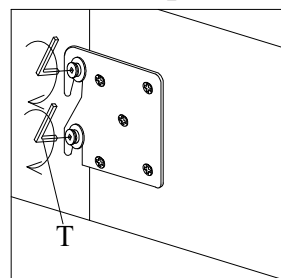
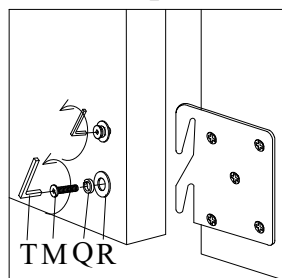


5

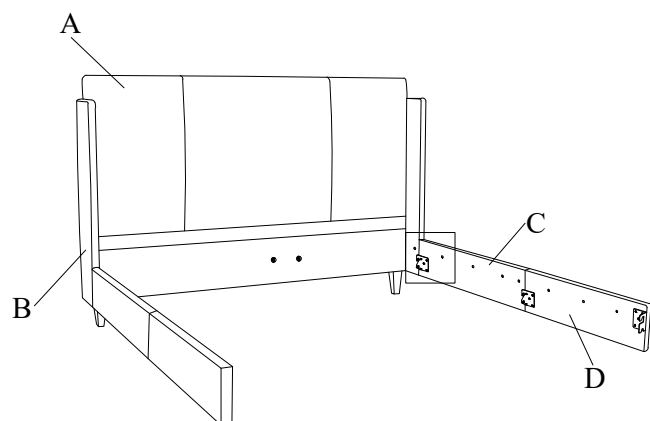


step1


step2

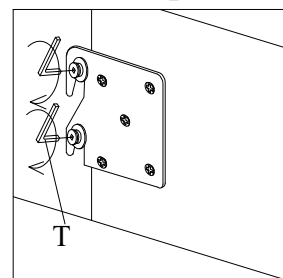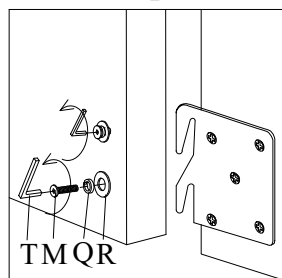


6

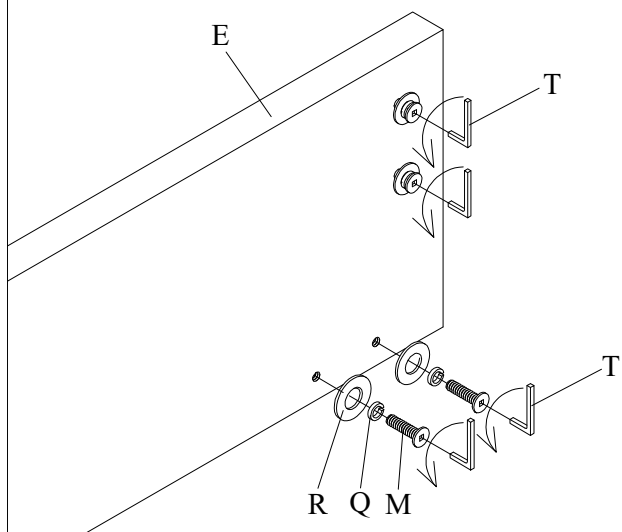

7

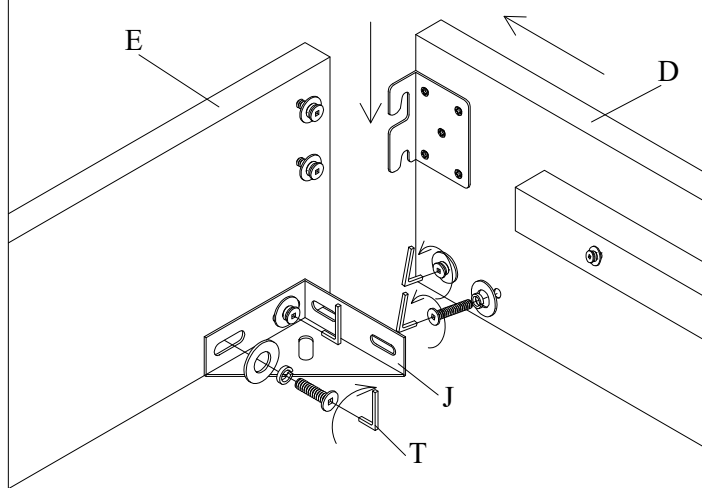

8

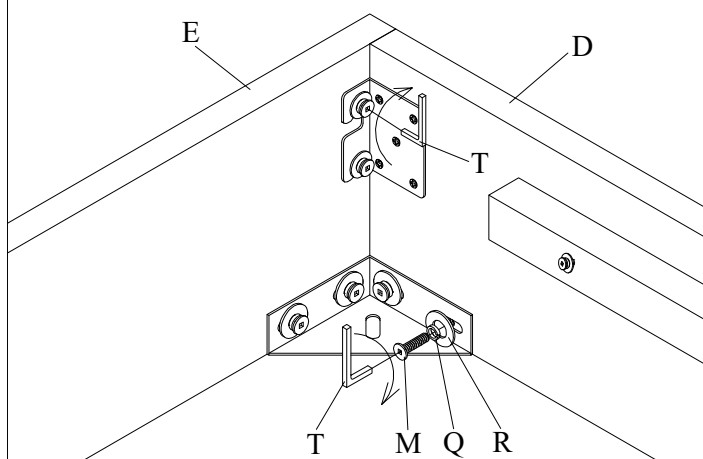

9

