



# ASSEMBLY INSTRUCTIONS

## 60280



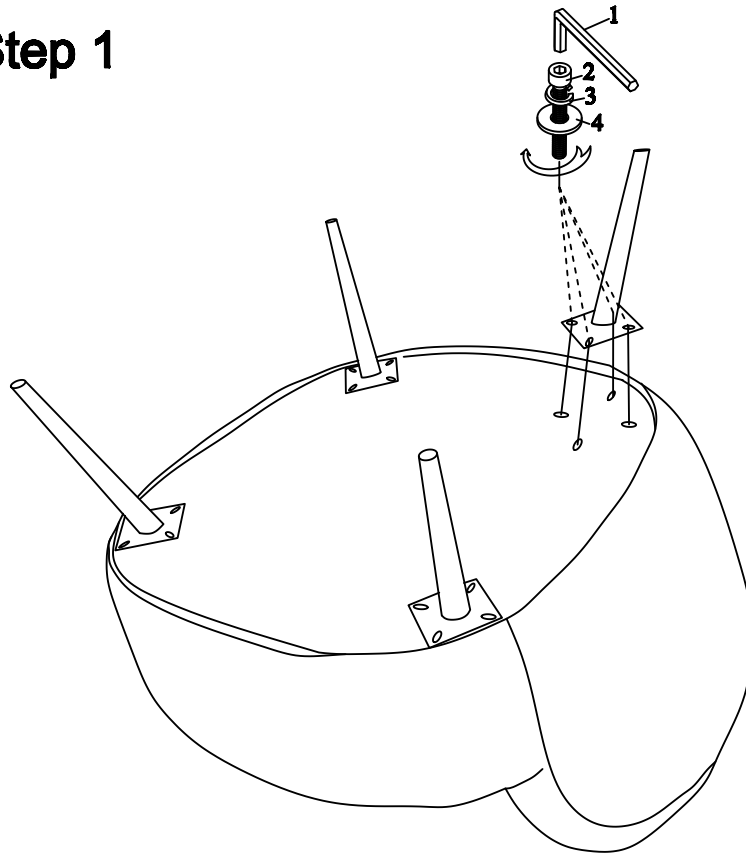

Step 1

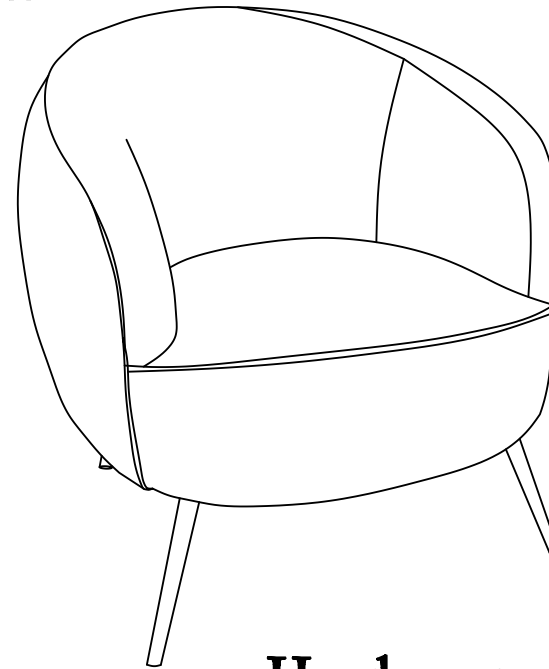

Finish



### Hardware

1		"L" Wrench	1pc
2		British Bolt 6*25mm	16pcs
3		Spring Washer	16pcs
4		Flat Washer	16pcs