



SOFABED ASSEMBLY INSTRUCTION (TOTAL 1 BOX)



A x 1 pc




B x 1 pc




C x 1 pc



D x 1 pc




E x 2 pcs



F x 1 pc



G x 1 pc



H x 1 pc



I x 1 pc



J x 1 pc



K x 1 pc



L x 1 pc



M x 1 pc



N x 2 pcs




O x 2 pcs




Please read over the instructions, it will be a time-saver in the long run.







Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

Please leave bolts loosened until all bolts are placed before tightening completely.


Part#	Picture	Description	QTY	Location	Part#	Picture	Description	QTY	Location
P		Leg	7	Embossed film wrap	X		Spring Washer Ø8	27	Hardware Pack
Q		Plastic Washer	8	Embossed film wrap	Y		Metal Center Leg	1	Embossed film wrap
R		"L" Wrench S5	1	Hardware Pack	Z		Wood Center Leg	1	Embossed film wrap
S		Bolt Ø8*50mm	6	Hardware Pack	ZA		"L" Connection Plate	1	Hardware Pack
T		Bolt Ø8*40mm	7	Hardware Pack	ZB		"L" Connection Plate	2	Hardware Pack
U		Bolt Ø8*20mm	14	Hardware Pack	ZC		Screwdriver	1	Hardware Pack
V		Screw 4*30mm	30	Hardware Pack	ZD		Nut Ø8	2	Hardware Pack
W		Flat Washer Ø8*22mm	29	Hardware Pack	ZE		Spanner	1	Hardware Pack

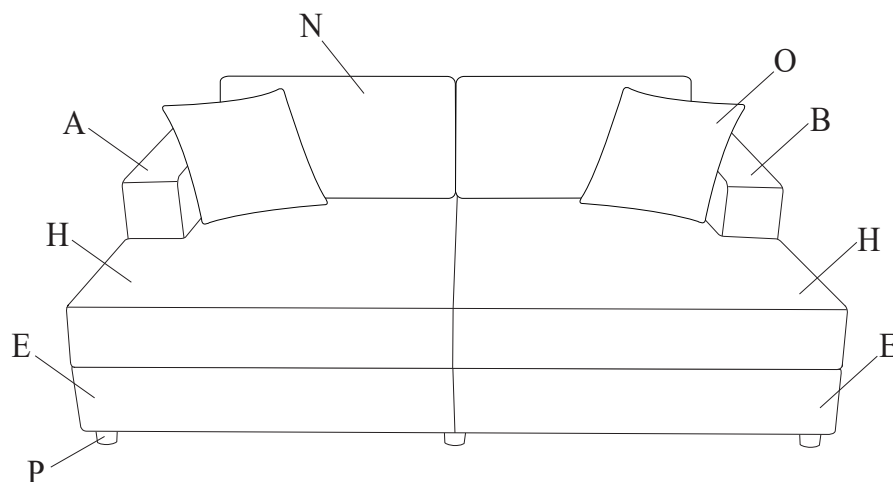

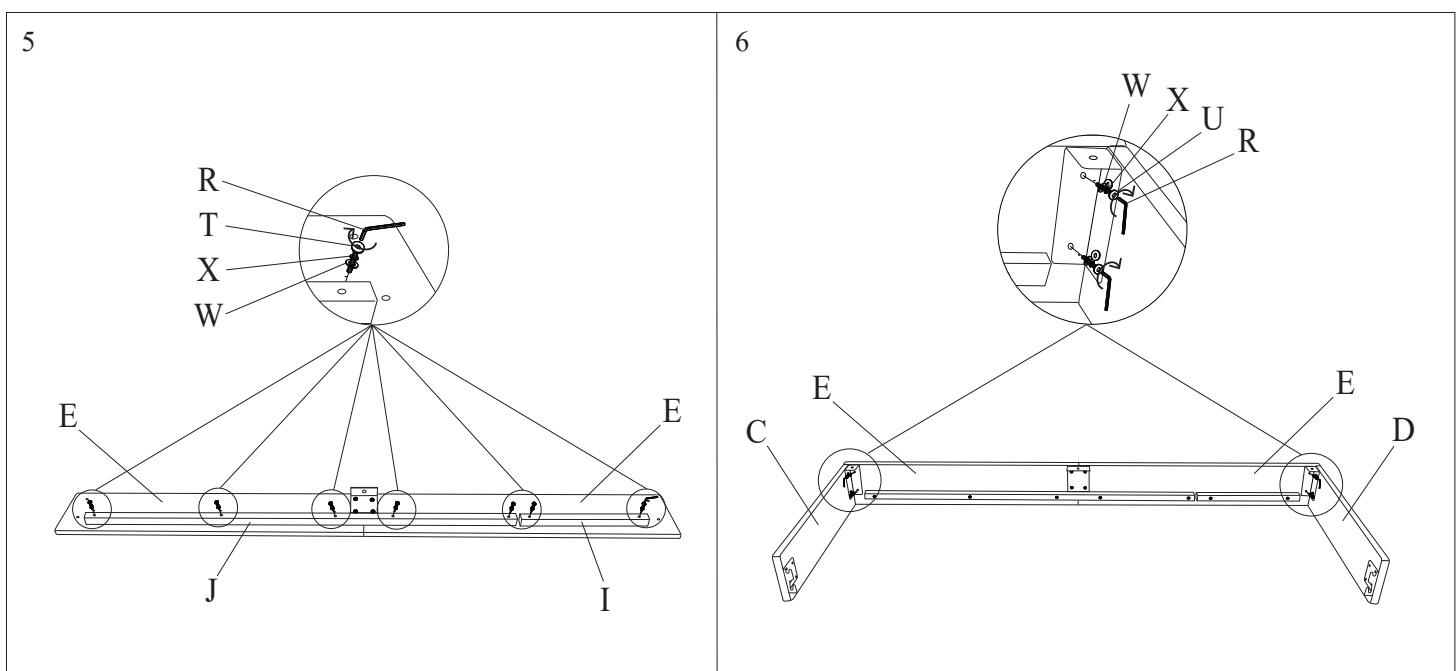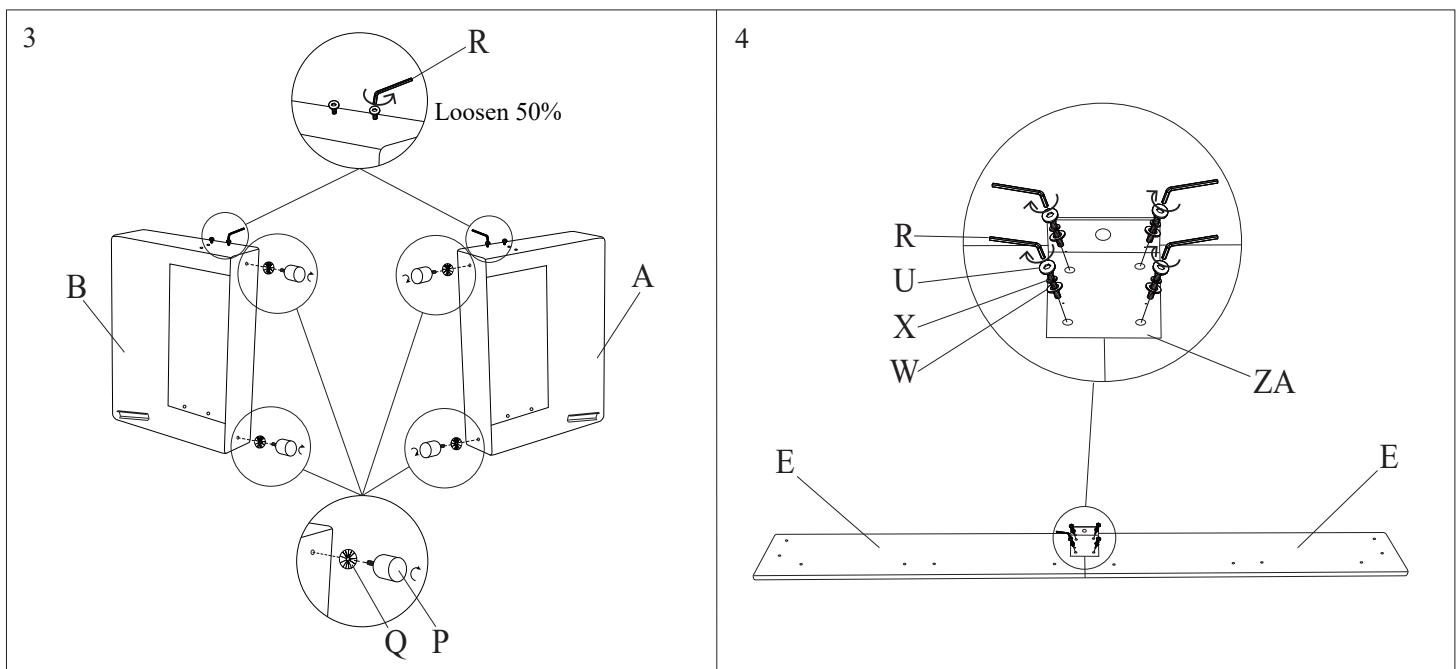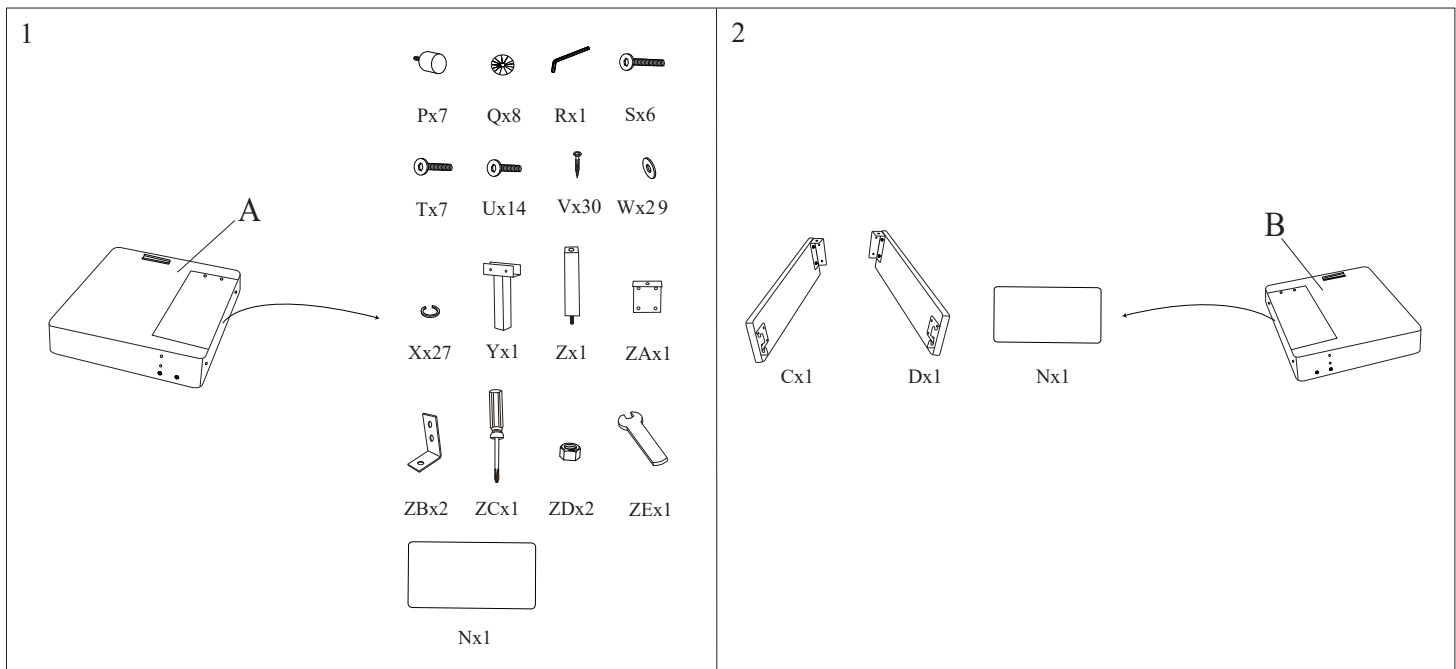


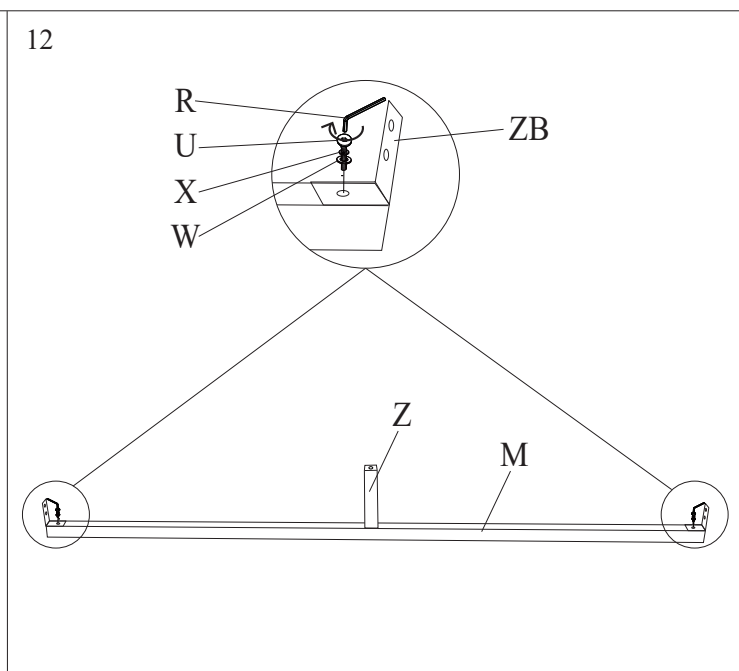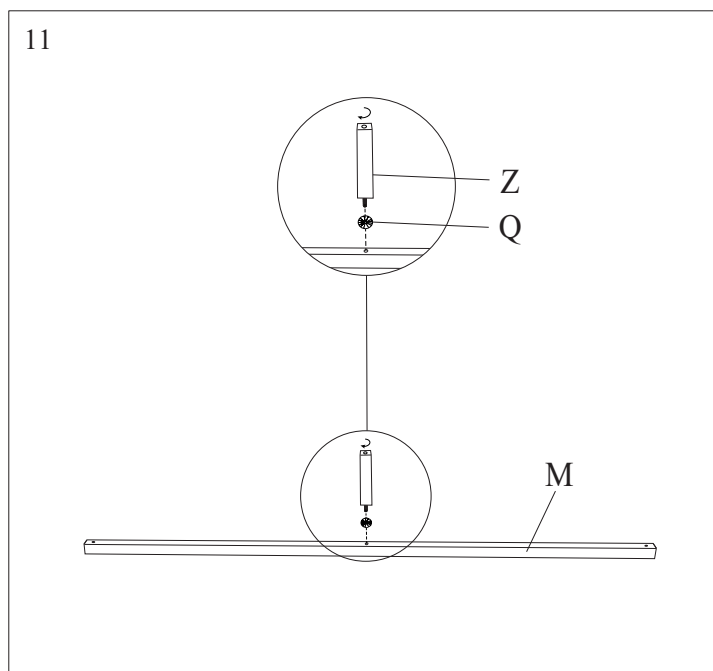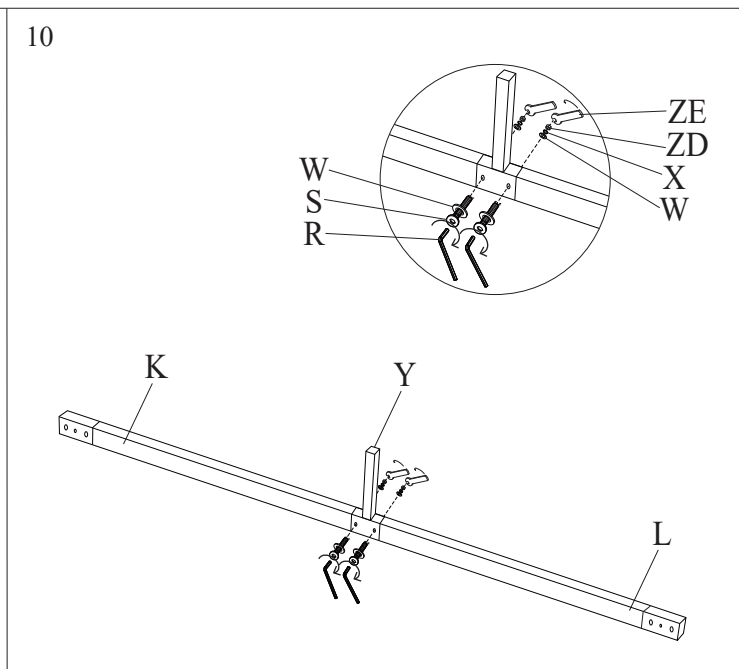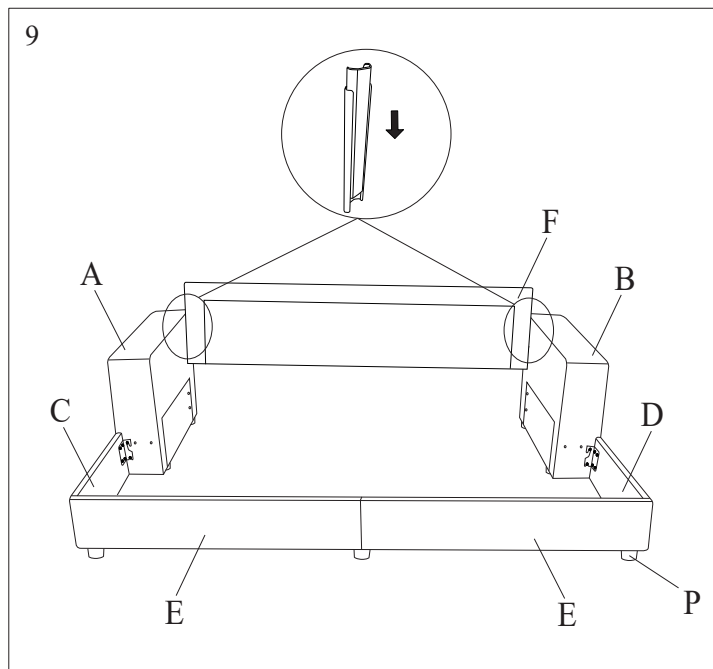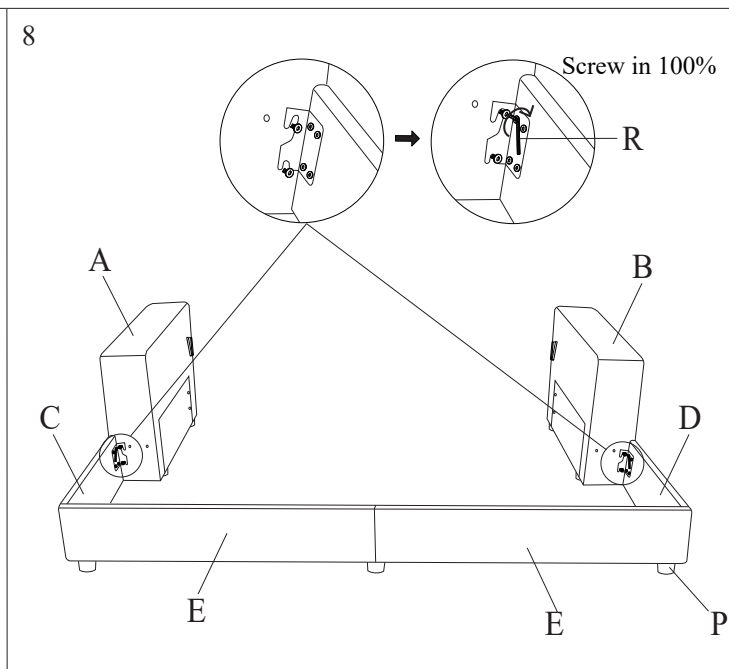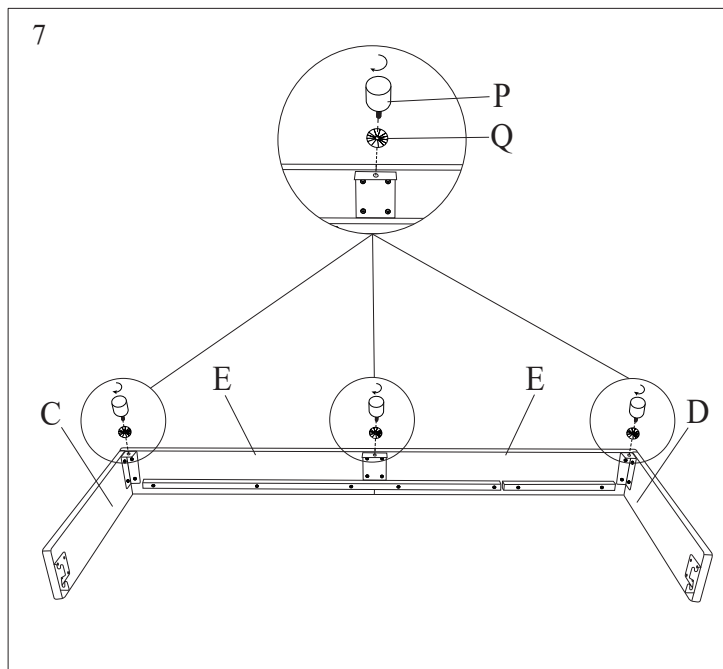


13

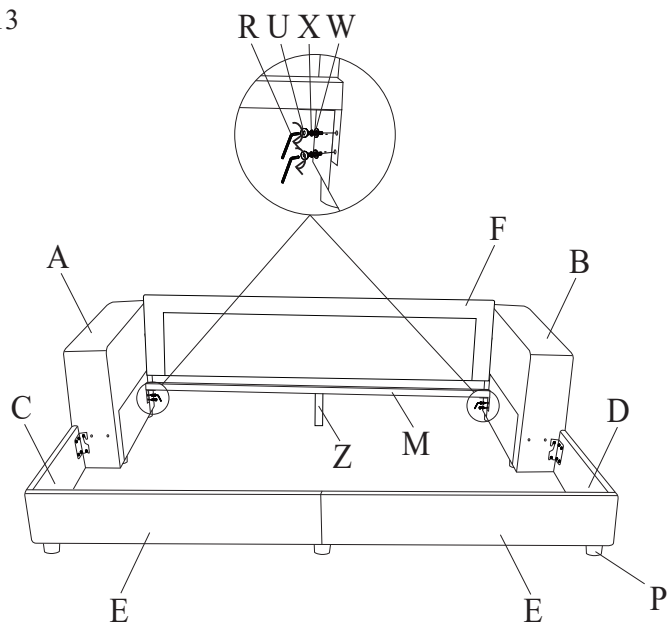


14

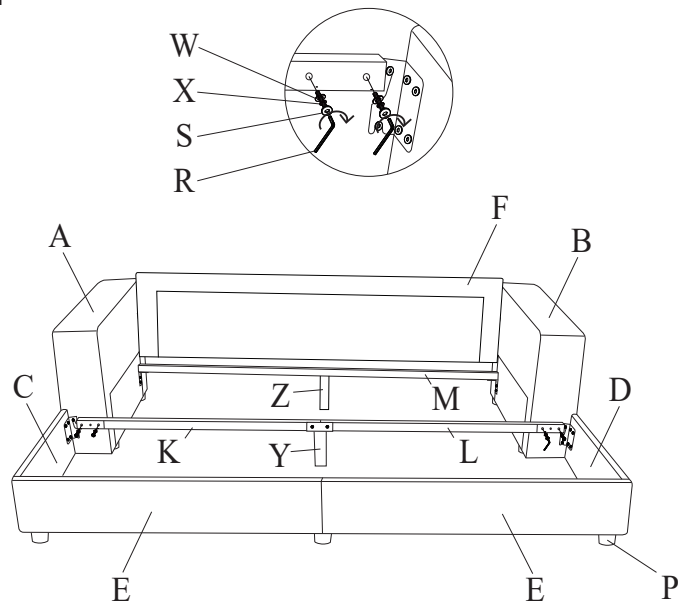


15

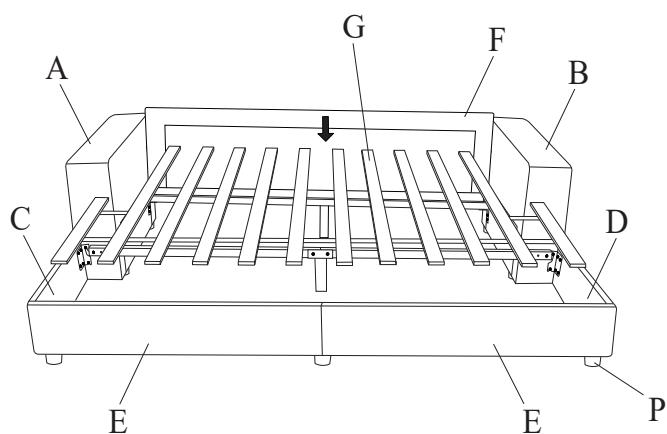

16

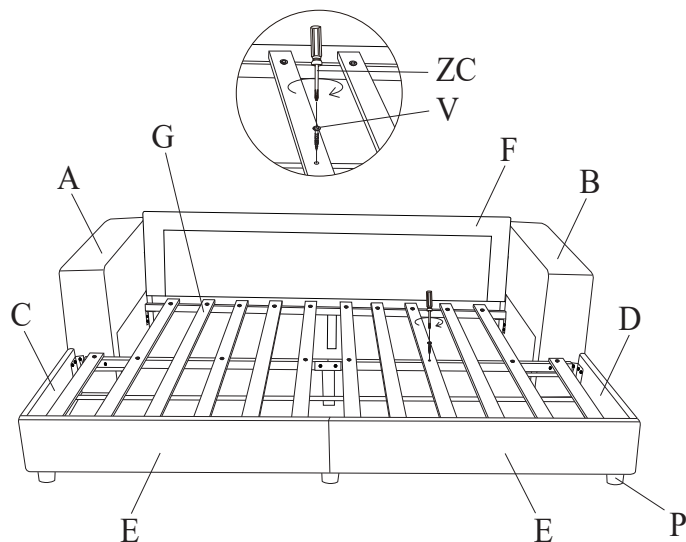


17

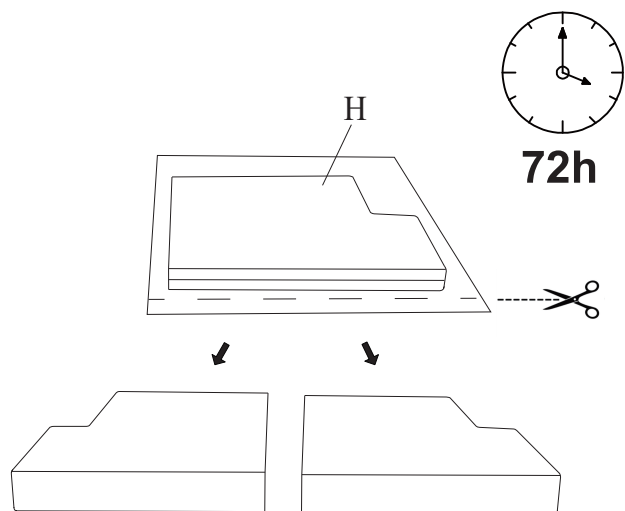


Pat to make it fluffy and assist with regaining its original shape.


18

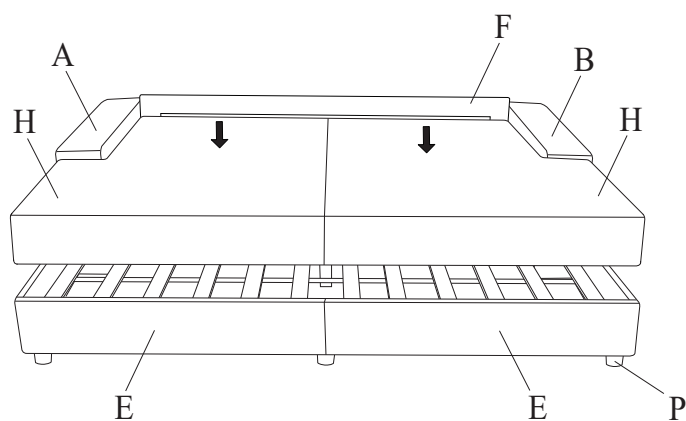


19

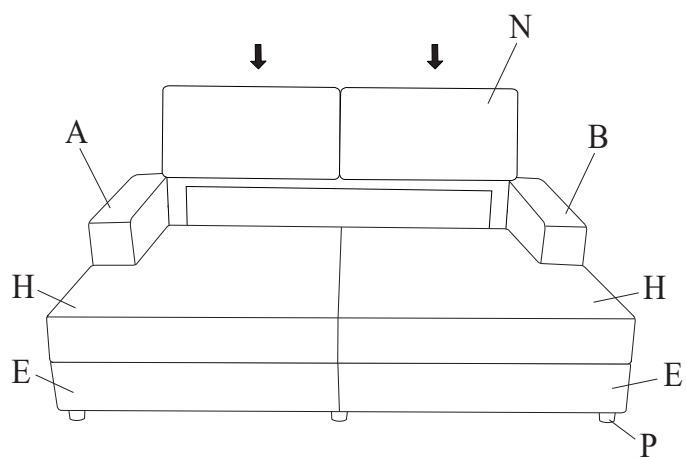

20

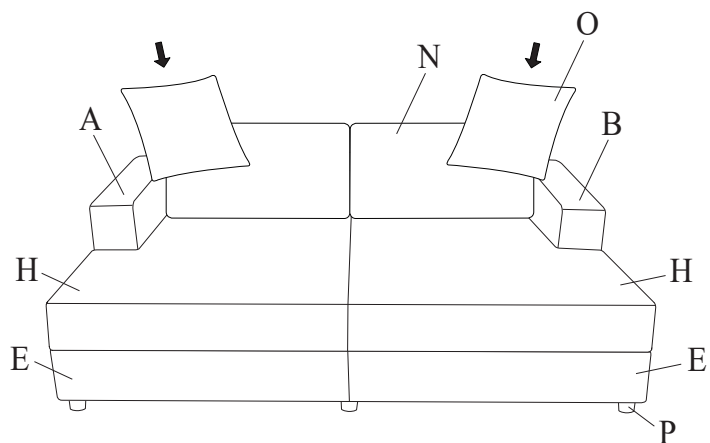

21

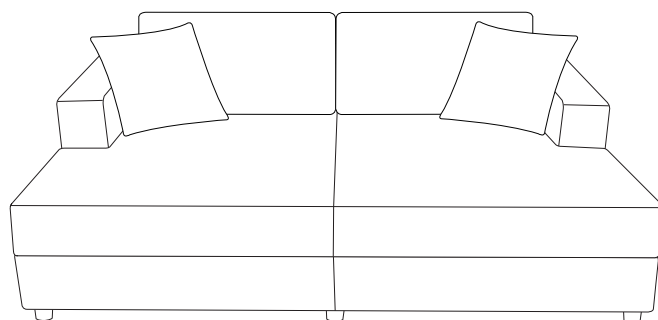

Thank you for your purchase.