




## CHAIR ASSEMBLY INSTRUCTION (TOTAL 1 BOX)




A x 2 pcs



B x 2 pcs

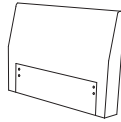

C x 2 pcs



D x 2 pcs



E x 2 pcs




F x 4 pcs







Please read over the instructions, it will be a time-saver in the long run.

Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.


Please leave bolts loosened until all bolts are placed before tightening completely.

Part#	Picture	Description	QTY	Location	Part#	Picture	Description	QTY	Location
G		Legs	8	Embossed film wrap	M		Bolt Ø6x20mm	12	Hardware Pack
H		Plastic Washer	8	Embossed film wrap	N		Connection Plate	2	Hardware Pack
I		Metal Hook	4	Hardware Pack	O		Plastic Clip	2	Hardware Pack
J		Bolt Ø6x35mm	8	Hardware Pack	P		Allen Wrench(S4)	1	Hardware Pack
K		Flat Washer Ø6x12mm	12	Hardware Pack					
L		Spring Washer Ø6	8	Hardware Pack					

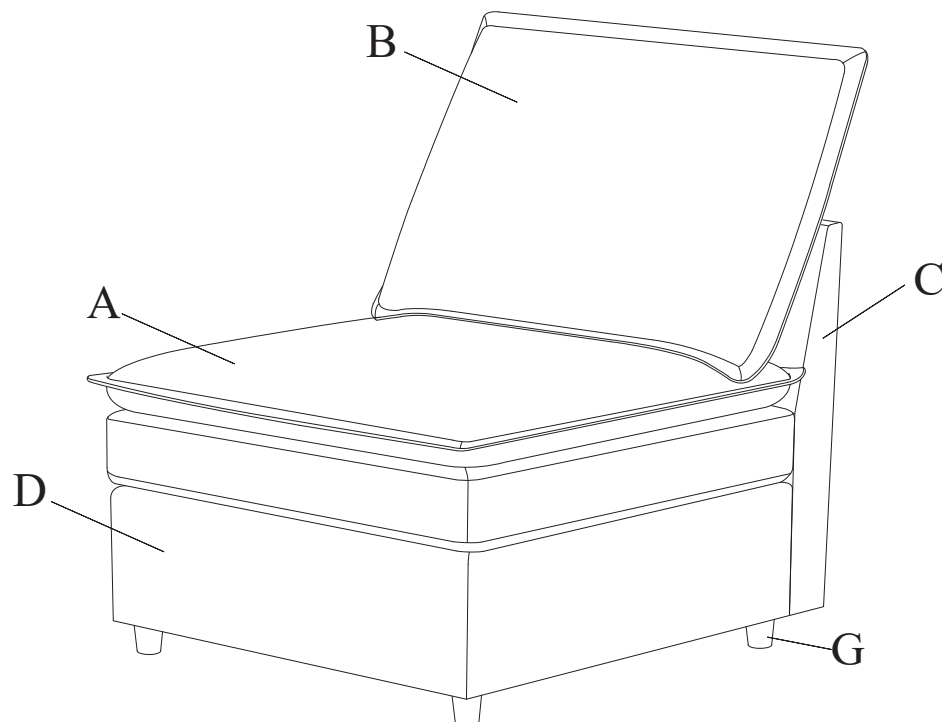

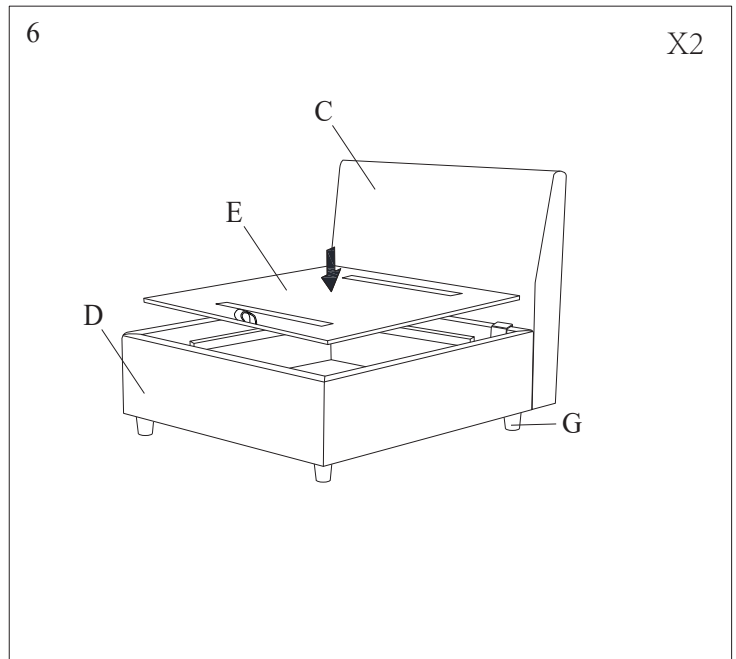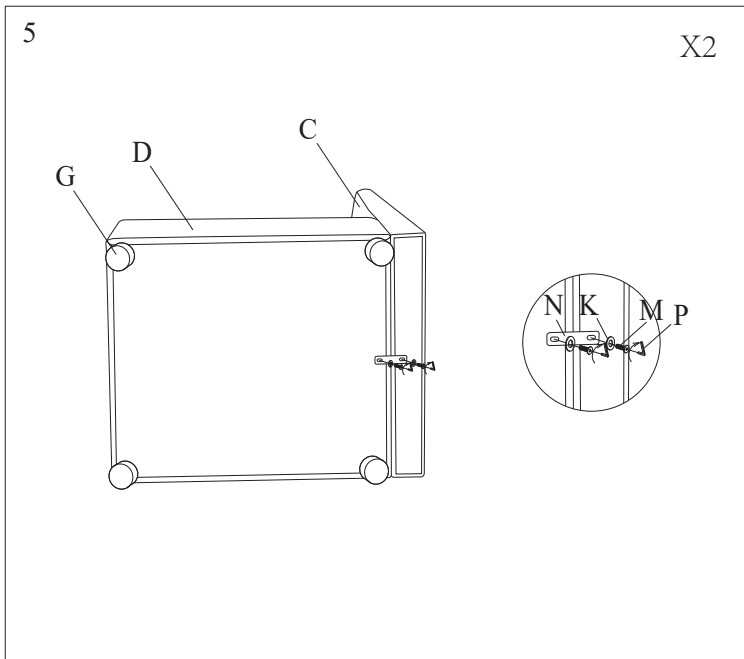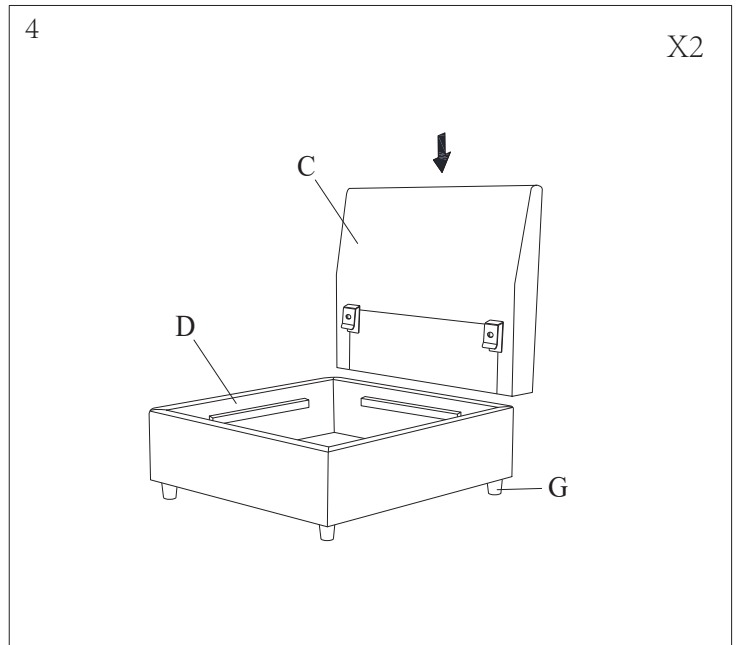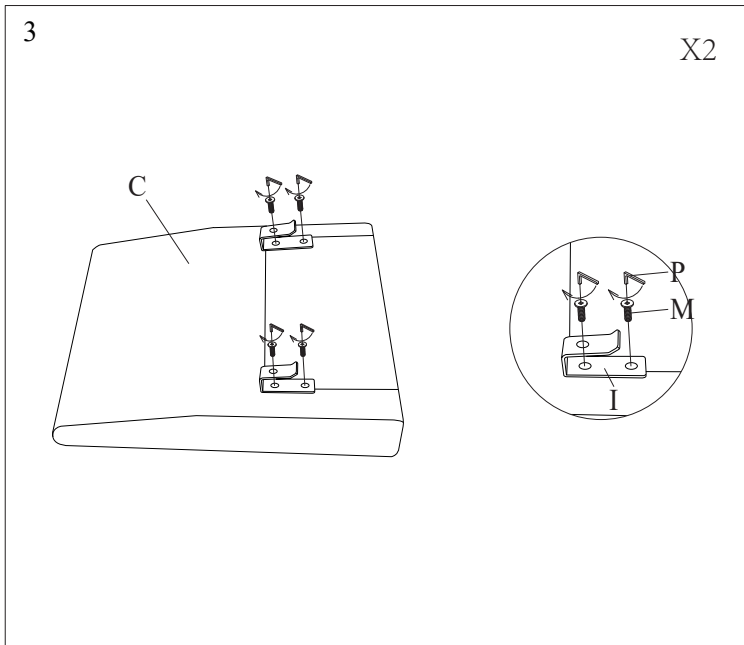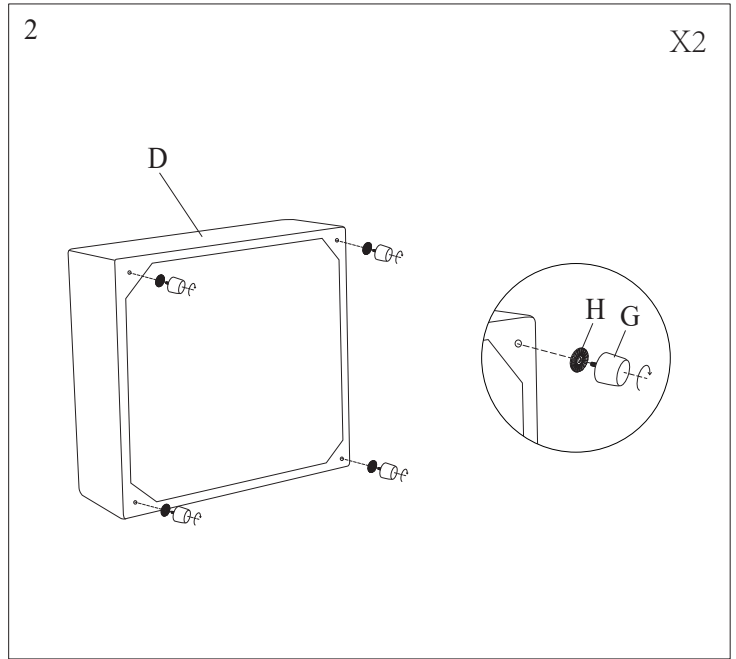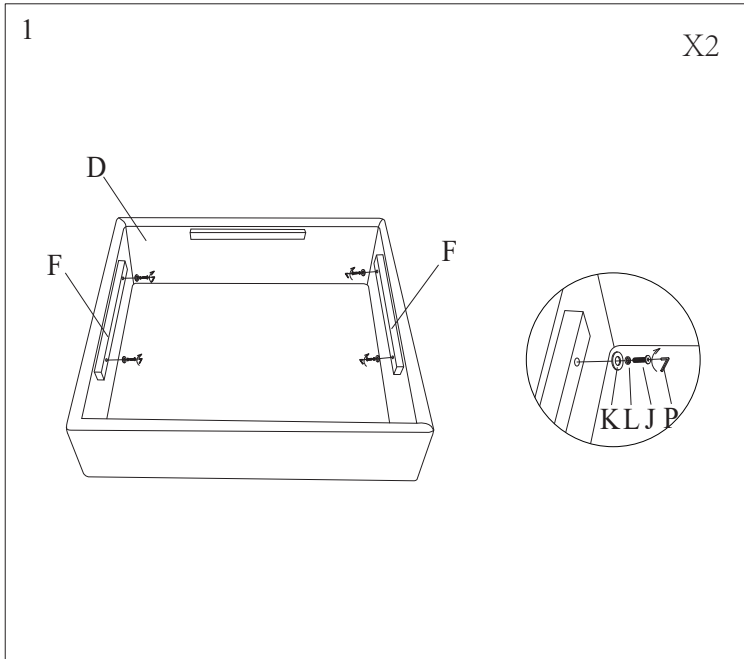


7

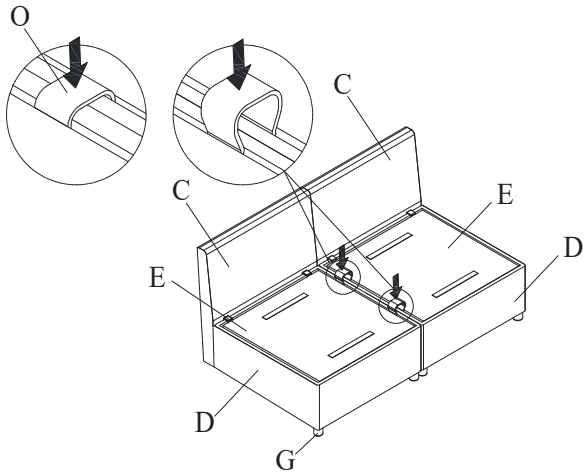


8

X2

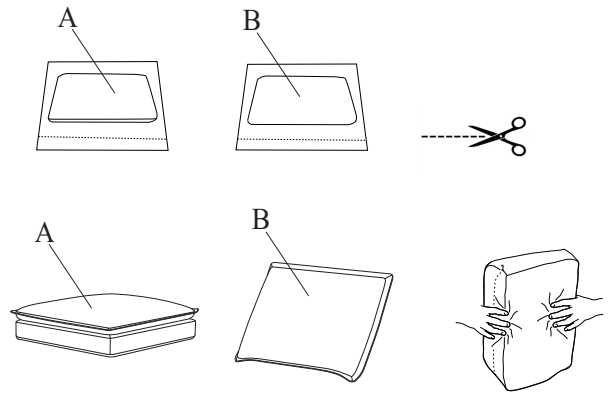


Pat to make it fluffy and assist with regaining its original shape.


7

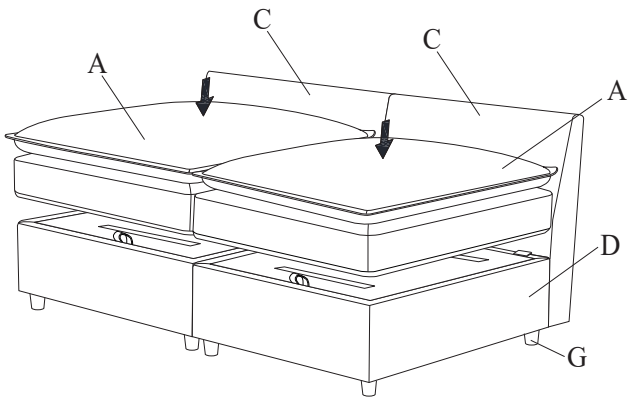


8

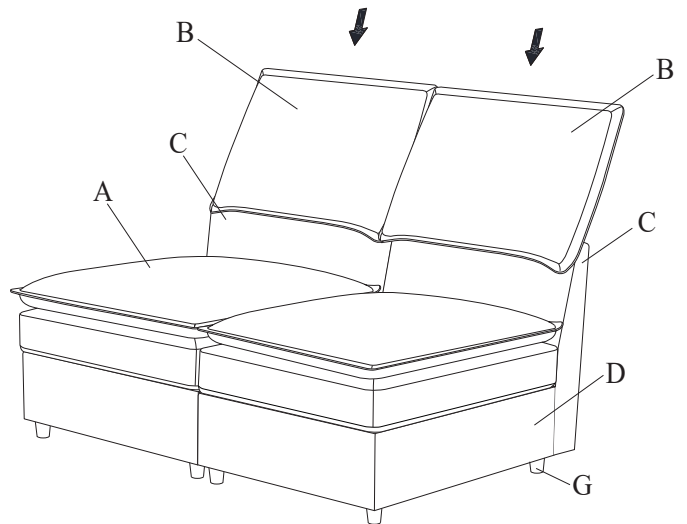


9

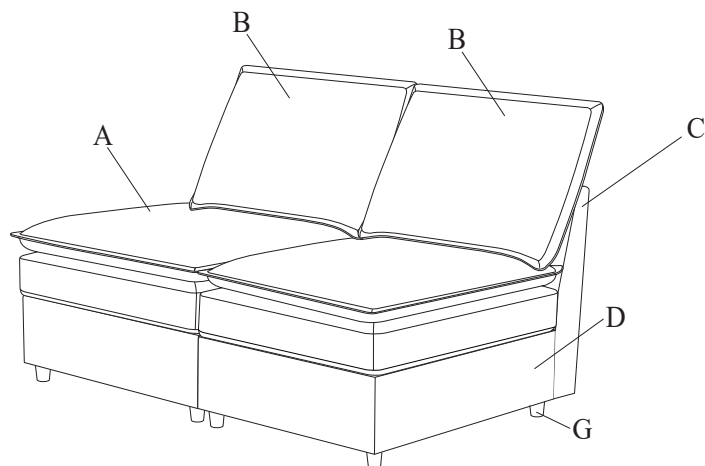

## ARM CHAIR ASSEMBLY INSTRUCTION (TOTAL 1 BOX)

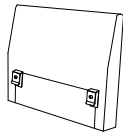

A x 1 pc



B x 1 pc



C x 1 pc



D x 2 pcs (M6x20mm)



E x 2 pcs (M6x12mm)





F x 1 pc(S4)


Please read over the instructions, it will be a time-saver in the long run.

Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.


Please leave bolts loosened until all bolts are placed before tightening completely.

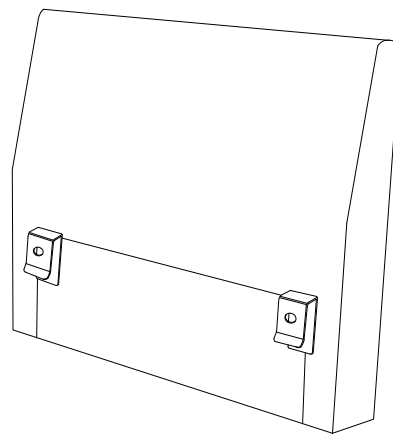
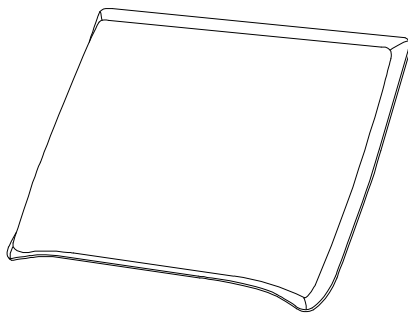


1

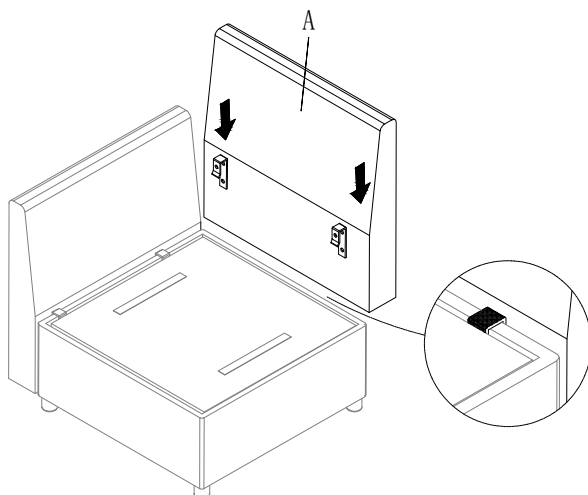


2

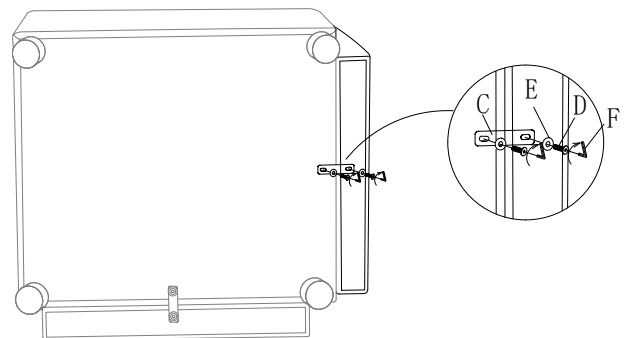

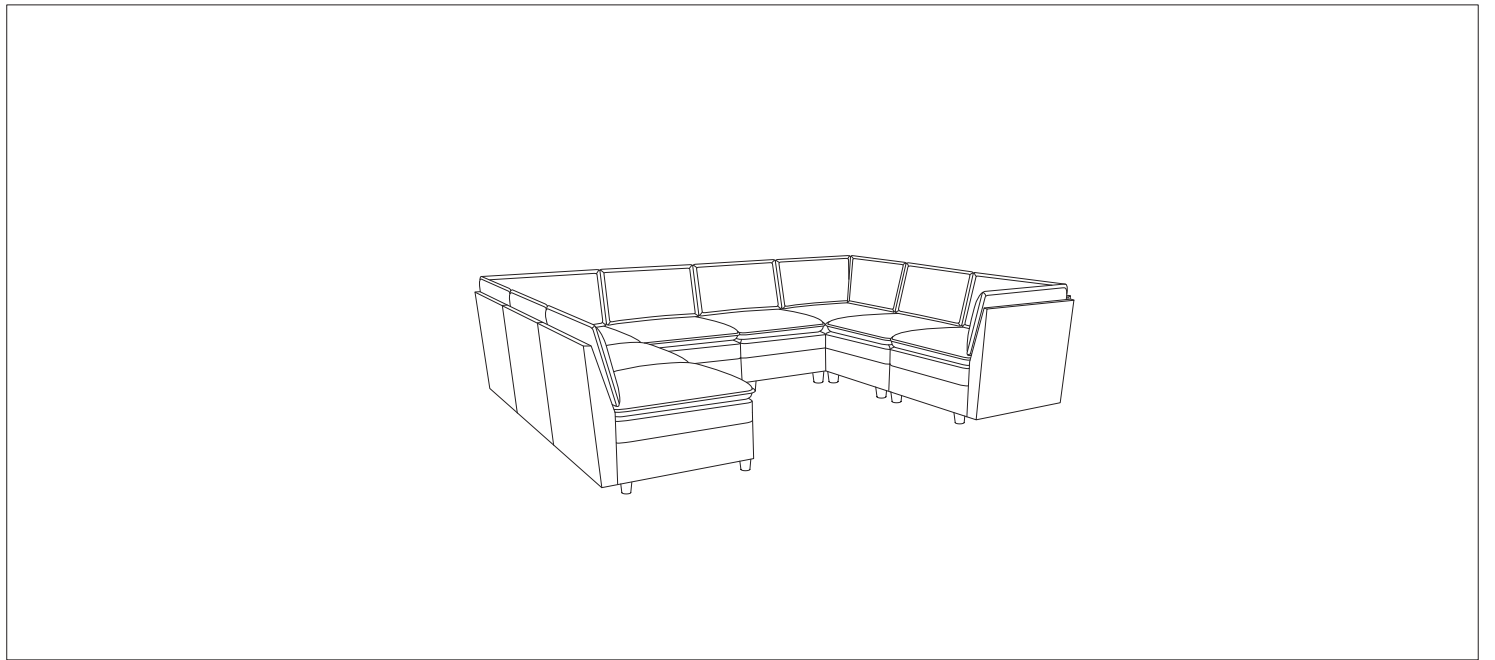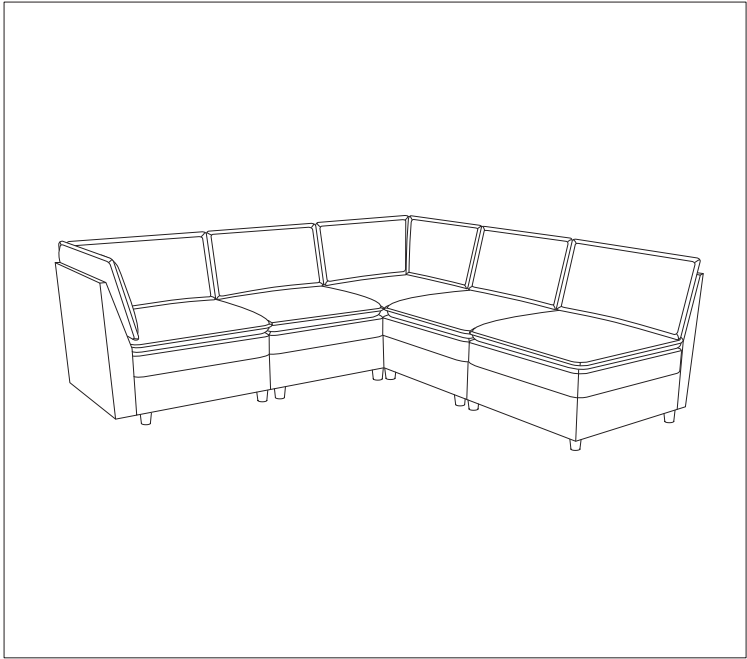


## CHAIR ASSEMBLY INSTRUCTION (TOTAL 1 BOX)




A x 2 pcs




B x 2 pcs

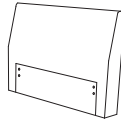

C x 2 pcs



D x 2 pcs



E x 2 pcs




F x 4 pcs







Please read over the instructions, it will be a time-saver in the long run.

Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.


Please leave bolts loosened until all bolts are placed before tightening completely.

Part#	Picture	Description	QTY	Location	Part#	Picture	Description	QTY	Location
G		Legs	8	Embossed film wrap	M		Bolt Ø6x20mm	12	Hardware Pack
H		Plastic Washer	8	Embossed film wrap	N		Connection Plate	2	Hardware Pack
I		Metal Hook	4	Hardware Pack	O		Plastic Clip	2	Hardware Pack
J		Bolt Ø6x35mm	8	Hardware Pack	P		Allen Wrench(S4)	1	Hardware Pack
K		Flat Washer Ø6x12mm	12	Hardware Pack					
L		Spring Washer Ø6	8	Hardware Pack					

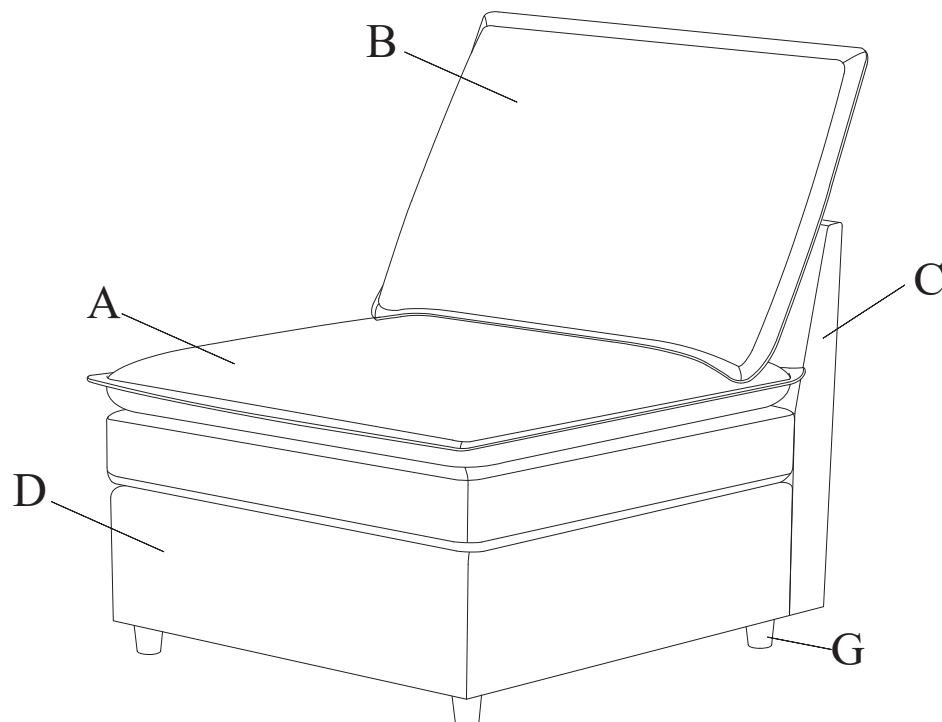

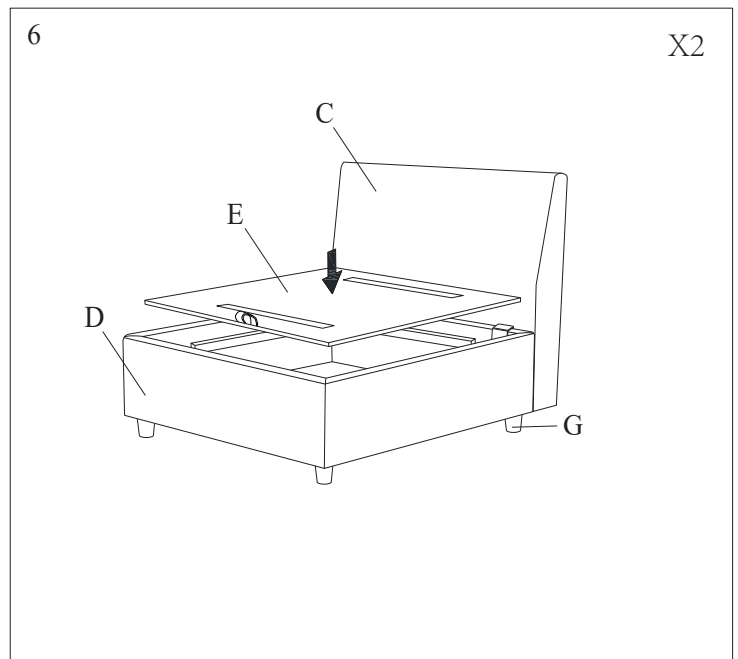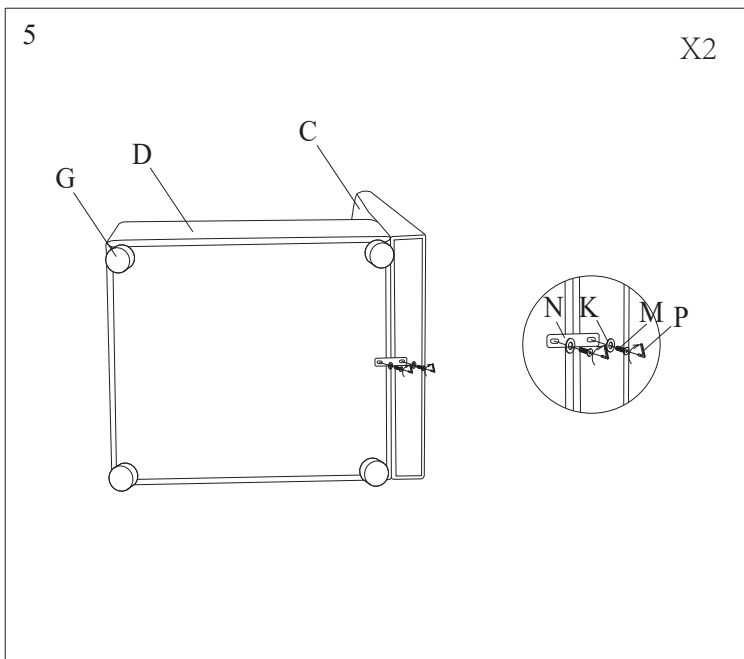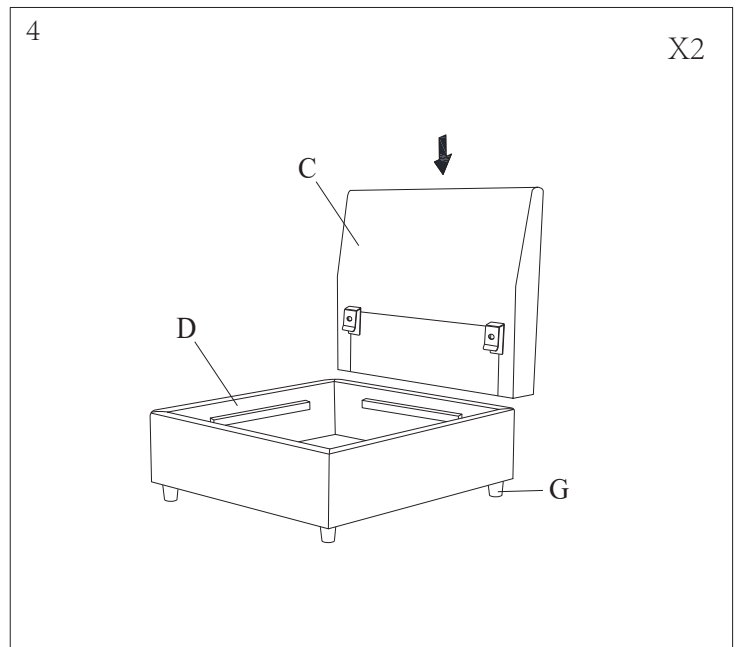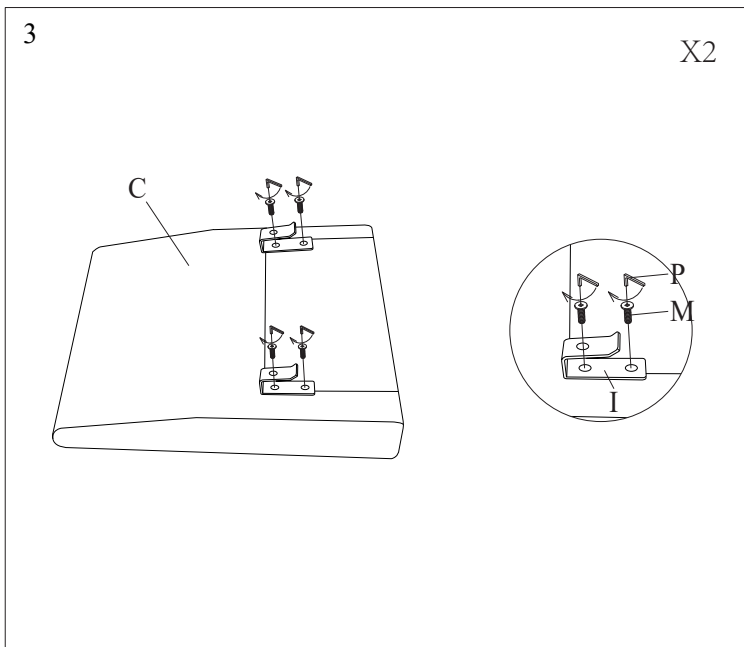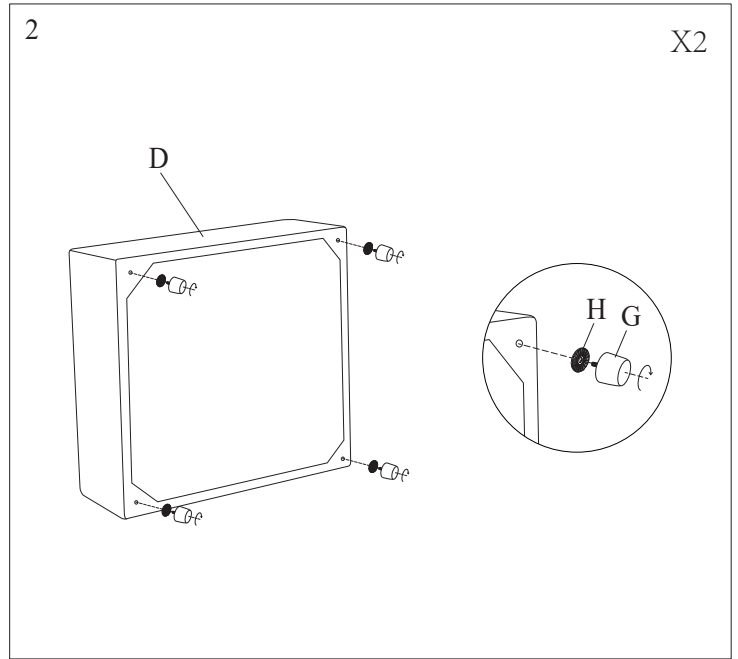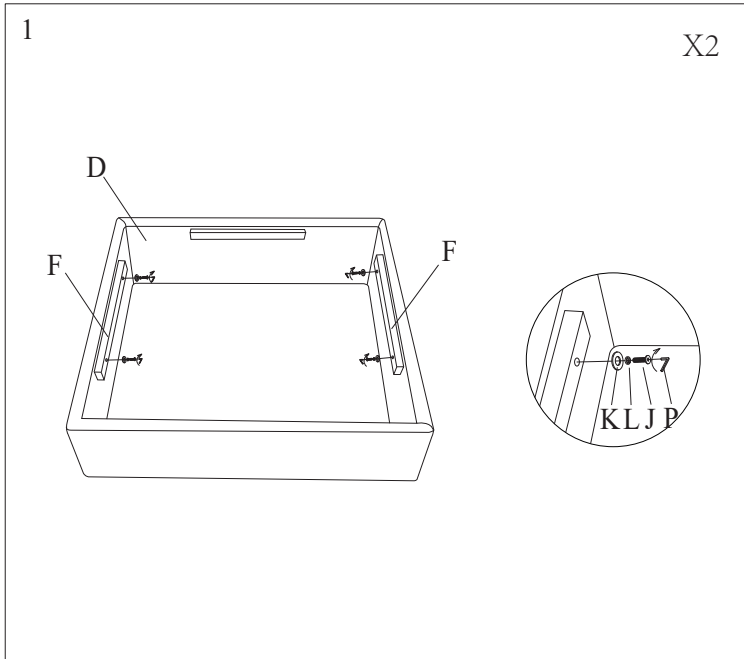


7

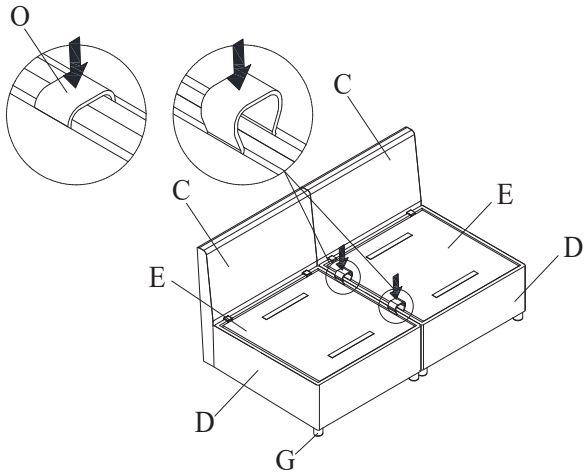


8

X2

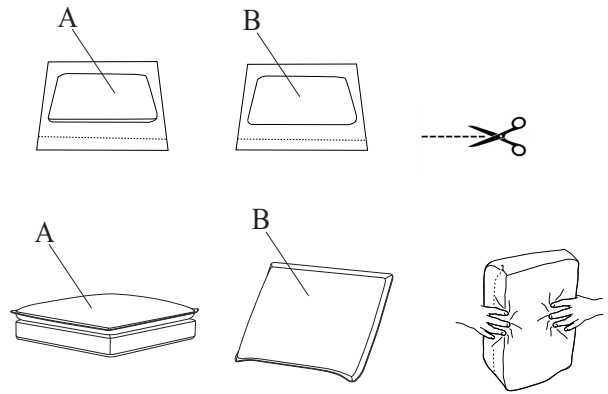


Pat to make it fluffy and assist with regaining its original shape.


7

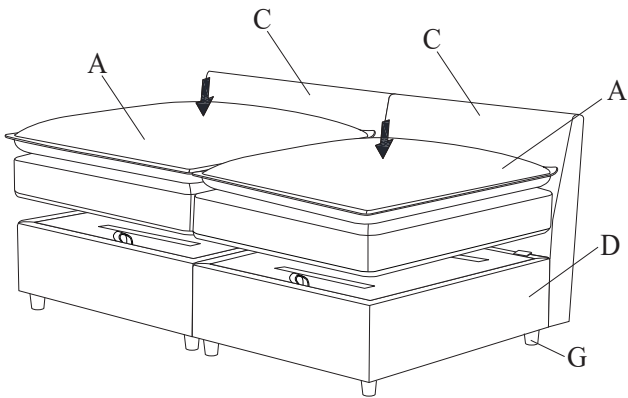

8

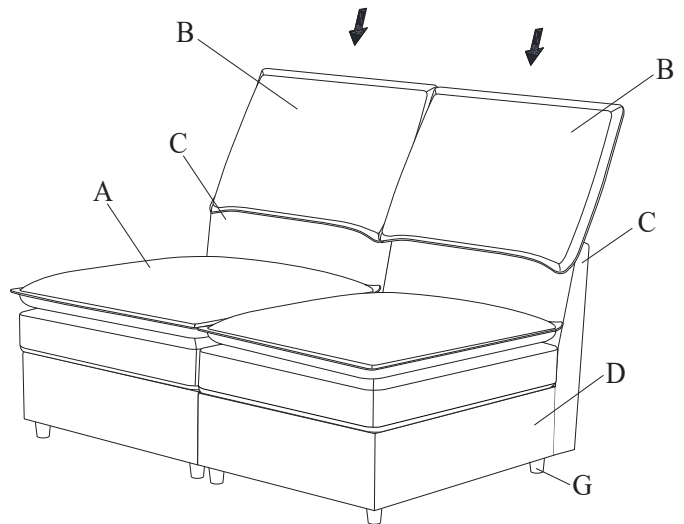


9

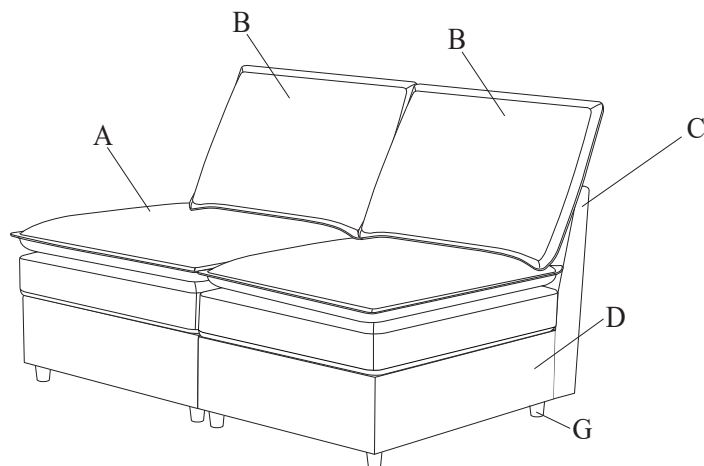



## ARM CHAIR ASSEMBLY INSTRUCTION (TOTAL 1 BOX)

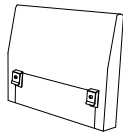

A x 1 pc



B x 1 pc



C x 1 pc



D x 2 pcs (M6x20mm)



E x 2 pcs (M6x12mm)





F x 1 pc(S4)


Please read over the instructions, it will be a time-saver in the long run.

Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

Please leave bolts loosened until all bolts are placed before tightening completely.

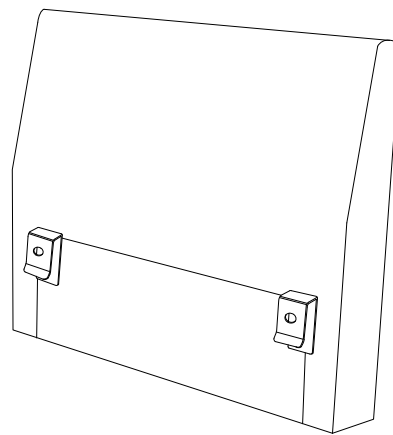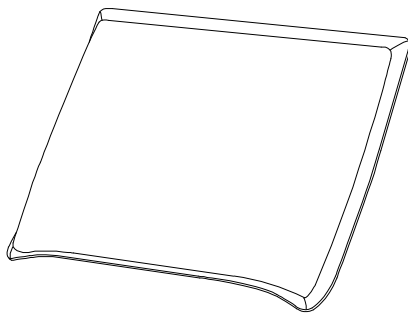

1

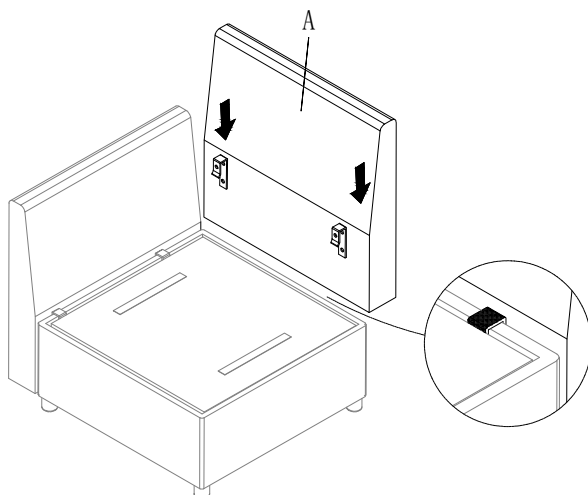

2

