


# ASSEMBLY INSTRUCTIONS


## 81231-MBW-2P-MY

Please leave bolts loosened until all bolts are placed before tightening completely


Step 1

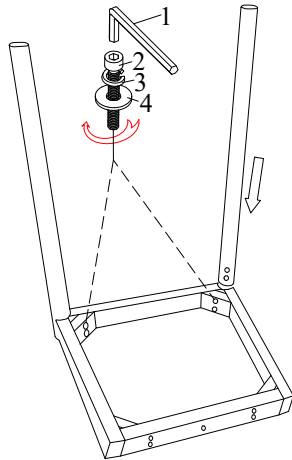


Step 2

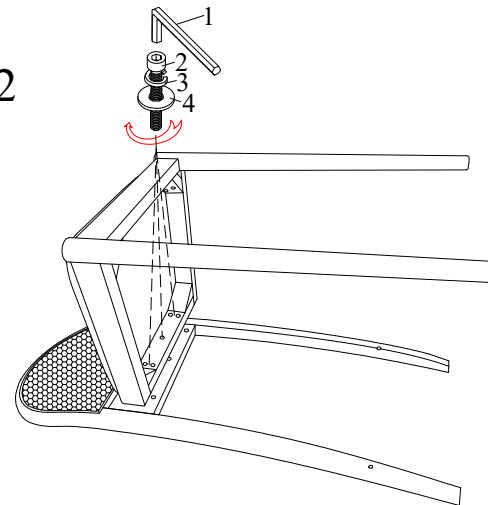


Step 3

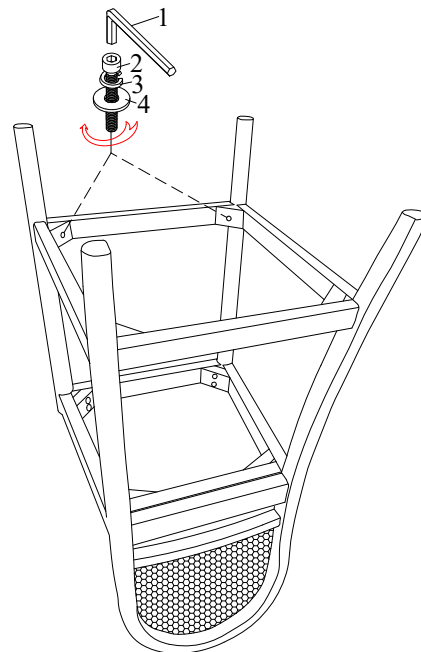

Finish

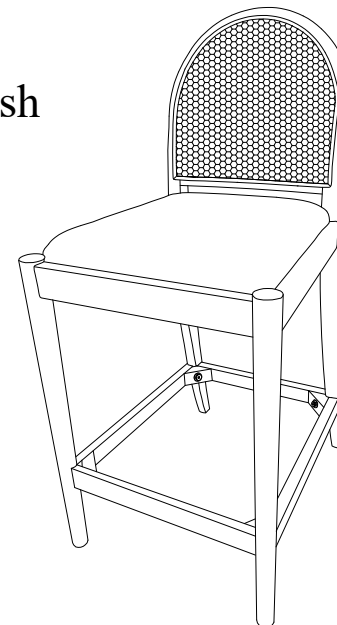

### Hardware

1		"L" Wrench	1pc
2		British Bolt 5/16"x2"	13pcs
3		Spring Washer	13pcs
4		Flat Washer	13pcs