


ASSEMBLY INSTRUCTIONS

81240-MBB-3P-MY

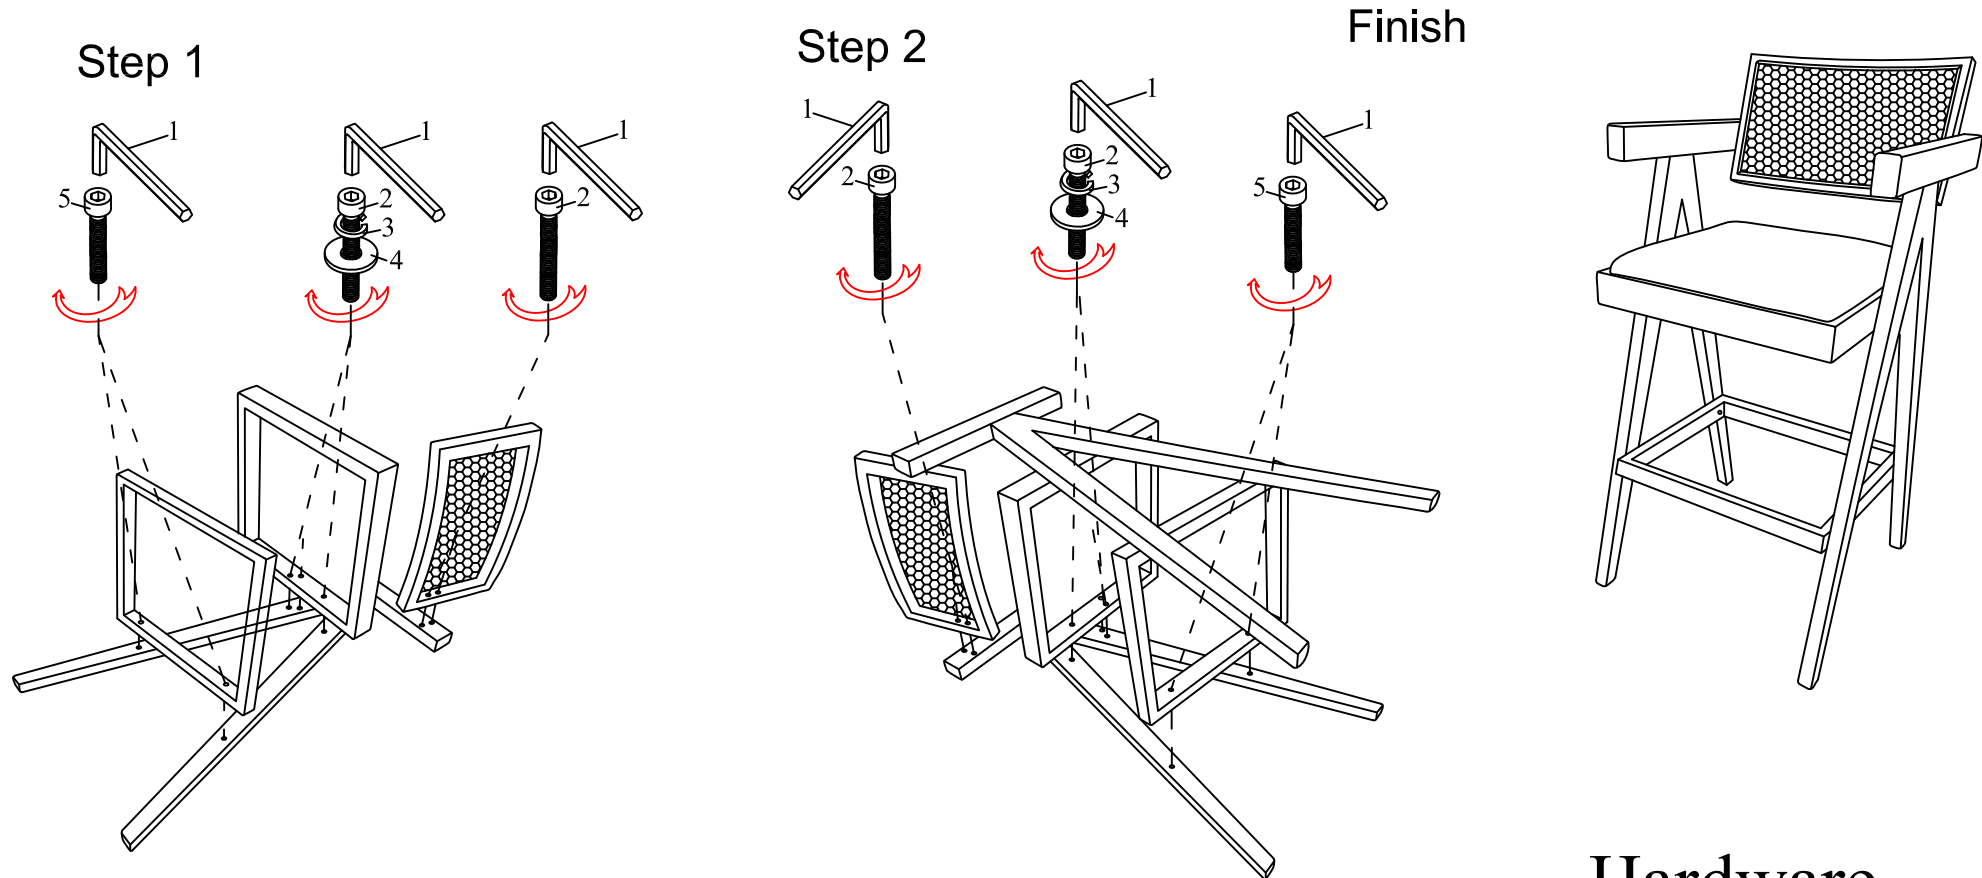

Put all screws in loosely at first
Do not tighten screws&bolts until the
entire item is completely assembled

Hardware

1		"L" Wrench	1pc
2		British Bolt 8*50mm	10pcs
3		Spring Washer	6pcs
4		Flat Washer Ø22	6pcs
5		British Bolt 8*40mm	4pcs