



# ASSEMBLY INSTRUCTIONS

## 85800-MBC

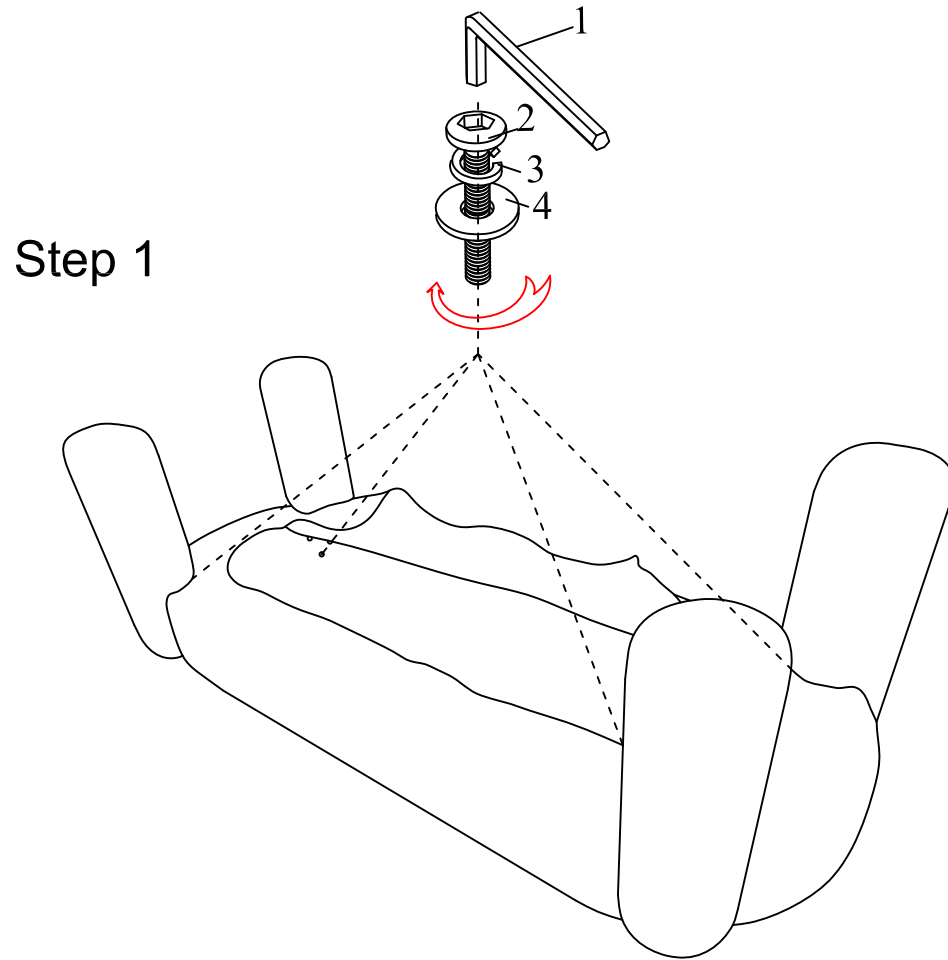

Finish

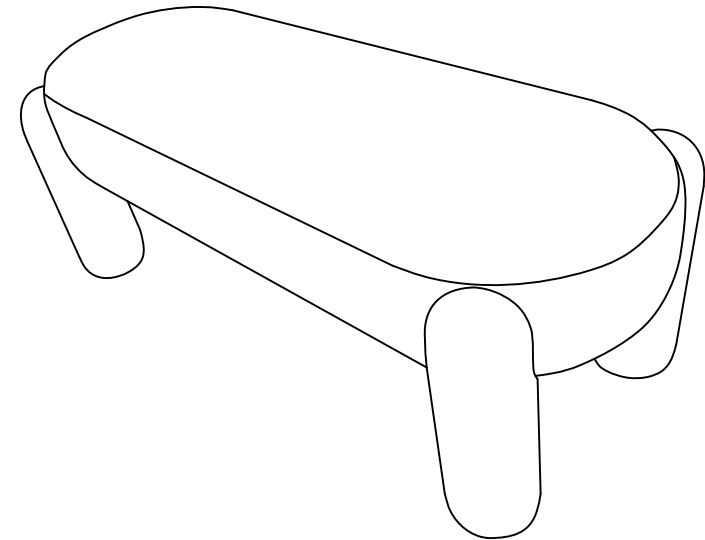

Please leave bolts loosened until all bolts are placed before tightening completely

### Hardware

1		"L" Wrench	1pc
2		Bolt 8*50mm	12pcs
3		Spring Washer	12pcs
4		Flat Washer	12pcs