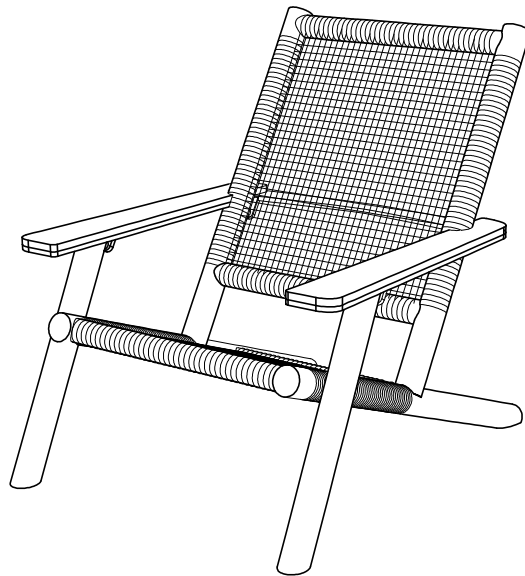


ASSEMBLY INSTRUCTION



1. Check Part Completeness

Before assembly, verify all parts against the included Hardware List.

Important: If any part is missing or damaged, do not proceed. Contact Customer Support immediately.

2. Prepare the Assembly Area

Assemble the product on a soft, flat surface (e.g., carpet, thick towel) to avoid scratching the finish.

3. Screw Installation Guidelines

Step 1: Insert all screws into their designated positions loosely (do not tighten fully).

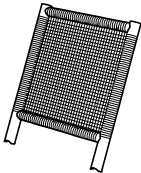
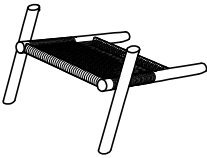
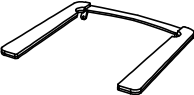







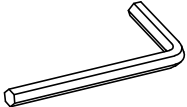
Step 2: Once all screws are in place, tighten them gradually in a diagonal sequence (e.g., top-left → bottom-right → top-right → bottom-left) to ensure even pressure distribution.

Caution: Apply moderate force—over-tightening may strip screws or damage parts.

4. Post-Assembly Steps

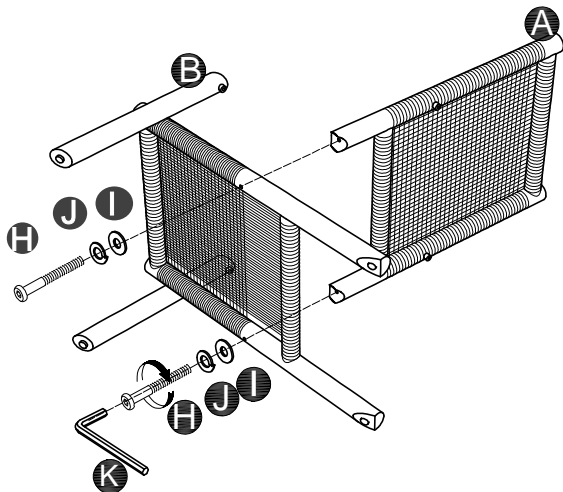
Keep all packaging materials until assembly is fully completed and verified.

After assembly, check the product's stability and confirm all connections are secure.

<div><div>A</div><div>x1</div></div> <div></div> <div>PPER FRAME</div>	<div><div>B</div><div>x1</div></div> <div></div> <div>BASE FRAME</div>	<div><div>C</div><div>x1</div></div> <div></div> <div>ARMREST</div>	<div><div>D</div><div>x2</div></div> <div></div> <div>1/4" *25mm Screw</div>	<div><div>E</div><div>x2</div></div> <div></div> <div>1/4" *40mm Screw</div>	
<div><div>F</div><div>x4</div></div> <div></div> <div>M6*16*1.0 Washer</div>	<div><div>G</div><div>x6</div></div> <div></div> <div>D16*D8.5*H4 RUBBER WASHER</div>	<div><div>H</div><div>x2</div></div> <div></div> <div>M8*100mm Screw</div>	<div><div>I</div><div>x2</div></div> <div></div> <div>M8*16*1.0 Washer</div>	<div><div>J</div><div>x2</div></div> <div></div> <div>M8 SPRING WASHER</div>	<div><div>K</div><div>x1</div></div> <div></div> <div>4# ALLEN KEY</div>

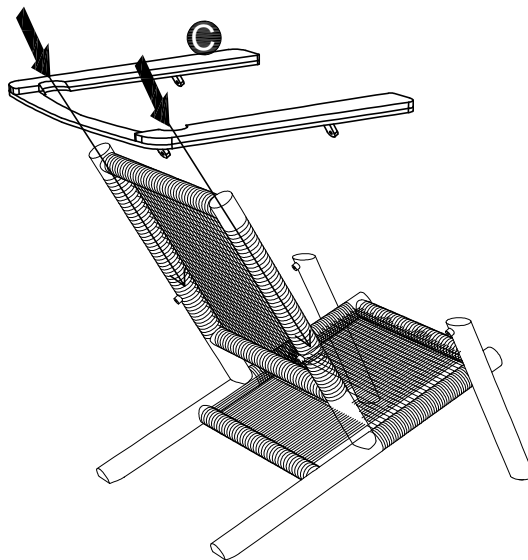
Step 1

Attach back panel(A) to seat panel(B), make sure to align the holes, using screws(H), spring washer (J) and washer(I) in sequence, then fully tighten the screws with allen key(K) only when all screws are in place!



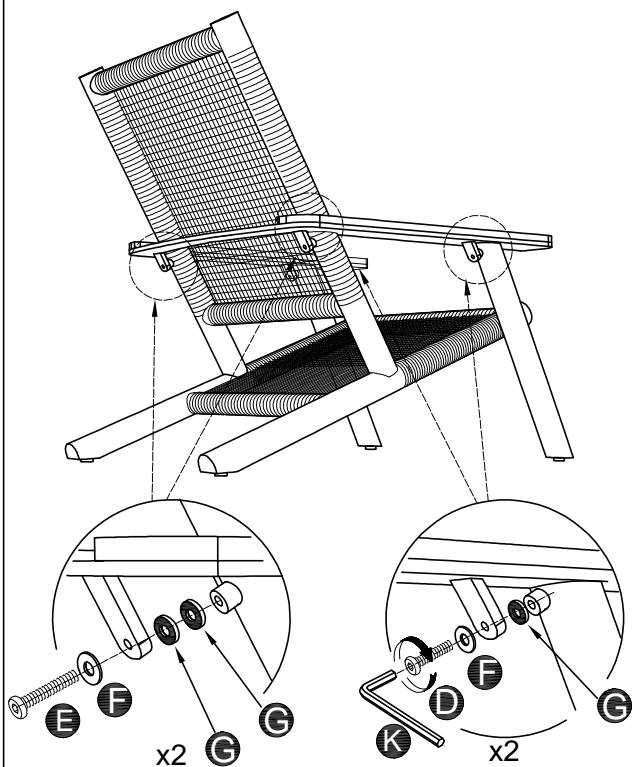
Step 2

Through the back, and put the armrest(C) down flat on the front leg.



Step 3

Attach the armrest to the assembled seat frame, make sure to align the holes of front & back, using screw(D or E), washer(F) and rubber washer(G) in sequence, fully tighten the screws with allen key(K) when all the screws are in place.



NOTICE:
1. THERE ARE 1 RUBBER WASHER(G) USING FOR THE FRONT, AND 2 RUBBER WASHERS(G) USING FOR THE BACK.
2. DIFFERENCE BETWEEN SCREW(E) AND SCREW(F).

Finish

